

RackPower Basic PDU: Quick Start Installation Guide English

For more information on RackPower products, complete installation and warranty information, please refer the RackPower Series User Guide or visit https://schroff.nvent.com/en-de/solutions/schroff/applications/iPDU

Unpacking the RackPower PDU

Open the RackPower PDU and make sure that nothing is missing or damaged. If you have questions regarding the product, go to https://schroff.nvent.com/en-us/solutions/schroff/applications/sales-and-distributor-locations to contact nVent. The following is included:

- RackPower Series PDU
- Quick Start Guide
- Safety Information Sheet

Before You Begin

- Prepare the installation site: make sure it is not exposed to extreme temperature or humidity. Allow space around the RackPower PDU for cabling and outlet connections. Refer the RackPower Series User Manual for a full installation, operating and safety instructions.
- 2. Register your product online at https://schroff.nvent.com/en-de/solutions/schroff/applications/iPDU

Individual SKUs vary.

Mounting the PDU

Mounting the PDU in the Server Cabinet without Mounting Brackets

The RackPower Series PDU comes with mounting pegs for ease and convenience.

- 1. Determine where the RackPower PDU will be mounted inside the server rack.
- 2. Insert the PDU mounting pegs into the mounting holes of the server cabinet.

 Note: The distance between mounting pegs varies depending on PDU models. Full Length
 PDU is 1555mm, mid length is 1244mm and half length is 622mm.
- 3. Insert the mounting pegs into the rack mounting holes.
- 4. Pull the power cord through the rack and proceed to connecting a power source.

Mounting the PDU in the Server Cabinet with Mounting Brackets

- 1. Determine where the RackPower PDU will be mounted inside the server cabinet. Hang the mounting brackets in the server cabinet using the mounting bracket hooks.
- 2. Attach the enclosed mounting brackets to the server cabinet using the screws provided.
- 3. Insert the mounting pegs into the mounting brackets.
- 4. Pull the power cord through the cabinet and proceed to connecting a power source.

Connecting to a Power Source

When connecting the RackPower PDU to a power source, make sure that there is enough cord length to reach the PDU power source.

- 1. Turn the feed circuit breaker off. Make sure the PDU circuit breakers are on.
- 2. Connect the RackPower PDU device to a branch circuit with an appropriate rating. Note: Refer to the label on the PDU for acceptable input ratings.
- 3. Turn the feed circuit breaker on.
- 4. The unit is now ready to supply power to any connected plug.

LT00135-E1