

## Relay Rack Angle

### INSTALLATION INSTRUCTIONS:

1. Place clamping nuts in mounting channels as shown.
2. Place spacer over each clamping nut.
3. Position relay rack angle over spacers and secure in place with screws, lockwashers, and washers.

