


# OPERATOR ADAPTER APCGETDA

Installation Instructions for General Electric Types STDA (Variable Depth) and Flexible Cable Operating Mechanisms (For parts list, see page 2)

For floor-mounted enclosures with disconnect on the right flange, see pages 3-6 (flexible cable mechanism, see pages 15-19)



For one- through six-door free-standing enclosures with the disconnect on the right flange, see pages 7-10 (flexible cable mechanism, see pages 15-19)

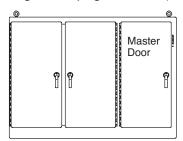



For floor-mounted enclosures with the disconnect on the centerpost, see pages 11–14 (flexible cable mechanism, see pages 15–19)



 Rev. E
 © 2018 Hoffman Enclosures Inc.
 PH7634222211 • nVent.com/H0FFMAN
 P/N 87415740
 87569290

# WARNING

The functions, fits, and clearances of the installation described hereon are calculated from information supplied by the manufactures of the equipment to be installed. Be certain to check the function, fits, and clearances of all equipment both before and after installation to assure that is operates properly and safely and meets all applicable codes, standards, and regulations.

In the event the completed installation does not function properly or fails to meet any such codes, standards, or regulations, <u>do not attempt to make alterations or operate the equipment</u>. Report such facts immediately to:

Hoffman Customer Service 2100 Hoffman Way Anoka, MN 55303 763 422 2211 http://hoffman.nvent.com/contact-us


#### **PARTS LIST**

### Operator Adapter, Catalog Number A21GETDA, for General Electric Disconnects

<u>Item No </u>	Part Name	<u>. Part No.                        </u>	<u>.Quantity</u>
1	Plate, Mounting	. 87400020	.1
2	Slide Arm	. 26250001	.1
3	Shoulder Collar	. 26149001	.1
4	Screw, 1/4-20x7/8 Hex Head	. 99401030	.1
5	Lockwasher, 1/4 Spring	. 99401318	.1
6	Washer, Flat	. 22101003	.2
7	Lockwasher, 1/4 Int	. 99401300	.2
8	Nut, 1/4-20 Hex	. 99401406	.2
9	Door Catch	. 23101002	.1
10	Screw, 10-32x3/8 Pan Head	. 99401007	.2
11	Lockwasher, #10 Int	. 99401307	.2
12	Label, (extra)	. 26147001	.1
13	Installation Instruction	. 87415740	.1

- 2 - © 2018 Hoffman Enclosures Inc. PH 763 422 2211 • nVent.com/HOFFMAN 87569290


This installation instruction is for General Electric (variable depth) mechanisms. These mechanisms are for disconnect switches and circuit breakers mounted in Hoffman two-door, floor-mounted, enclosures with the disconnect on the right flange.

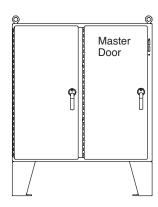

#### INSTALLATION STEPS


- Step 1 Position mounting plate (item 1) on the inside of the enclosure, behind the opening provided in enclosure flange.
- **Step 2** Assemble the G.E. STDA operating handle through the opening in the enclosure and through the mounting plate. Omit cap screw and lockwasher which fits into bottom hole of G.E. operating handle. Also omit G.E. stiffening bracket which is not required.
- **Step 3 –** Install the slide arm (item 2) over the interlock part of the G.E. operating handle as shown. Place the smaller diameter end of the shoulder collar (item 3) through the oval slot in the slide arm. Install long cap screw (item 4) with lockwasher (item 5) through shoulder collar into the bottom mounting hole of the G.E. operating handle and tighten. The slide arm should move up and down smoothly. Install G.E. interlock blade per G.E. instructions.
- **Step 4 –** Attach the bottom of the slide arm (item 2) to the offset arm of the lock release mechanism. Use two flat washers (item 6), two lockwashers (item 7), and two hex nuts (item 8). Do not tighten until parts are adjusted (see Step 5 (B))
- **Step 5 -** The handle safety lock release mechanism is adjustable in two places.
  - (A) Check the adjustment of the factory installed roller bracket. The door latch should hit against the latch stop portion of the roller bracket when the door is closed and latched. Adjust up or down if necessary. The attached mechanism will then provide the necessary up-down motion required to operate the release mechanism in the G.E. operating handle.
  - (B) Adjust the length of the slide arm assembly. With proper adjustment of the slide arm, the safety lock (in G.E. operating handle) should release just before the master door is fully latched. Lengthen slide arm if safety lock releases too soon. Shorten slide arm if safety lock releases too late.
- **Step 6** Attach the door catch (item 9) provided by Hoffman to the tapped spacer on the door using the bottom set of mounting holes. Use two screws (item 10) and lockwashers (item 11). The door catch prevents the door from being opened when the G.E. operating handle is in the "ON" position. The door catch may be adjusted up or down to hook properly on the interlock blade. The door catch (item 9) must be positioned so it just clears the top of the interlock blade when the G.E. operating handle is in extreme "OFF" position.
- **Step 7 –** Drill and tap holes in panel as shown in the diagram and table 1. See General Electric instructions for locating holes for fuse blocks for 200 AMP. switches.
- Step 8 Install panel in enclosure.
- **Step 9 -** Mount disconnect switch or circuit breaker and operating mechanism on panel using General Electric instructions and parts. See table 2 for enclosure "D" dimension. Attach G.E. handle return spring between drive link on G.E. operating handle and hole provided in Hoffman adapter plate as shown.

87569290 © 2018 Hoffman Enclosures Inc. PH 763 422 2211 • nVent.com/HOFFMAN - 3 -

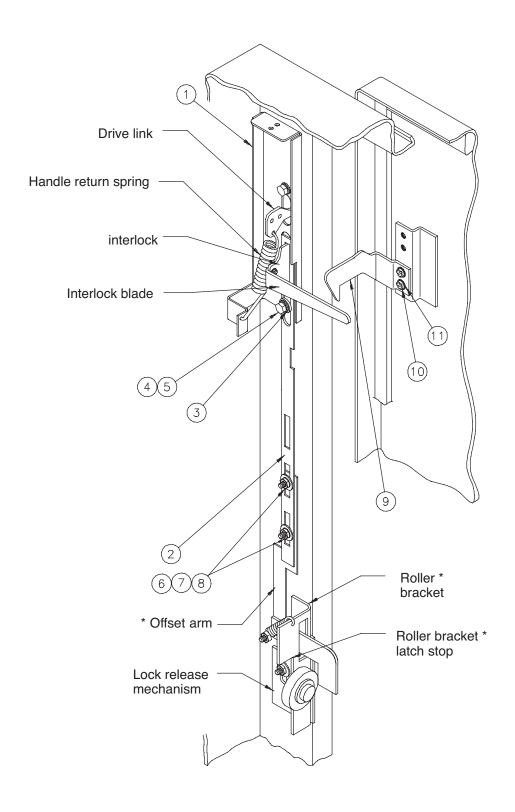

\* Parts of lock release mechanism

- 4 - © 2018 Hoffman Enclosures Inc. PH 763 422 2211 • nVent.com/HOFFMAN 87569290

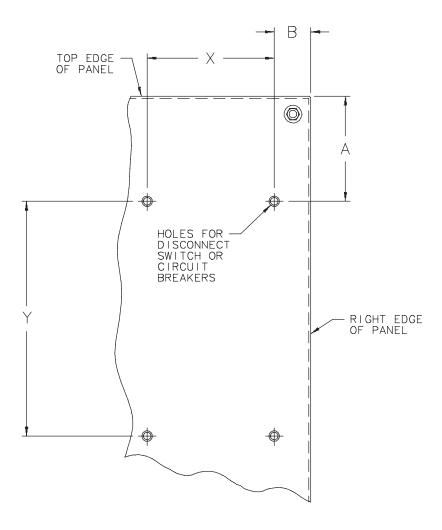

87569290 © 2018 Hoffman Enclosures Inc. PH 763 422 2211 • nVent.com/HOFFMAN

- 5 -

# For Two-Door, Floor-Mounted Enclosure With Disconnect on Right Flange


TABLE 1 Sub-panel Drilling								
G.E. OPERATING	G.E. DISCONNECT	No. of	Hole Size	Enclosur 60.12	e Height 72.12	В	Х	Υ
MECHANISM	TTYPE	Holes		Α	Α			_
TDOM1A	QMR-QMW	4	1/4-20	4.19	10.19	.88	3.00	6.75
TDOM1JA	QMR-QMW	4	1/4-20	4.19	10.19	.88	3.00	6.75
TDOM1B	QMR-QMW	4	1/4-20	4.19	10.19	.88	3.00	6.75
TDOM1JB	QMR-QMW	4	1/4-20	4.19	10.19	.88	3.00	6.75
TDOM2	QMR-QMW	4	1/4-20	4.19	10.19	.81	7.00	7.25
SDOM1A	SE150	4	1/4-20	4.19	10.19	.88	3.00	6.75
SDOM3	SF250	4	1/4-20	4.59	10.59	1.81	2.75	10.88
SDOM4	SG600	6	1/4-20		8.59	1.47	3.35	5.51 and 12.20
SDOM1A	TEB, TED	4	1/4-20	4.19	10.19	.88	3.00	6.75
SDOM1A SDOM1AP	TB1 TEC, TECL	4	1/4-20	4.19	10.19	.88	3.00	6.75
TDOM3	TFJ, TFK	4	1/4-20	4.19	10.19	.81	2.75	10.88
TDOM4	J FRAME	4	1/4-20		9.56	1.75	5.50	8.63
TDOM5	TB4, TJH	4	1/4-20		9.56	1.75	5.50	14.63
TDOM6	K FRAME	4	1/4-20		5.81	1.75	5.50	16.75

TABLE 2							
Heffman Dissemnest Fuelesure Description	Enclosure Depth	G.E. <sub>(1)</sub>					
Hoffman Disconnect Enclosure Description	С	"D"					
	12.13	10.91					
Two-Door, Floor-Mounted Disconnect on Right Flange	18.13	16.91					
	24.13	22.91 (2)					

<sup>1)</sup> This dimension is used to determine the length to cut off General Electric drive rod and stiffener rod (if used). See G.E. instructions.
2) This dimension is greater than the depth range of standard G.E. drive rod and stiffener rod. A six inch high platform is provided with this enclosure to reduce depth for disconnect mounting. The platform can be eliminated if G.E. type TDSR extended length drive rod and stiffener rod is used. Some devices require two rods.

- 6 - © 2018 Hoffman Enclosures Inc. PH 763 422 2211 • nVent.com/H0FFMAN 87569290


This installation instruction is for General Electric (variable depth) mechanisms. These mechanisms are for disconnect switches and circuit breakers mounted in Hoffman one– through three–door, free–standing enclosures with the disconnect on the right flange.

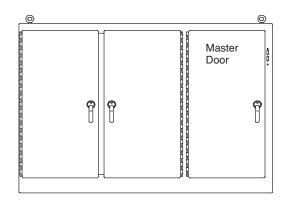

#### **INSTALLATION STEPS**


- Step 1 Position mounting plate (item 1) on the inside of the enclosure, behind the opening provided in the enclosure flange.
- **Step 2 –** Assemble the G.E. STDA operating handle through the opening in the enclosure and through the mounting plate. Omit cap screw and lockwasher which fits into bottom hole of G.E. operating handle. Also omit G.E. stiffening bracket which is not required.
- **Step 3** Install the slide arm (item 2) over the interlock part of the G.E. operating handle as shown. Place the smaller diameter end of the shoulder collar (item 3) through the oval slot in the slide arm. Install long cap screw (item 4) with lockwasher (item 5) through shoulder collar into the bottom mounting hole of the G.E. operating handle and tighten. The slide arm should move up and down smoothly. Install G.E. interlock blade per G.E. instructions.
- **Step 4 –** Attach the bottom of the slide arm (item 2) to the offset arm of the lock release mechanism. Use two flat washers (item 6), two lockwashers (item 7), and two hex nuts (item 8). Do not tighten until parts are adjusted (see Step 5 (B))
- **Step 5 -** The handle safety lock release mechanism is adjustable in two places.
  - (A) Check the adjustment of the factory installed roller bracket. The door latch should hit against the latch stop portion of the roller bracket when the door is closed and latched. Adjust up or down if necessary. The attached mechanism will then provide the necessary up-down motion required to operate the release mechanism in the G.E. operating handle.
  - (B) Adjust the length of the slide arm assembly. With proper adjustment of the slide arm, the safety lock (in G.E. operating handle) should release just before the master door is fully latched. Lengthen slide arm if safety lock releases too soon. Shorten slide arm if safety lock releases too late.
- **Step 6** Attach the door catch (item 6) provided by Hoffman to the tapped spacer on the door using the bottom set of mounting holes. Use two screws (item 10) and lockwashers (item 11). The door catch prevents the door from being opened when the G.E. operating handle is in the "ON" position. The door catch may be adjusted up or down to hook properly on the interlock blade. The door catch (item 9) must be positioned so it just clears the top of the interlock blade when the G.E. operating handle is in extreme "OFF" position.
- **Step 7 –** Drill and tap holes in panel as shown in the diagram and table 1. See General Electric instructions for locating holes for fuse blocks for 200 AMP. switches.
- Step 8 Install panel in enclosure.
- **Step 9 -** Mount disconnect switch or circuit breaker and operating mechanism on panel using General Electric instructions and parts. See table 2 for enclosure "D" dimension. Install and adjust G.E. drive rod per G.E. instructions. Attach G.E. handle return spring between drive link on G.E. operating handle and hole provided in Hoffman adapter plate as shown.

87569290 © 2018 Hoffman Enclosures Inc. PH 763 422 2211 • nVent.com/HOFFMAN -7-

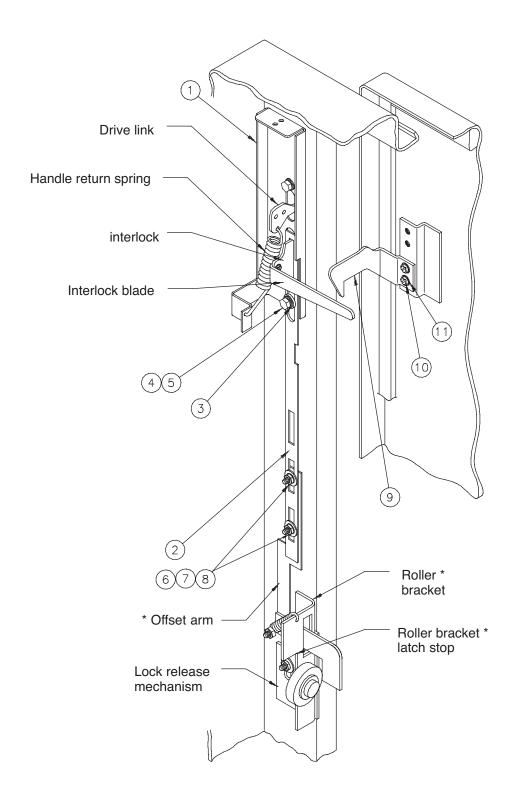

\* Parts of lock release mechanism

- 8 - © 2018 Hoffman Enclosures Inc. PH 763 422 2211 • nVent.com/HOFFMAN 87569290

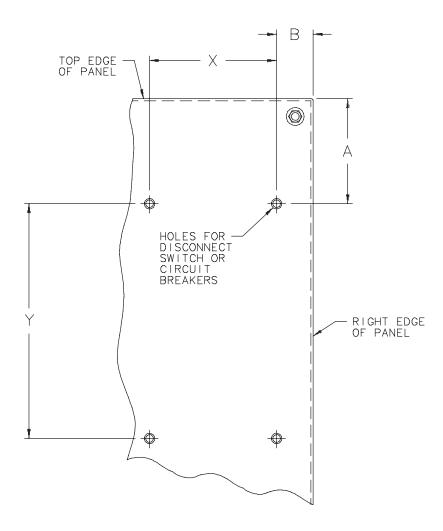

87569290 © 2018 Hoffman Enclosures Inc. PH 763 422 2211 • nVent.com/HOFFMAN

- 9 -

# For One-, Two-, and Three-Door, Free-Standing Enclosure With Disconnect on Right Flange


TABLE 1 Sub-panel Drilling											
G.E. OPERATING	G.E. DISCONNECT	No. of Holes	Hole Size		End	closure He	ight		В	x	х
MECHANISM	TYPE	noies	Size	62.81	72.12	74.81	84.12	90.12			
G.E. OPERATING MECHANISM	G.E. DISCONNECT TYPE	No. of Holes	Hole Size	A	A	A	Α	A	В	x	Y
TDOM1A	QMR-QMW	4	1/4-20	4.64	6.19	10.64	12.19	15.19	.88	3.00	6.75
TDOM1JA	QMR-QMW	4	1/4-20		6.19	10.64	12.19	15.19	.88	3.00	6.75
TDOM1B	QMR-QMW	4	1/4-20	4.64	6.19	10.64	12.19	15.19	.88	3.00	6.75
TDOM1JB	QMR-QMW	4	1/4-20	4.64	6.19	10.64	12.19	15.19	.88	3.00	6.75
TDOM2	QMR-QMW	4	1/4-20	4.64	6.19	10.64	12.19	15.19	.81	7.00	7.25
SDOM1A	SE150	4	1/4-20	4.64	6.19	10.64	12.19	15.19	.88	3.00	6.75
SDOM3	SF250	4	1/4-20	5.04	6.59	11.04	12.59	15.59	1.81	2.75	10.88
SDOM4	SG600	6	1/4-20	3.04	4.59	9.04	10.59	13.59	1.47	3.35	5.51 and 12.20
SDOM1A	TEB, TED	4	1/4-20	4.64	6.19	10.64	12.19	15.19	.88	3.00	6.75
SDOM1A & SDOM1AP	TB1 TEC, TECL	4	1/4-20	4.64	6.19	10.64	12.19	15.19	.88	3.00	6.75
TDOM3	TFJ, TFK	4	1/4-20	4.64	6.19	10.64	12.19	15.19	.81	2.75	10.88
TDOM4	J FRAME	4	1/4-20	4.01	5.56	10.01	11.56	14.56	1.75	5.50	8.63
TDOM5	TB4, TJH	4	1/4-20	4.01	5.56	10.01	11.56	14.56	1.75	5.50	14.63
TDOM6	K FRAME	4	1/4-20	N/A		N/A	7.81	10.81	1.75	5.50	16.75
TDOM7	TB6, TB8	6	1/4-20	N/A		N/A	7.81	10.81	1.75	5.50	16.75 and 23.12

TABLE 2							
Haffman Diaconnest Englacure Decariation	Enclosure Depth	G.E. <sub>(1)</sub>					
Hoffman Disconnect Enclosure Description	С	"D"					
	18.13	16.91					
One- and Two-Door, Floor-Mounted Disconnect on Right Flange	20.13	18.91					
	24.13	22.91 (2)					
One- Through Six-Door, Free-Standing	18.13	15.91					
Disconnect on Right Flange	24.13	21.91 (2)					
	12.12	10.90					
Two-Door, Free-Standing Disconnect on Right Flange	18.12	16.90					
	24.12	22.90 (2)					

<sup>1)</sup> This dimension is used to determine the length to cut off General Electric drive rod and stiffener rod (if used). See G.E. instructions.
2) This dimension is greater than the depth range of standard G.E. drive rod and stiffener rod. A six inch high platform is provided with this enclosure to reduce depth for disconnect mounting. The platform can be eliminated if G.E. type TDSR extended length drive rod and stiffener rod is used. Some devices require two rods.

- 10 - © 2018 Hoffman Enclosures Inc. PH 763 422 2211 • nVent.com/HOFFMAN 87569290


This installation instruction is for General Electric (variable depth) mechanisms. These mechanisms are for disconnect switches and circuit breakers mounted in Hoffman two-door, floor-mounted enclosures with the disconnect on the centerpost.

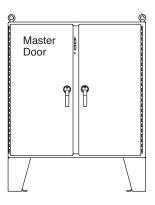


#### INSTALLATION STEPS

- Step 1 Position mounting plate (item 1) on the inside of the enclosure, behind the opening provided in the centerpost.
- **Step 2 –** Assemble the G.E. type STDA operating handle through the opening in the centerpost and through the mounting plate. Omit cap screw and lockwasher which fits into bottom hole of G.E. operating handle. Also omit G.E. stiffening bracket which is not required.
- Step 3 Cut 2 1/2 inches off bottom end of slide arm (item 4). (bottom end of slide arm has rectangular holes only)
- **Step 4** Install the slide arm (item 2) over the interlock part of the G.E. operating handle as shown. Place the smaller diameter end of the shoulder collar (item 3) through the oval slot in the slide arm. Install long cap screw (item 4) with lockwasher (item 5) through shoulder collar into the bottom mounting hole of the G.E. operating handle and tighten. The slide arm should move up and down smoothly. Install G.E. interlock blade per G.E. instructions.
- **Step 5 –** Attach the bottom of the slide arm (item 2) to the offset arm as shown. Use two flat washers (item 6), two lockwashers (item 7), and two hex nuts (item 8). Do not tighten until parts are adjusted.
- **Step 6 -** Adjust the length of the slide arm assembly. With proper adjustment of the slide arm, the safety lock (in G.E. operating handle) should release just before the master door is fully latched. Lengthen slide arm if safety lock releases too soon. Shorten slide arm if safety lock releases too late.
- **Step 7 –** Attach the door catch (item 9) provided by Hoffman to the tapped space on the door using the bottom set of mounting holes. Use two screws (item 10) and two lockwashers (item 11). The door catch prevents the door from being opened when the G.E. operating handle is in the "ON" position. The door catch may be adjusted up or down to hook properly on the interlock blade. The door catch (item 9) must be positioned so it just clears the top of the interlock blade when the G.E. operating handle is in extreme "OFF" position.
- **Step 8** Drill and tap holes in panel as shown in the diagram and table 1. See General Electric instructions for locating holes for fuse blocks for 200 AMP. switches.
- Step 9 Install panel on collar studs in enclosure.
- **Step 10 -** Mount disconnect switch or circuit breaker and operating mechanism on panel using General Electric instructions and parts. See table 2 for enclosure "D" dimension. Install and adjust G.E. drive rod per G.E. instructions. Attach G.E. handle return spring between drive link on G.E. operating handle and hole provided in Hoffman adapter plate as shown.
- \* NOTE: An optional General Electric flange stiffener kit (catalog number TDSR) is recommended when General Electric type STDA devices are installed in 72.12 inch high enclosures with operating handle mounted on centerpost. Use with TDOM1,2,3 operating mechanisms.

87569290 © 2018 Hoffman Enclosures Inc. PH 763 422 2211 • nVent.com/HOFFMAN - 11 -

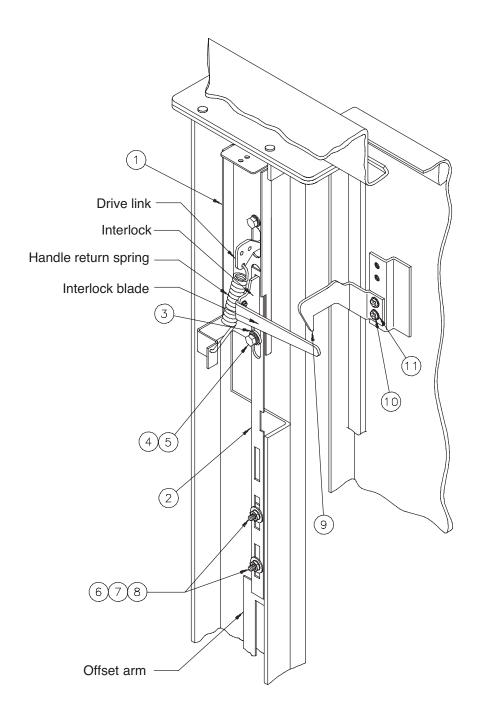

- 12 - © 2018 Hoffman Enclosures Inc. PH 763 422 2211 • nVent.com/HOFFMAN 87569290

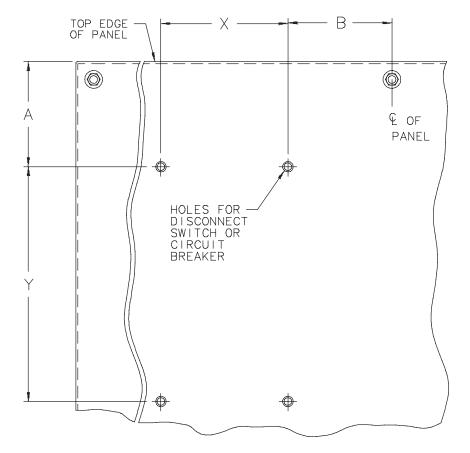

87569290 © 2018 Hoffman Enclosures Inc. PH 763 422 2211 • nVent.com/HOFFMAN -13 -

# For Two-Door, Floor-Mounted Enclosure With Disconnect on Centerpost

TABLE 1 Sub-panel Drilling								
G.E. OPERATING	G.E. DISCONNECT	No. of	Hole	Enclosui 60.12	re Height 72.12	В	X	Υ
MECHANISM	TYPE	Holes	Size	Α	Α	_		
TDOM1A	QMR-QMW	4	1/4-20	4.19	10.19	2.06	3.00	6.75
TDOM1JA	QMR-QMW	4	1/4-20	4.19	10.19	2.06	3.00	6.75
TDOM1B	QMR-QMW	4	1/4-20	4.19	10.19	2.06	3.00	6.75
TDOM1JB	QMR-QMW	4	1/4-20	4.19	10.19	2.06	3.00	6.75
TDOM2	QMR-QMW	4	1/4-20	4.19	10.19	2.00	7.00	7.25
SDOM1A	SE150	4	1/4-20	4.19	10.19	2.06	3.00	6.75
SDOM3	SF250	4	1/4-20	4.59	10.59	3.00	2.75	10.88
SDOM4	SG600	6	1/4-20		8.59	2.66	3.35	5.51 and 12.20
SDOM1A	TEB, TED	4	1/4-20	4.19	10.19	2.06	3.00	6.75
SDOM1A & SDOM1AP	TB1 TEC, TECL	4	1/4-20	4.19	10.19	2.06	3.00	6.75
TDOM3	TFJ, TFK	4	1/4-20	4.19	10.19	2.00	2.75	10.88
TDOM4	J FRAME	4	1/4-20		9.56	2.94	5.50	8.63
TDOM5	TB4, TJH	4	1/4-20		9.56	2.94	5.50	14.63
TDOM6	K FRAME	4	1/4-20		5.81	2.94	5.50	16.75

TABLE 2							
Hoffman Dissennest Englacure Description	Enclosure Depth	G.E. <sub>(1)</sub>					
Hoffman Disconnect Enclosure Description	С	"D"					
Two-Door, Floor-Mounted	12.13	10.91					
Disconnect on Centerpost	18.13	16.91					


<sup>1)</sup> This dimension is used to determine the length to cut off General Electric drive rod and stiffener rod (if used). See G.E. instructions.
2) This dimension is greater than the depth range of standard G.E. drive rod and stiffener rod. A six inch high platform is provided with this enclosure to reduce depth for disconnect mounting. The platform can be eliminated if G.E. type TDSR extended length drive rod and stiffener rod is used. Some devices require two rods.

- 14 - © 2018 Hoffman Enclosures Inc. PH 763 422 2211 • nVent.com/H0FFMAN 87569290

This installation instruction is for General Electric SCH cable operating mechanisms. These mechanisms are for circuit breakers mounted in Hoffman disconnect enclosures.





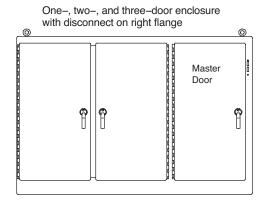


## INSTALLATION STEPS

- Step 1 Discard Hoffman mounting plate (item 1) which is not required for this cable installation.
- **Step 2 –** Assemble the General Electric SCH operating handle and cable adapter on the enclosure flange. Omit cap screw and lockwasher which fits into bottom hole of G.E. operating handle.
- **Step 3 –** Install the slide arm (item 2) over the interlock part of the G.E. operating handle as shown. Place the smaller diameter end of the shoulder collar (item 3) through the oval slot in the slide arm. Install long cap screw (item 4) with lockwasher (item 5) through shoulder collar into the bottom mounting hole of the G.E. operating handle and tighten. The slide arm should move up and down smoothly. Install G.E. interlock blade per G.E. instructions.
- **Step 4 –** Attach the bottom of the slide arm (item 2) to the offset arm of the lock release mechanism. Use two flat washer (item 6), two lockwashers (item 7), and two hex nuts (item 8). Do not tighten until parts are adjusted (see Step 5 (B)).
- **Step 5 -** The handle safety lock release mechanism is adjustable.
  - (A) Check the adjustment of the factory installed roller bracket on enclosures with disconnect on right flange. The door latch should hit against the latch stop portion of the roller bracket when the door is closed and latched. Adjust up or down if necessary. The attached mechanism will then provide the necessary up-down motion required to operate the release mechanism.
  - (B) Adjust the length of the slide arm assembly. With proper adjustment of the slide arm, the safety lock (on G.E. handle operator) should release just before the master door is fully latched. Lengthen slide arm if safety lock releases too soon. Shorten slide arm if safety lock releases too late.
- **Step 6** Attach the door catch (item 9), provided by Hoffman, to the tapped spacer on the door using the bottom set of mounting holes. Use two screws (item 10) and lockwashers (item 11). The door catch prevents the door from being opened when the G.E. operating handle is in the "ON" position. The door catch may be adjusted up or down to hook properly on the interlock blade. The door catch (item 9) must be positioned so it just clears the top of the interlock blade when the G.E. operating handle is in extreme "OFF" position.
- **Step 7 -** Drill and tap holes in panel as shown in diagram and table 1. See General Electric instructions for locating holes within range of cable length being used. See table 2 and diagrams for location of G.E. Operating Handle on enclosure flange or centerpost.
- Step 8 Install panel in enclosure.
- **Step 9 -** Mount circuit breaker and cable operating mechanism on panel using General Electric instructions and parts.


87569290 © 2018 Hoffman Enclosures Inc. PH 763 422 2211 • nVent.com/HOFFMAN - 15-

For Floor-mounted, Two-Door, Enclosures With Disconnect on Right Flange For Floor-mounted, Two-Door, Enclosures With Disconnect on Centerpost For One-, Two-, and Three-Door, Free-Standing Enclosures With Disconnect on Right Flange

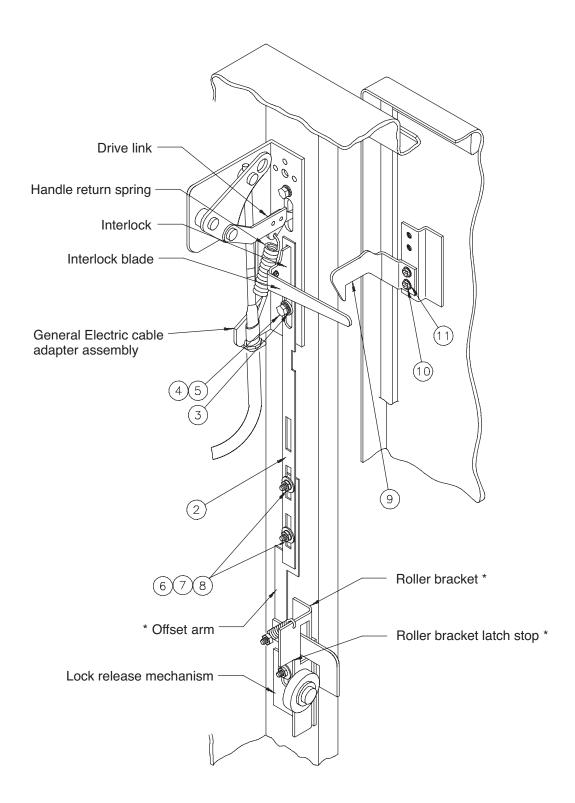


\* Parts of lock release mechanism on enclosure with disconnect on right flange

- 16 - © 2018 Hoffman Enclosures Inc. PH 763 422 2211 • nVent.com/HOFFMAN 87569290

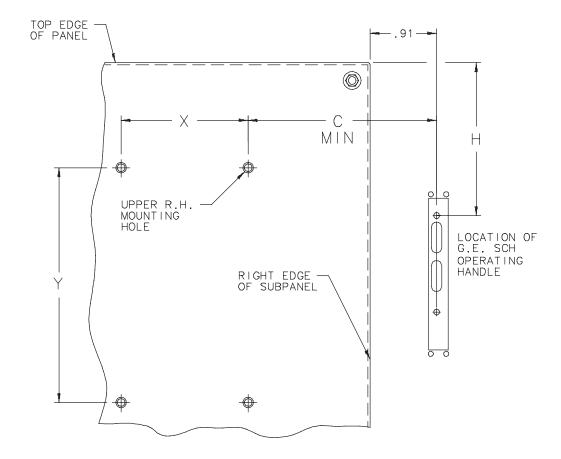

87569290 © 2018 Hoffman Enclosures Inc. PH 763 422 2211 • nVent.com/HOFFMAN -17-

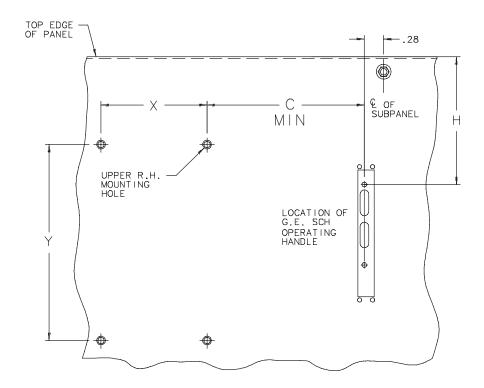

- 18 - © 2018 Hoffman Enclosures Inc. PH 763 422 2211 • nVent.com/HOFFMAN 87569290

For Floor-Mounted, Two-Door, Enclosures With Disconnect on Right Flange For Floor-Mounted, Two-Door, Enclosures With Disconnect on Centerpost For One-, Two-, and Three-Door, Enclosures With Disconnect on Right Flange

TABLE 1 Sub-panel Drilling									
CABLE MECHANISM	CIRCUIT BREAKER	No. of Holes	Hole Size	Х	Υ	C <sub>min</sub> (1)			
SCOMIA	E150	4	8-32	1.38	4.88	1.38			
SCOMIEF	SE150	4	10-32	1.38	4.88	1.38			
SCOMIEF	SF250	4	12-24	1.38	7.75	1.38			
SCOMIG	SG600	4	12-24	1.81	7.75	1.84			
SCOMIK	SK1200	4	5/16-18	2.75	14.25	2.75			

<sup>1)</sup> See General Electric instructions for range of dimensions which vary with enclosure depth and various lengths of operating cables that are available from General Electric.

TABLE 2 Location of Disconnect Operating Handle							
Hoffman Disconnect Enclosure Description	Enclosure Height A	н					
Two-Door, Floor-Mounted	60.13	5.81					
Disconnect on Right Flange	72.13	11.81					
Two-Door, Floor-Mounted	60.13	5.81					
Disconnect on Centerpost	72.13	11.81					
	72.13	7.81					
One Through Three-Door, Free-Standing Disconnect on Right Flange	84.13	13.81					
	90.13	16.81					
Two-Door, Free-Standing	62.81	6.26					
Disconnect on Right Flange	74.81	12.26					

87569290 © 2018 Hoffman Enclosures Inc. PH 763 422 2211 • nVent.com/HOFFMAN -19 -



 Rev. E
 © 2018 Hoffman Enclosures Inc.
 PH7634222211 • nVent.com/HOFFMAN
 P/N 87415740
 87569290