

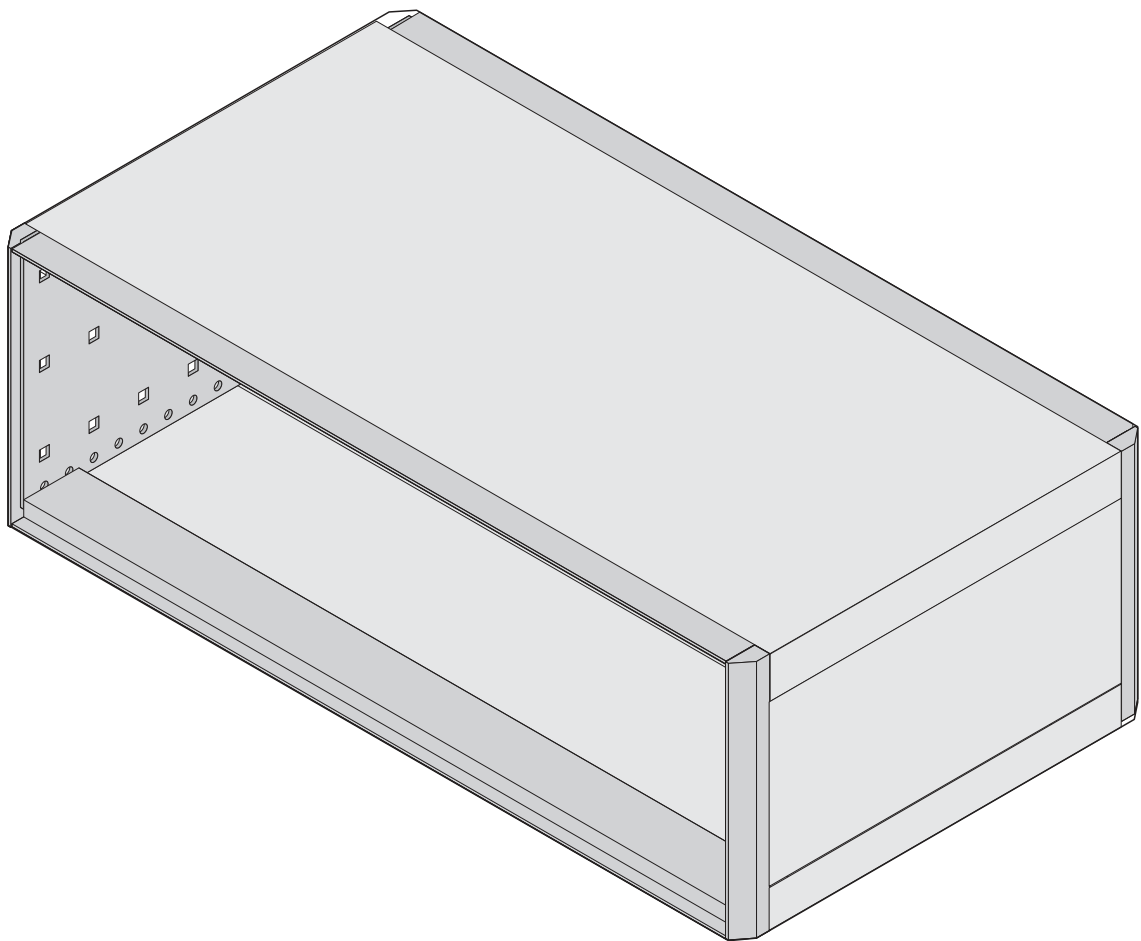
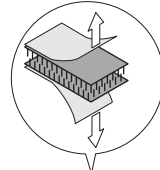
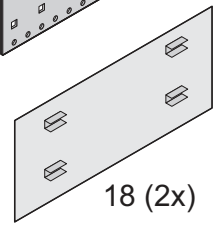
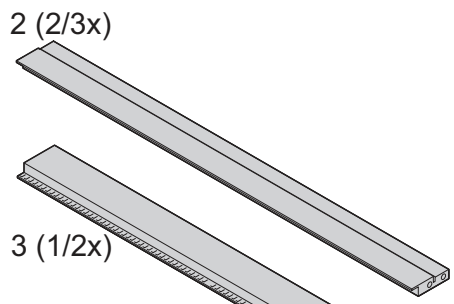


Benutzeranleitung
ratiopacPRO
ratiopacPRO-air

User Manual
ratiopacPRO
ratiopacPRO-air

Instructions utilisateur
ratiopacPRO
ratiopacPRO-air




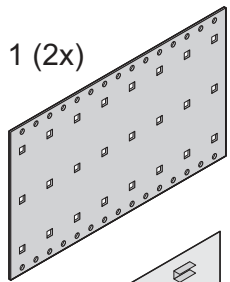


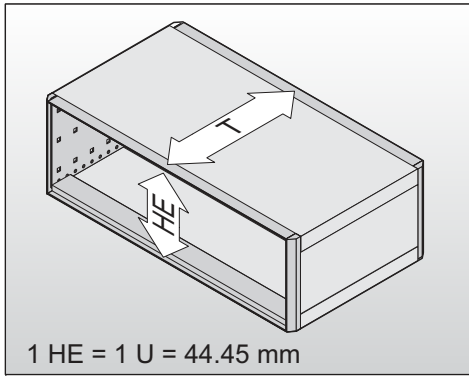

- Torx 20
M4 x 10
9 (8x)
- Torx 20
M4 x 14
10 (8x)
- Torx 20
M4 x 8
17 (8x)


ratiopac PRO

ratiopac PRO-air

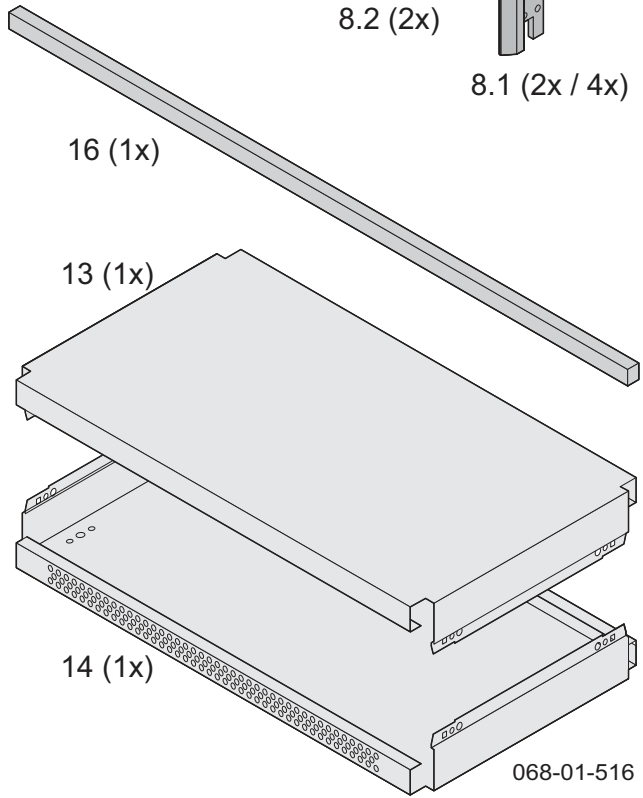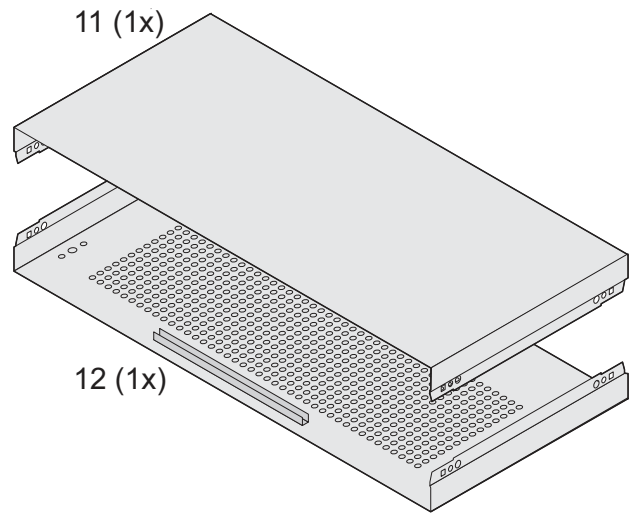
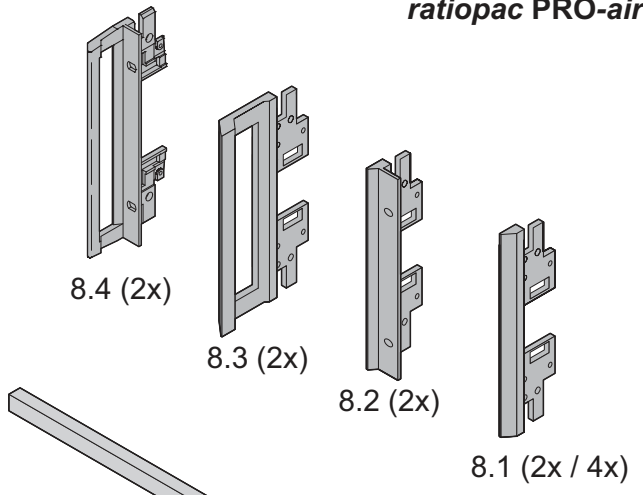
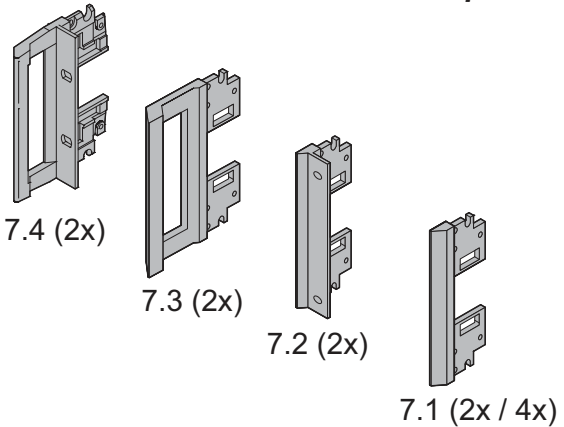


068-01-516



Demontage
Disassembly
Démontage

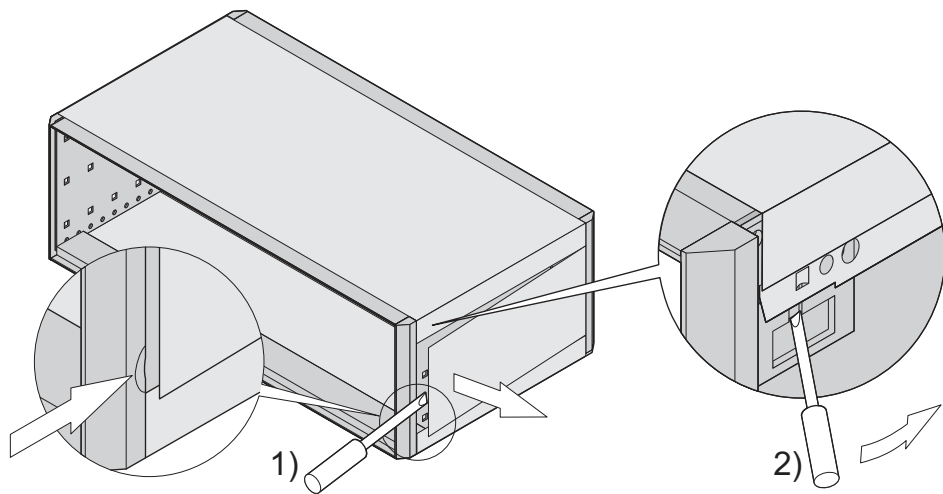

A

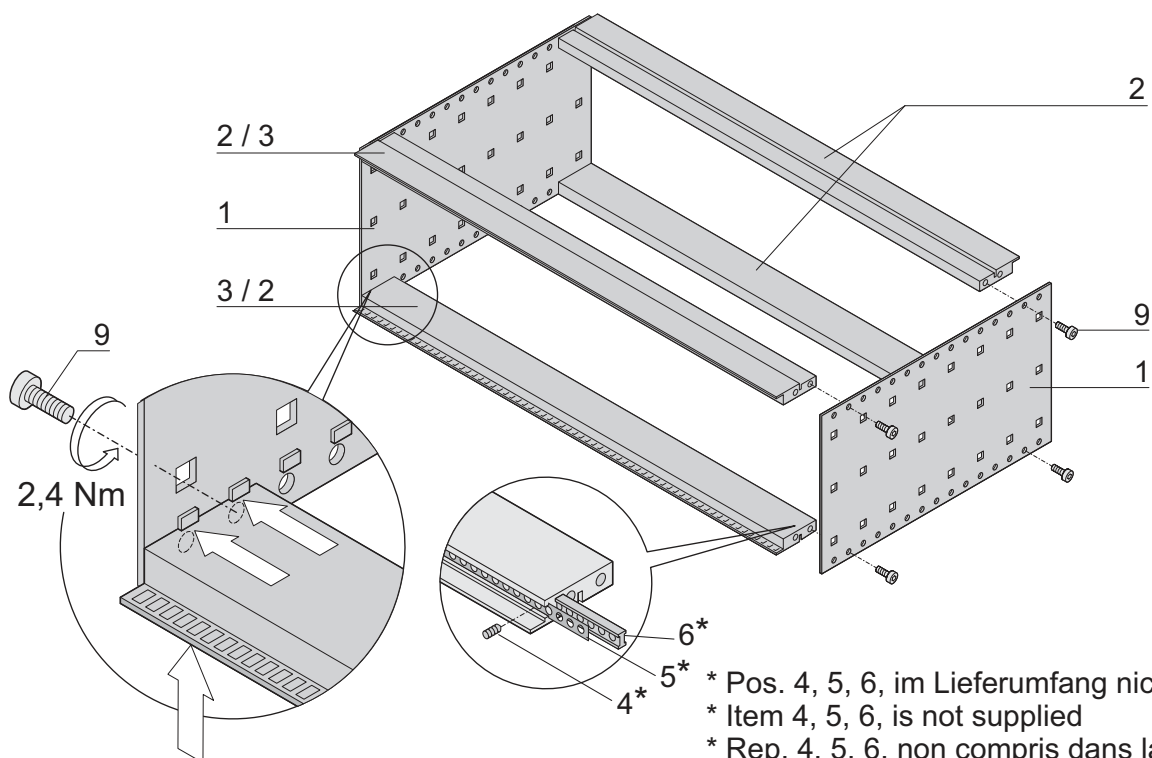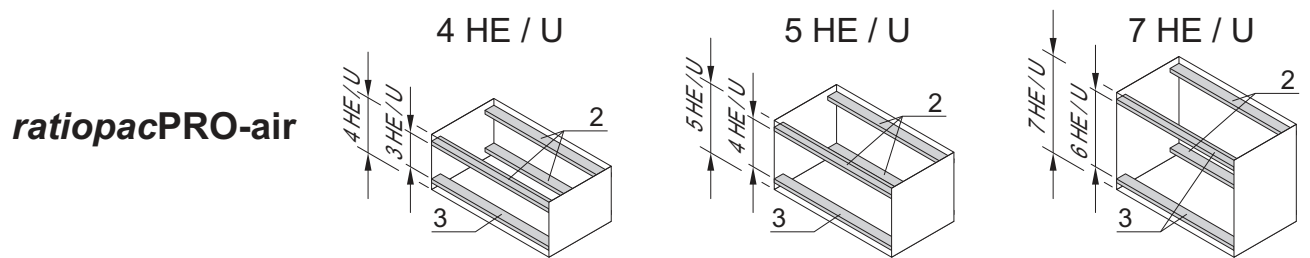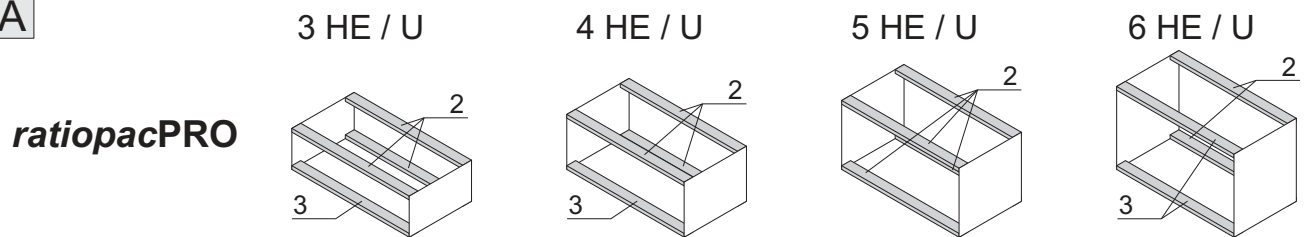



* Pos. 4, 5, 6, im Lieferumfang nicht enthalten
* Item 4, 5, 6, is not supplied
* Rep. 4, 5, 6, non compris dans la livraison

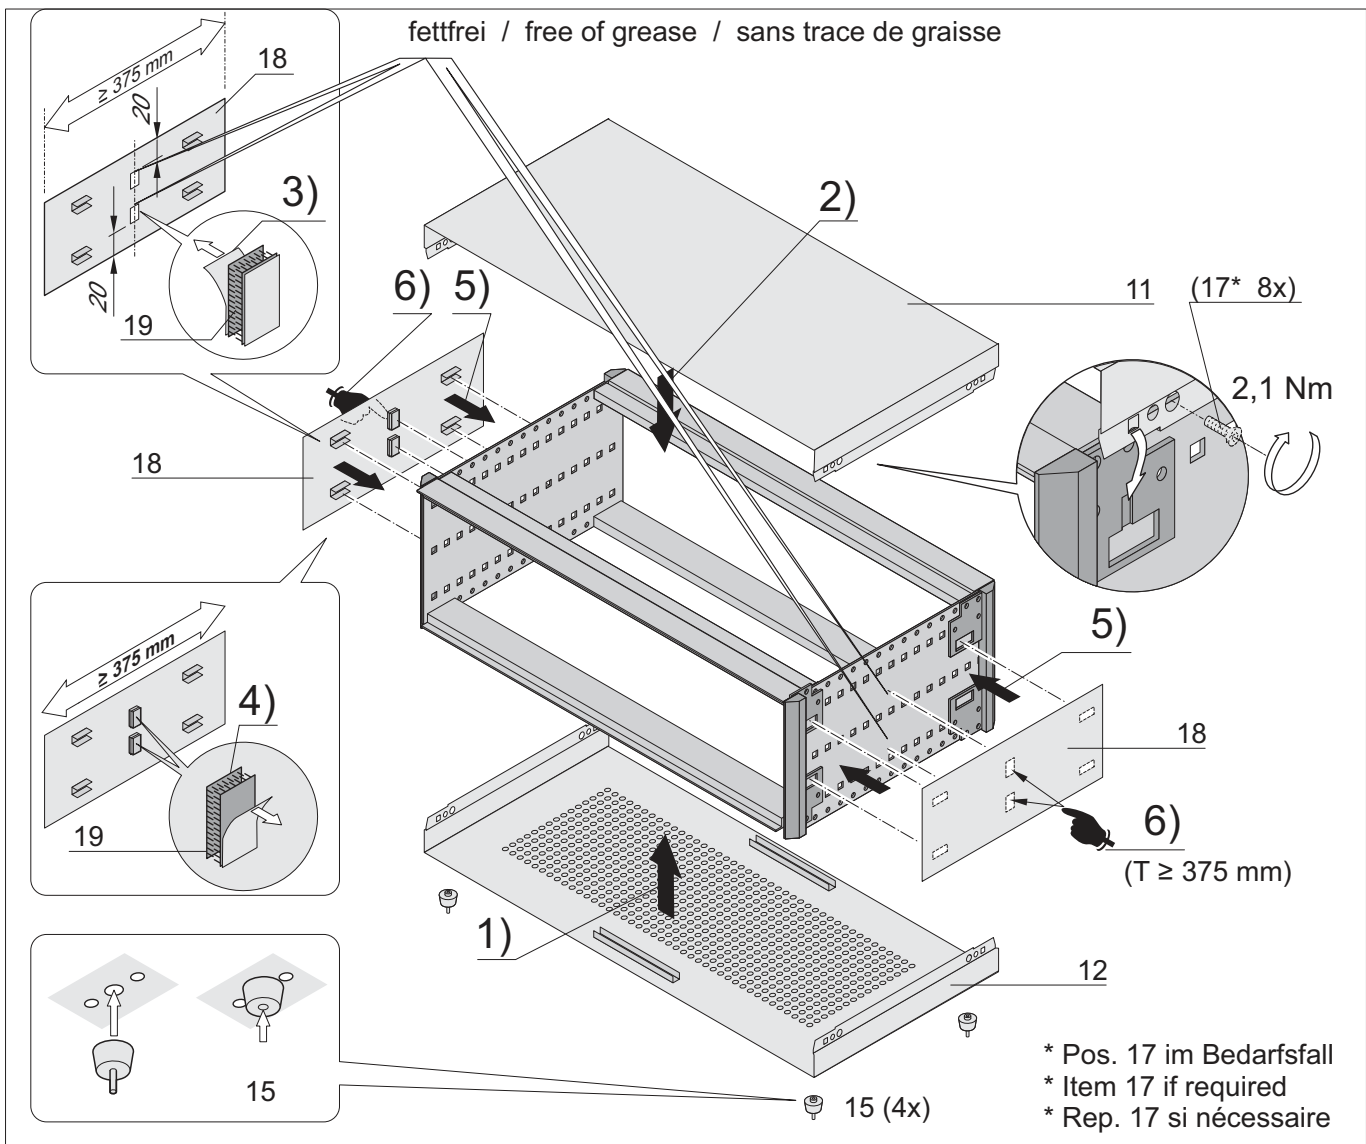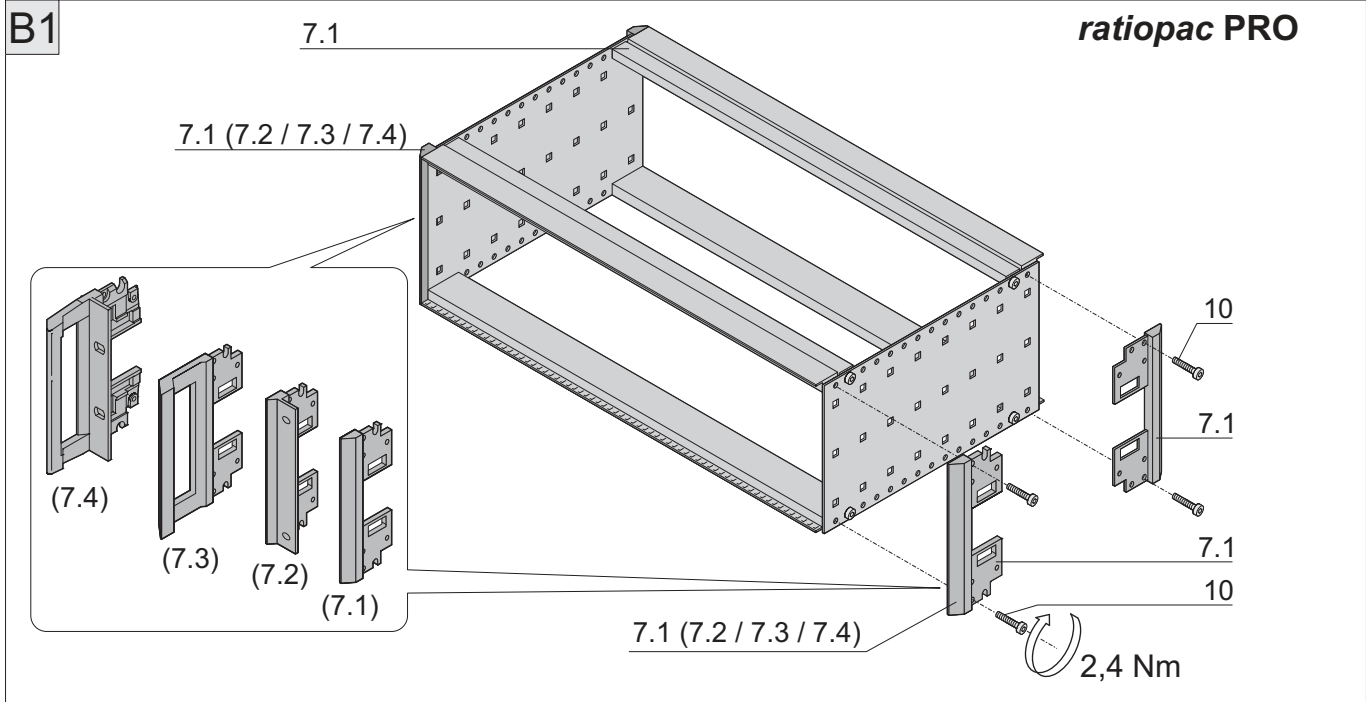


* Pos. 17 im Bedarfsfall
 * Item 17 if required
 * Rep. 17 si nécessaire

B2




ratiopac PRO-air

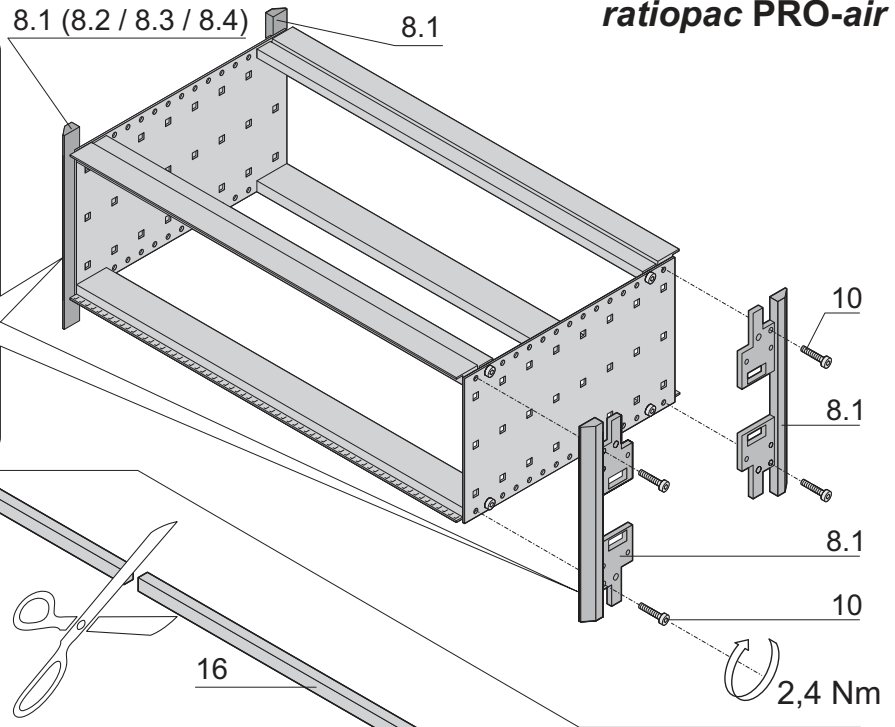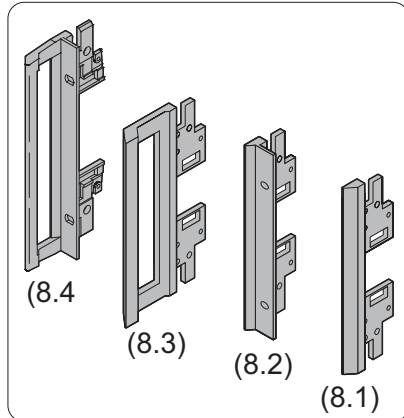

Pos./Item./Rep.	TE/HP/F	mm
16	42	218
16	63	325
16	84	432

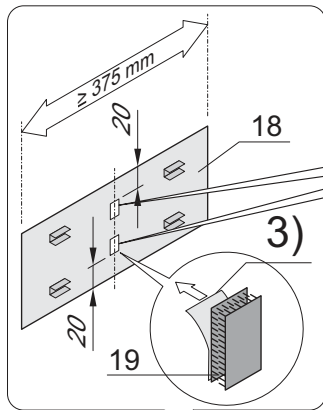

fettfrei / free of grease / sans trace de graisse

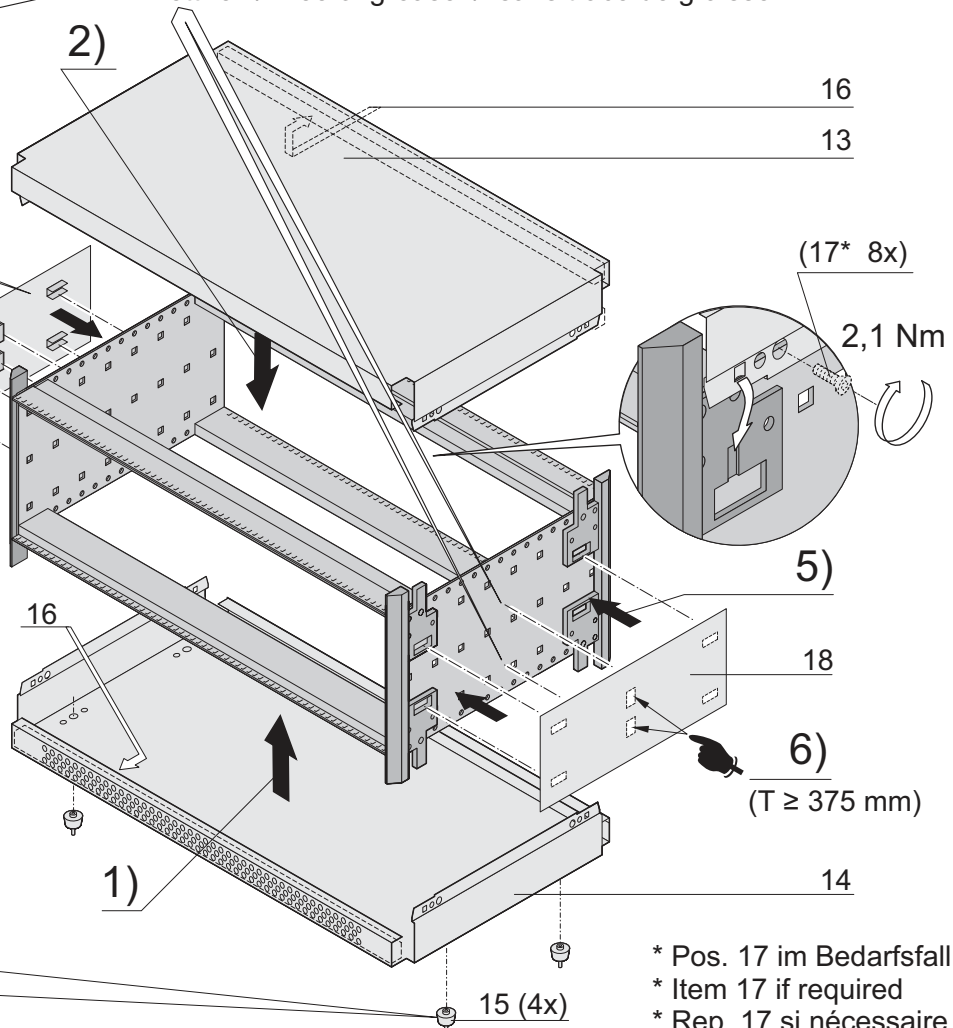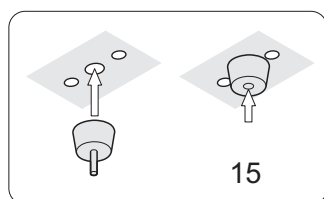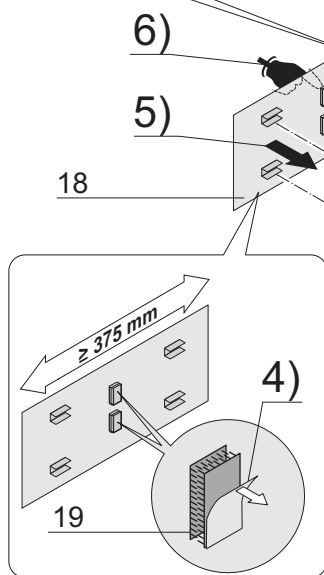

* Pos. 17 im Bedarfsfall
 * Item 17 if required
 * Rep. 17 si nécessaire