



Benutzeranleitung
europacPRO rugged
Bausatz 3 HE / 6 HE


User Manual
europacPRO rugged
Kit 3 U / 6 U

Instructions utilisateur
europacPRO rugged
Kit 3 U / 6 U

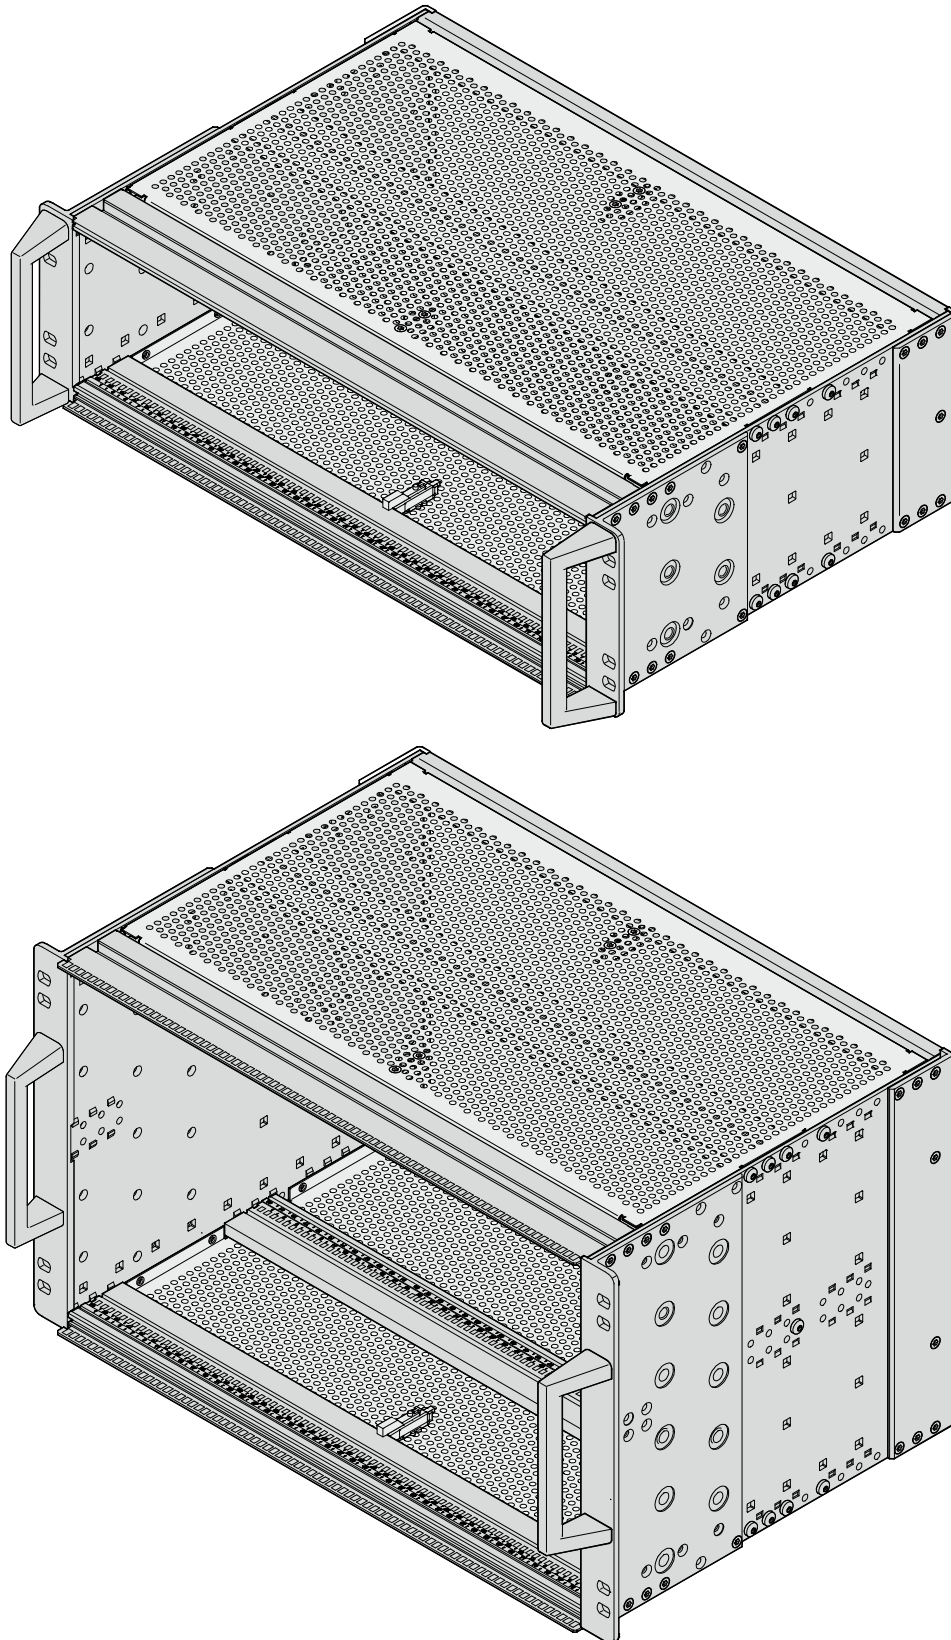


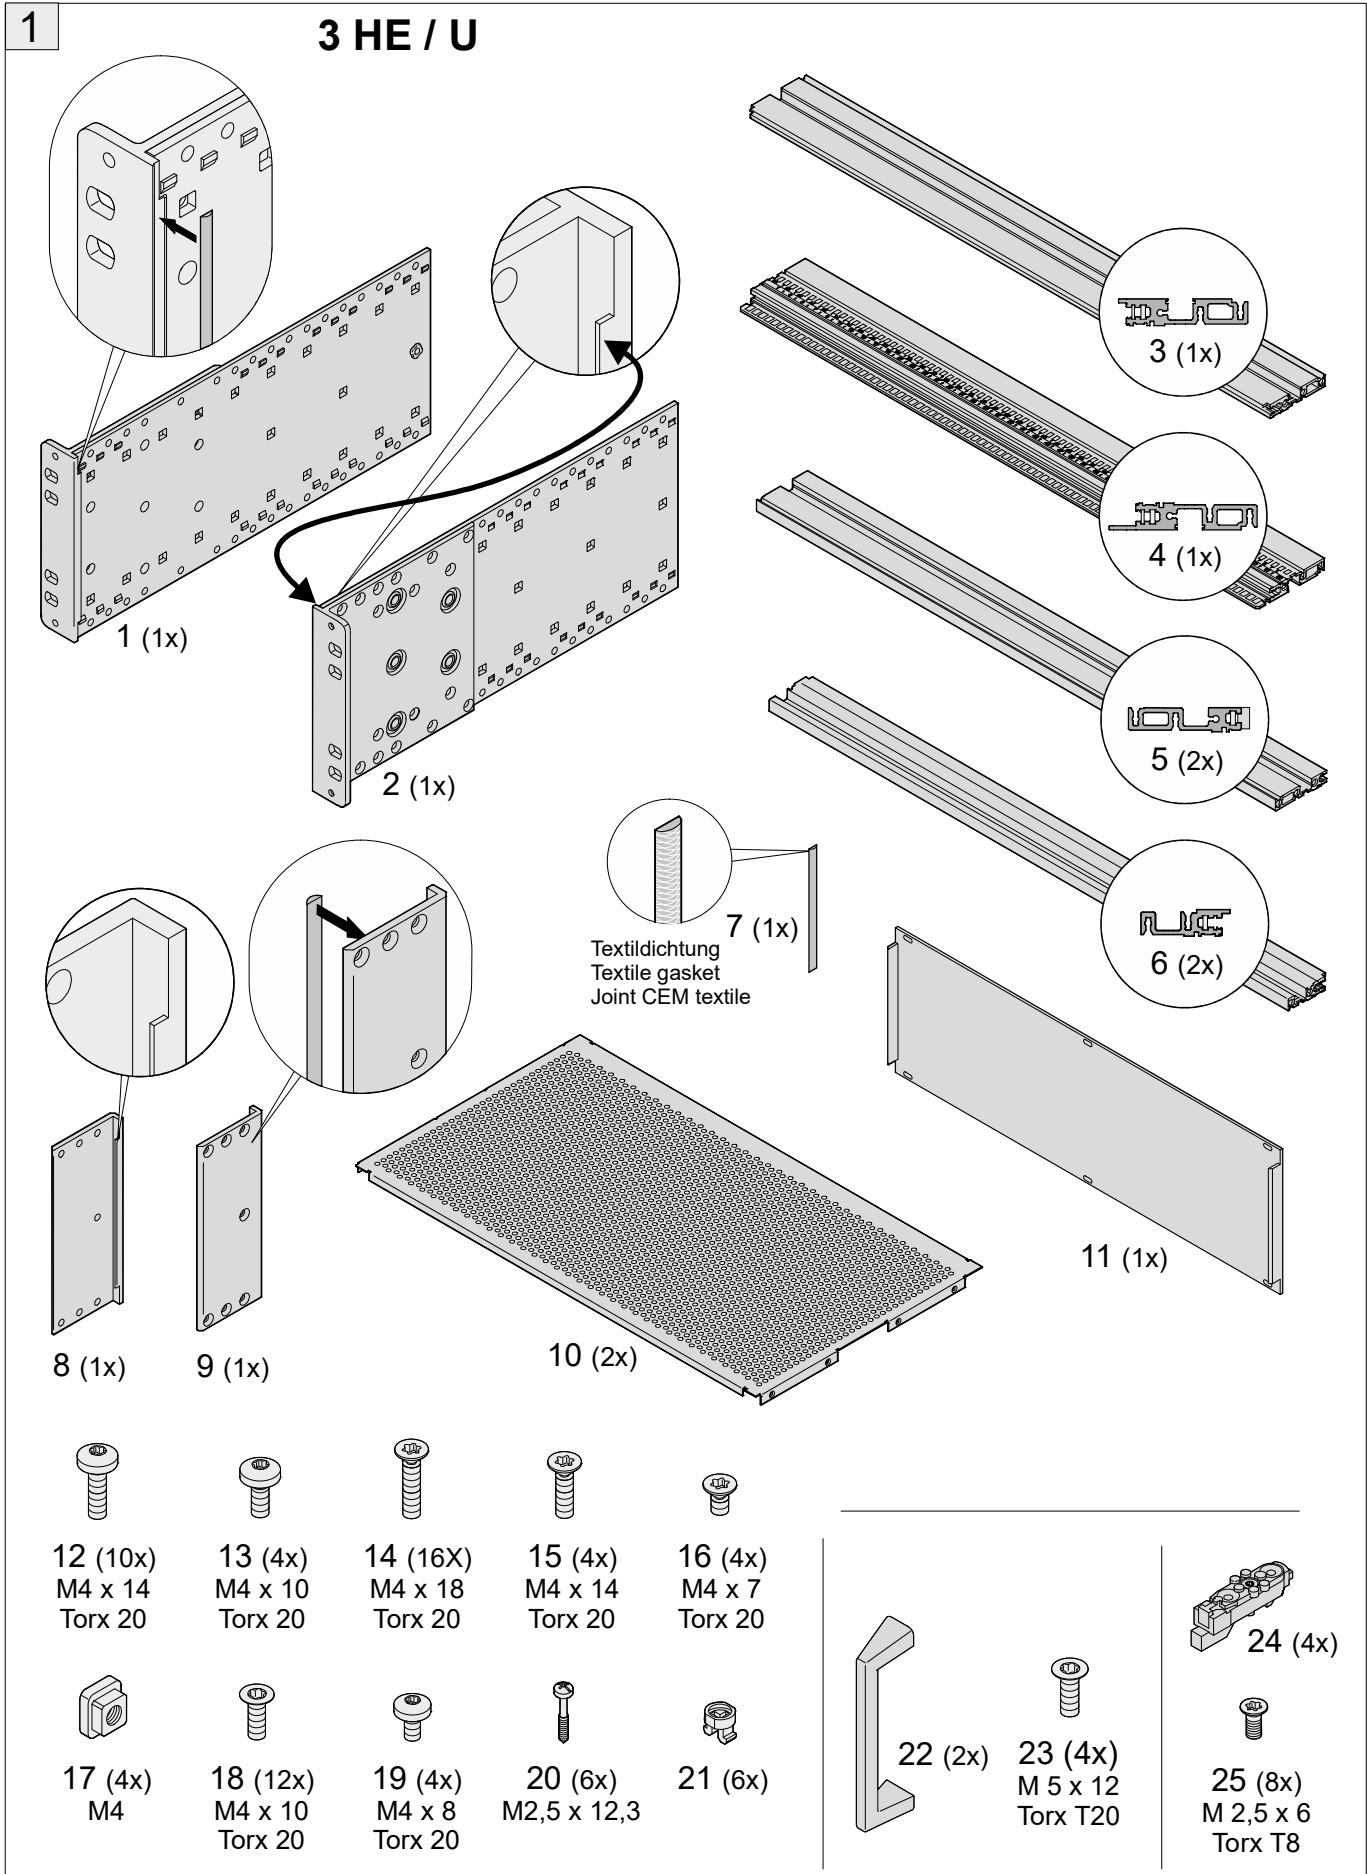


2 **3 HE / U**


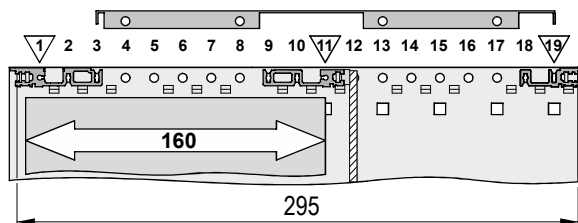









3

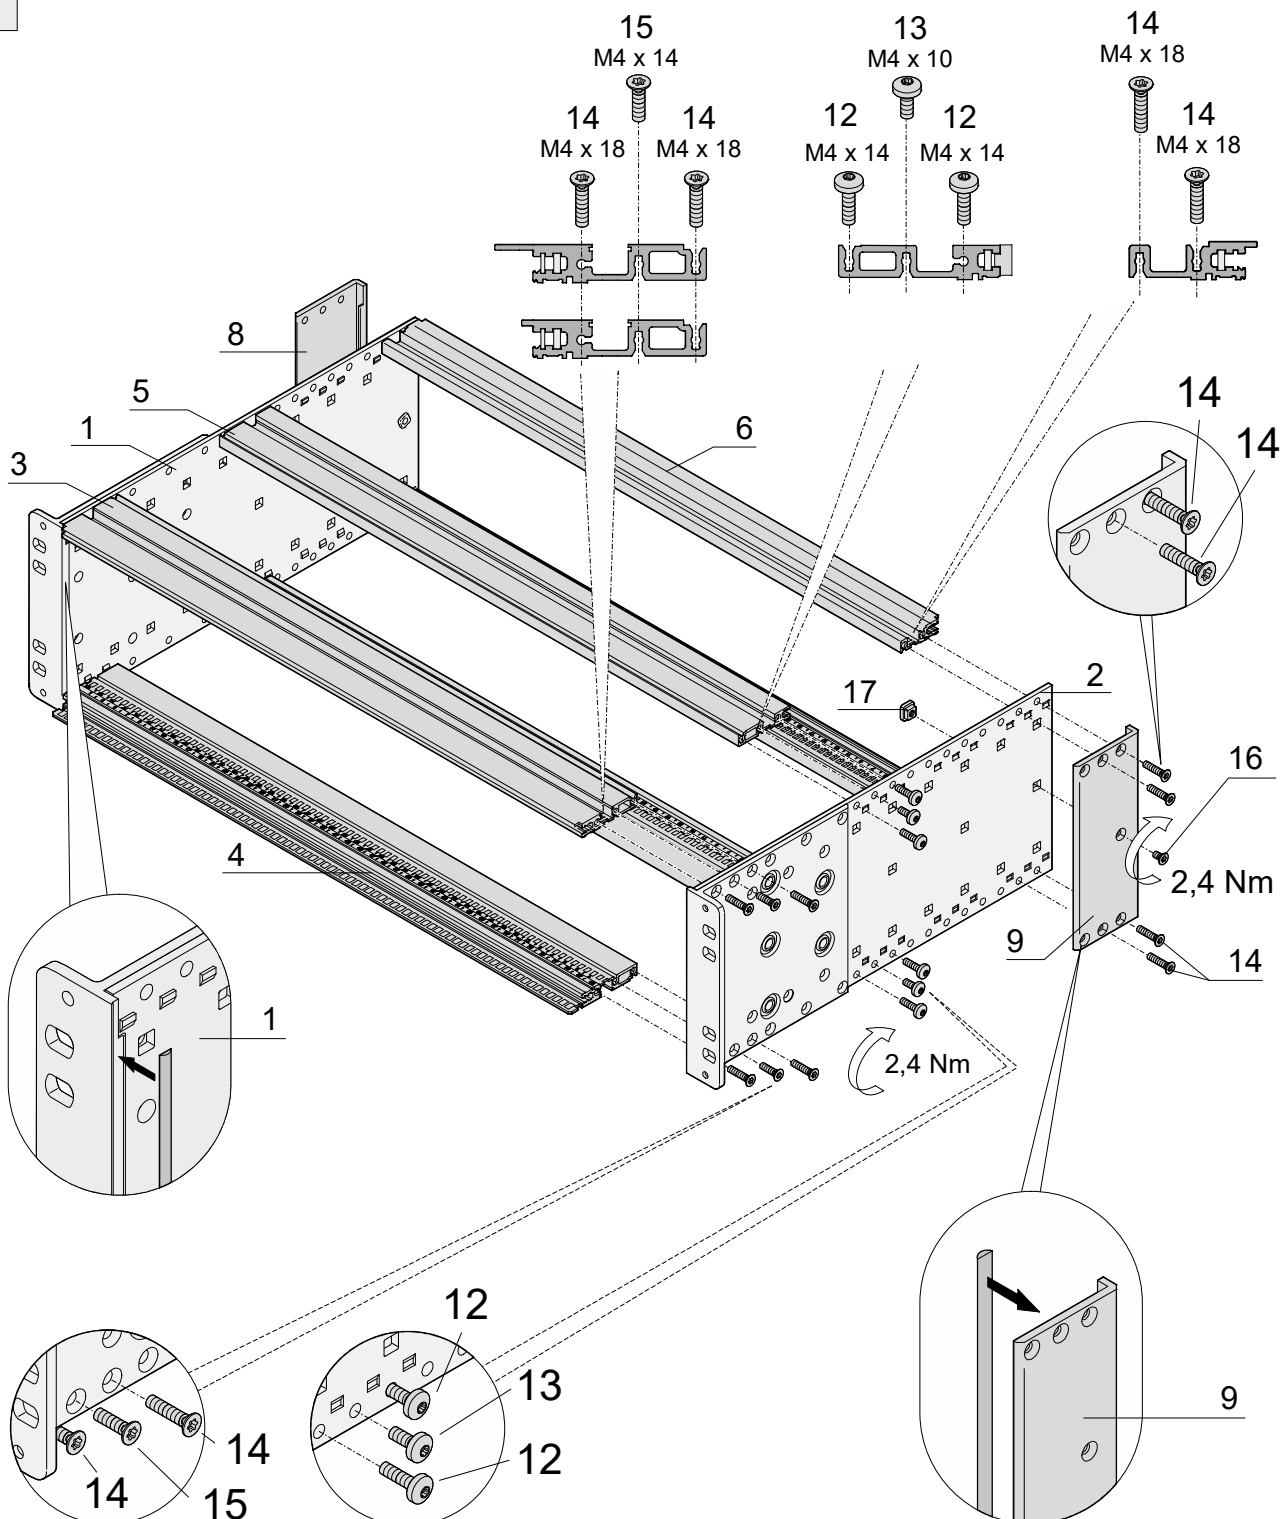


4 3 HE / U








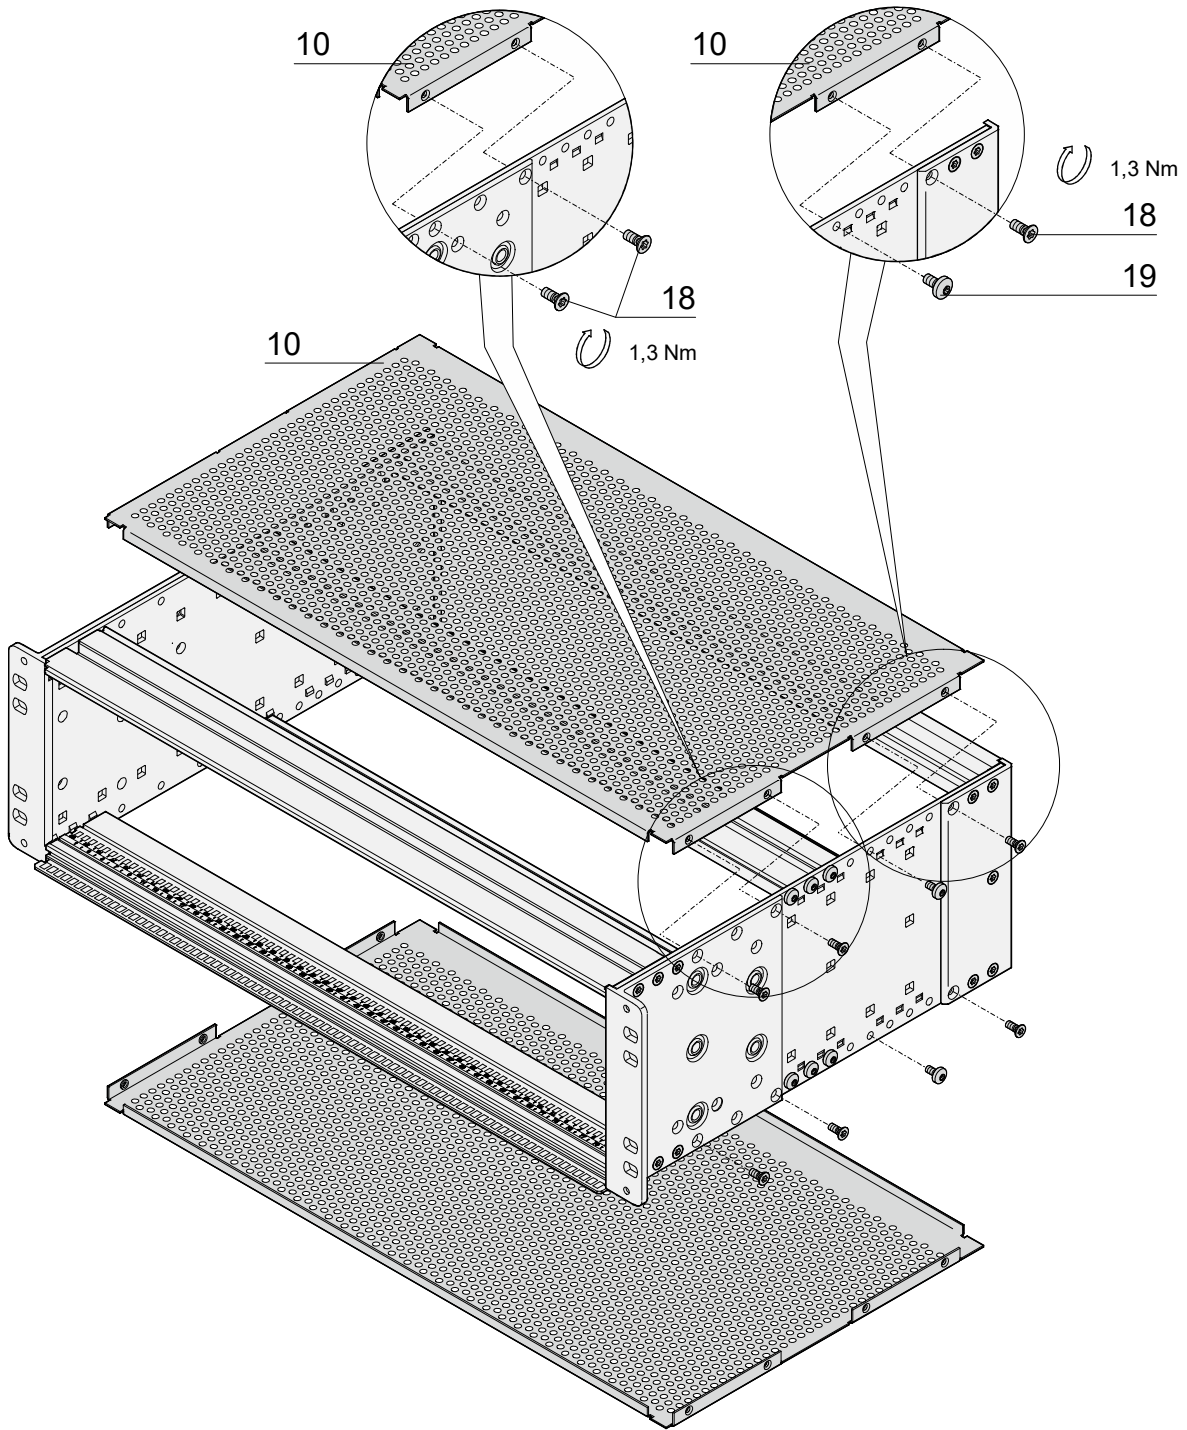


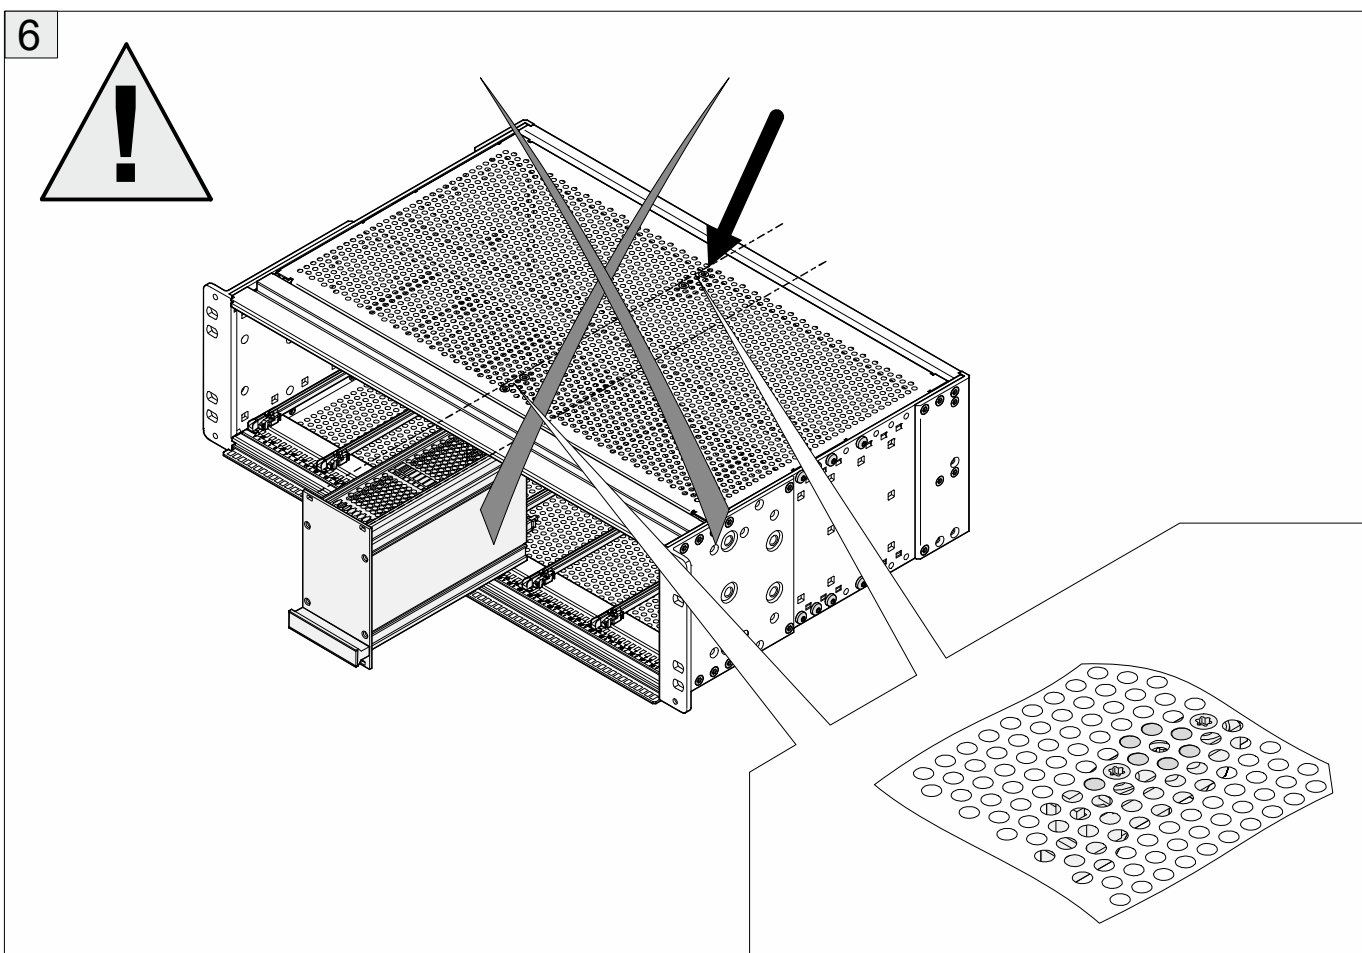
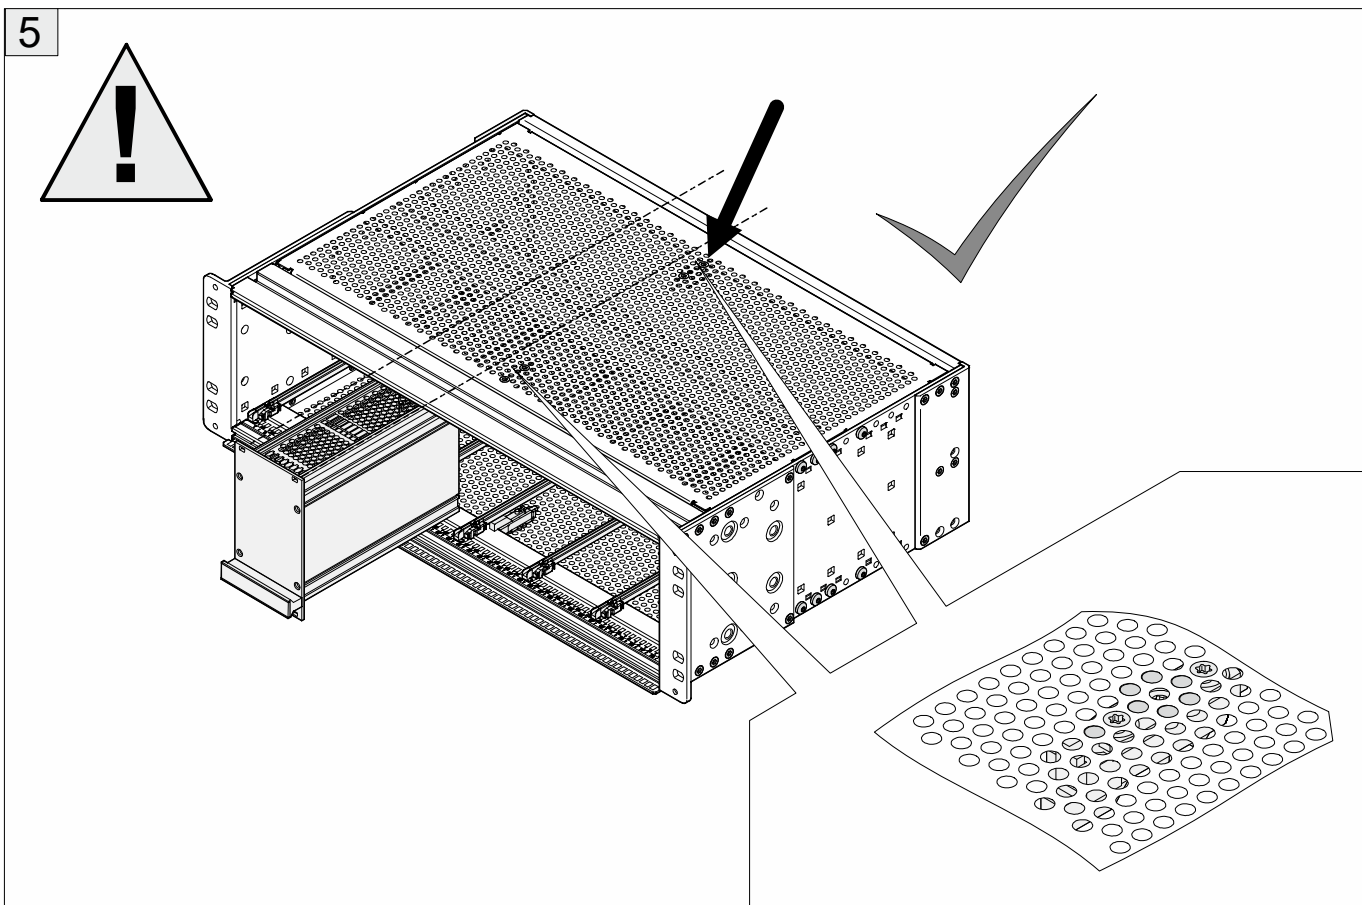


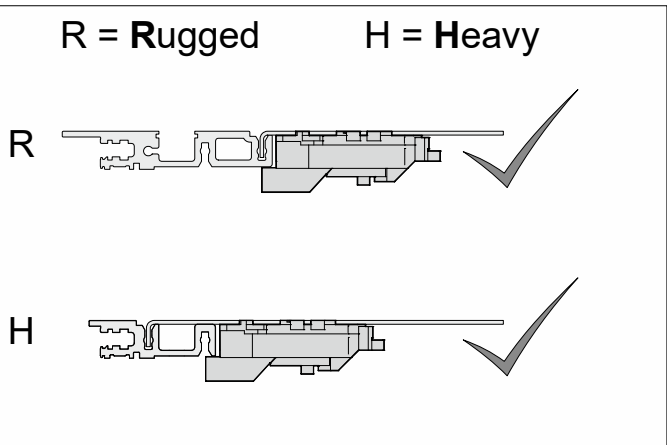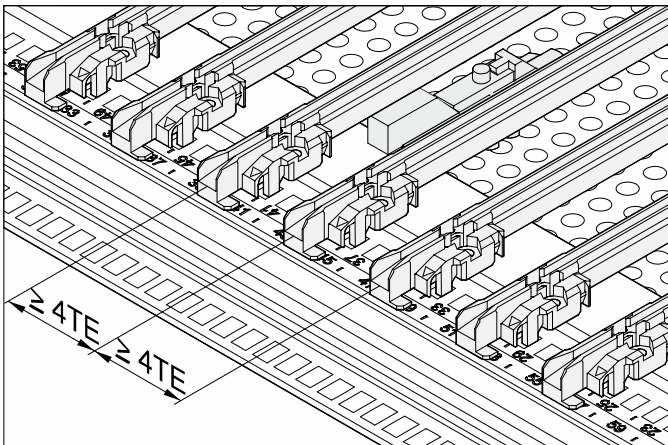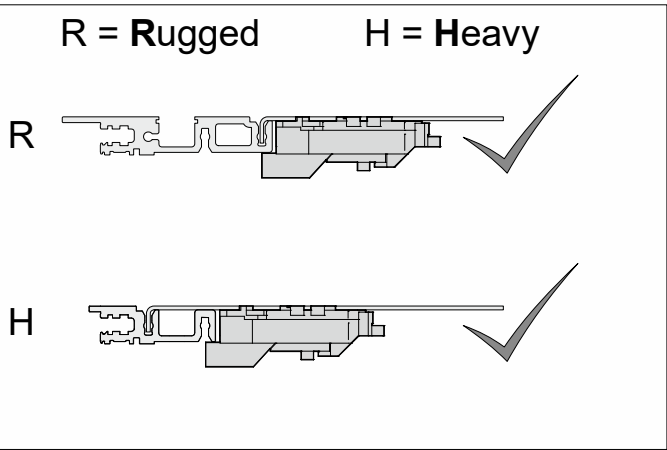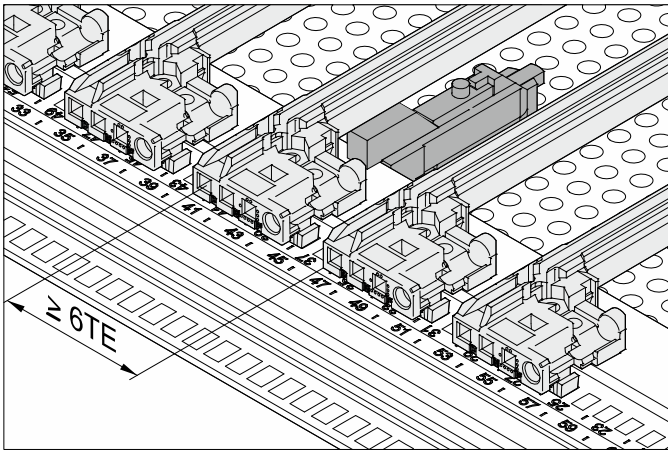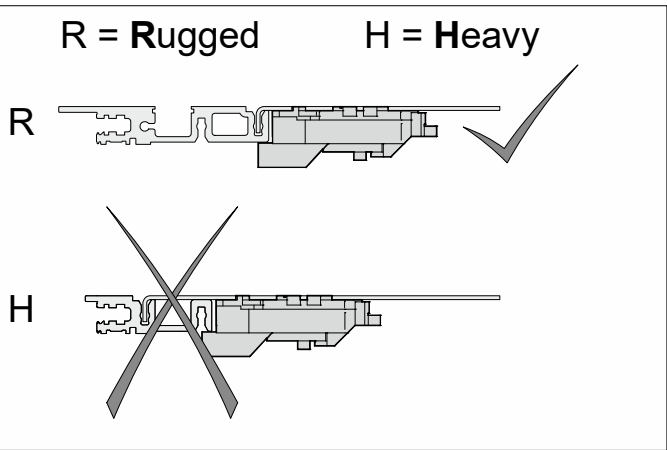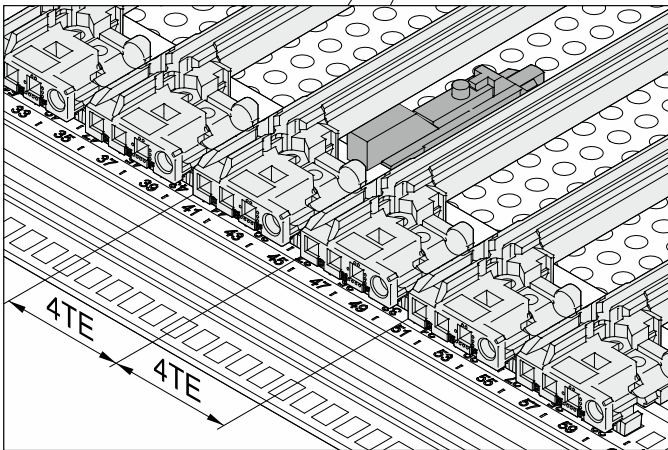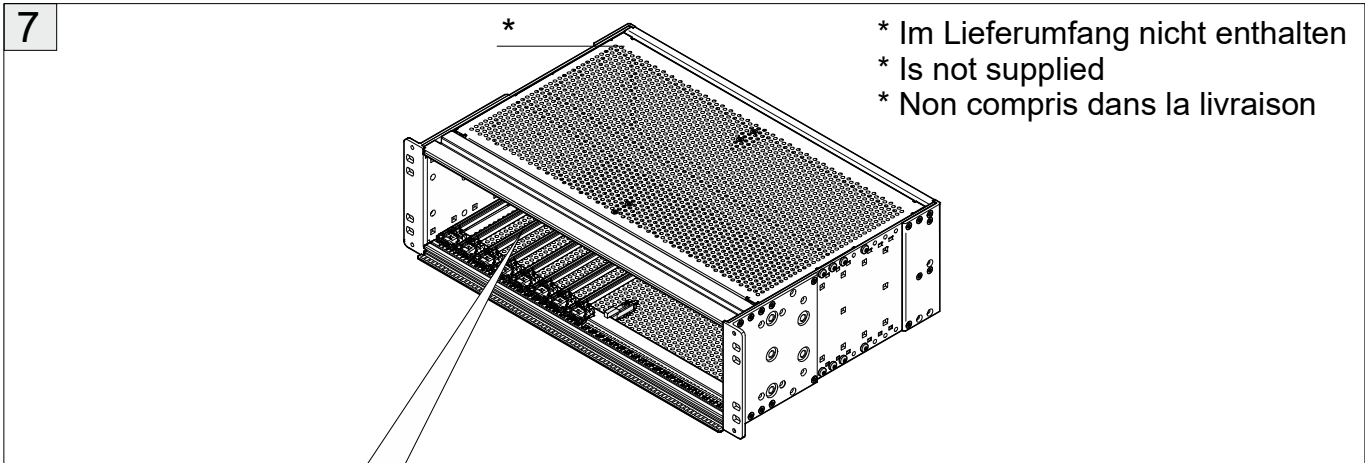


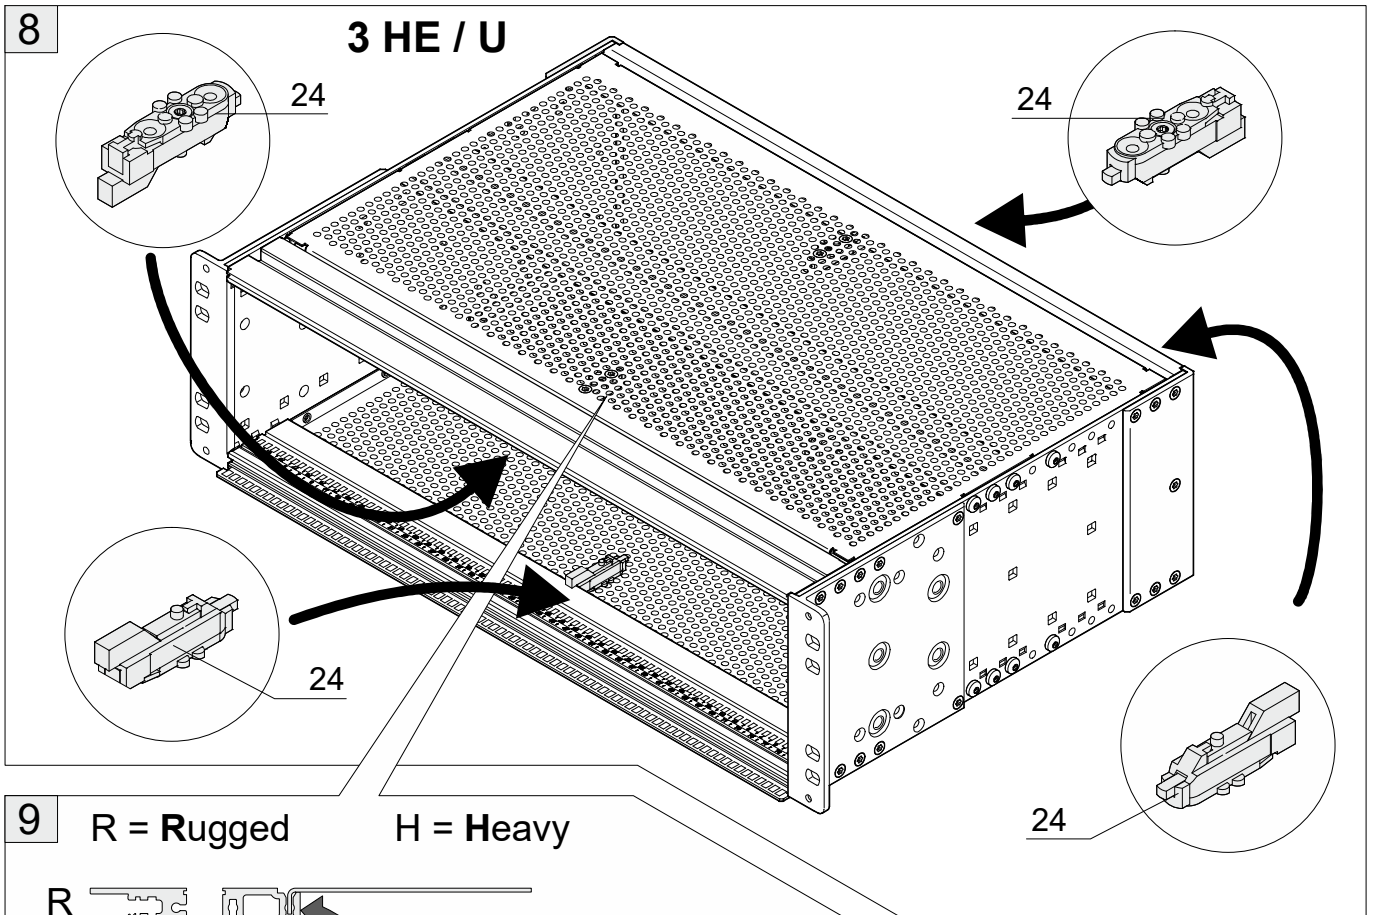


9 R = Rugged H = Heavy

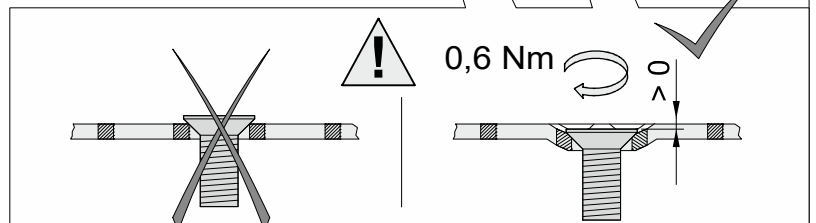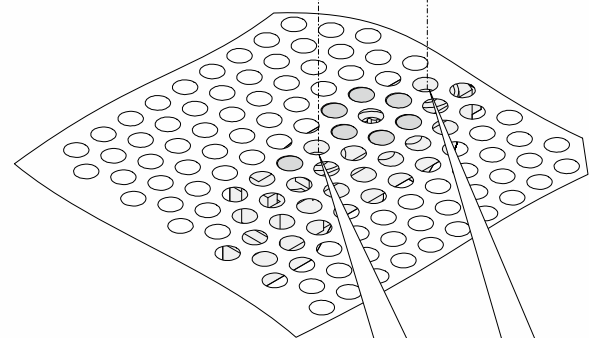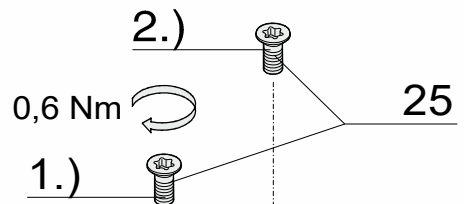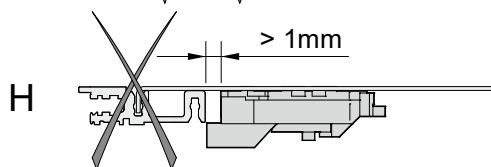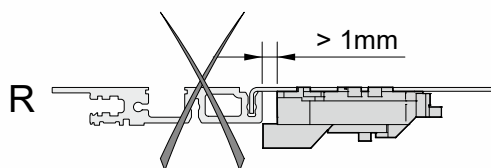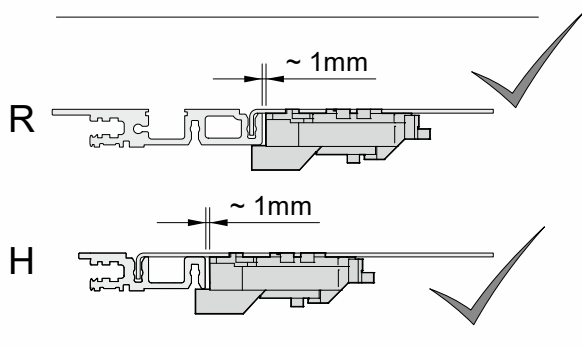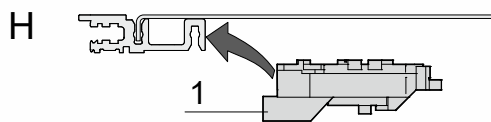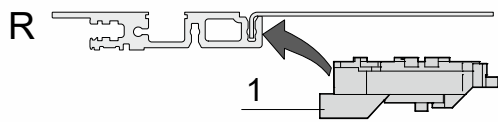


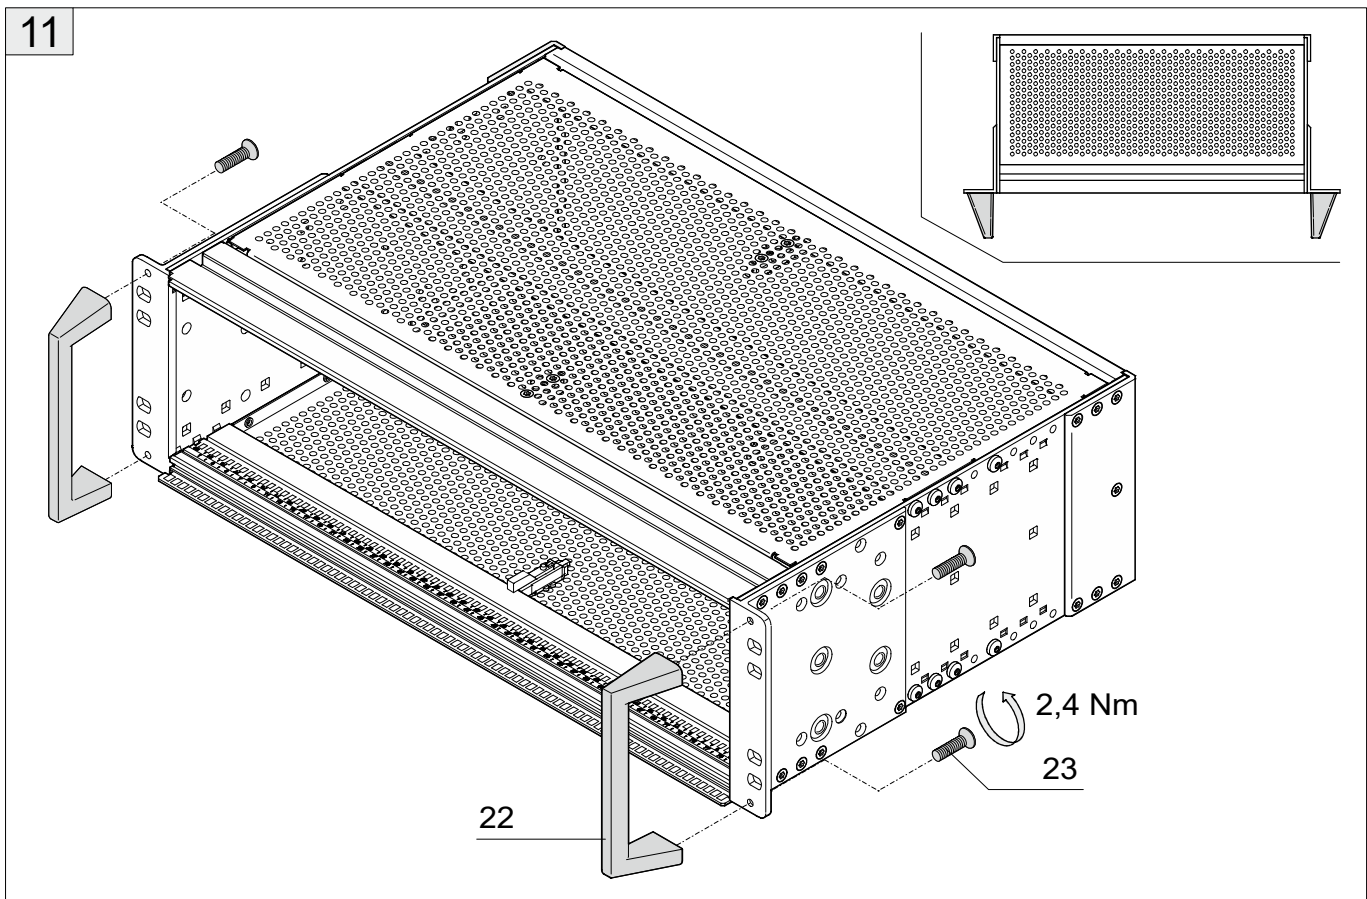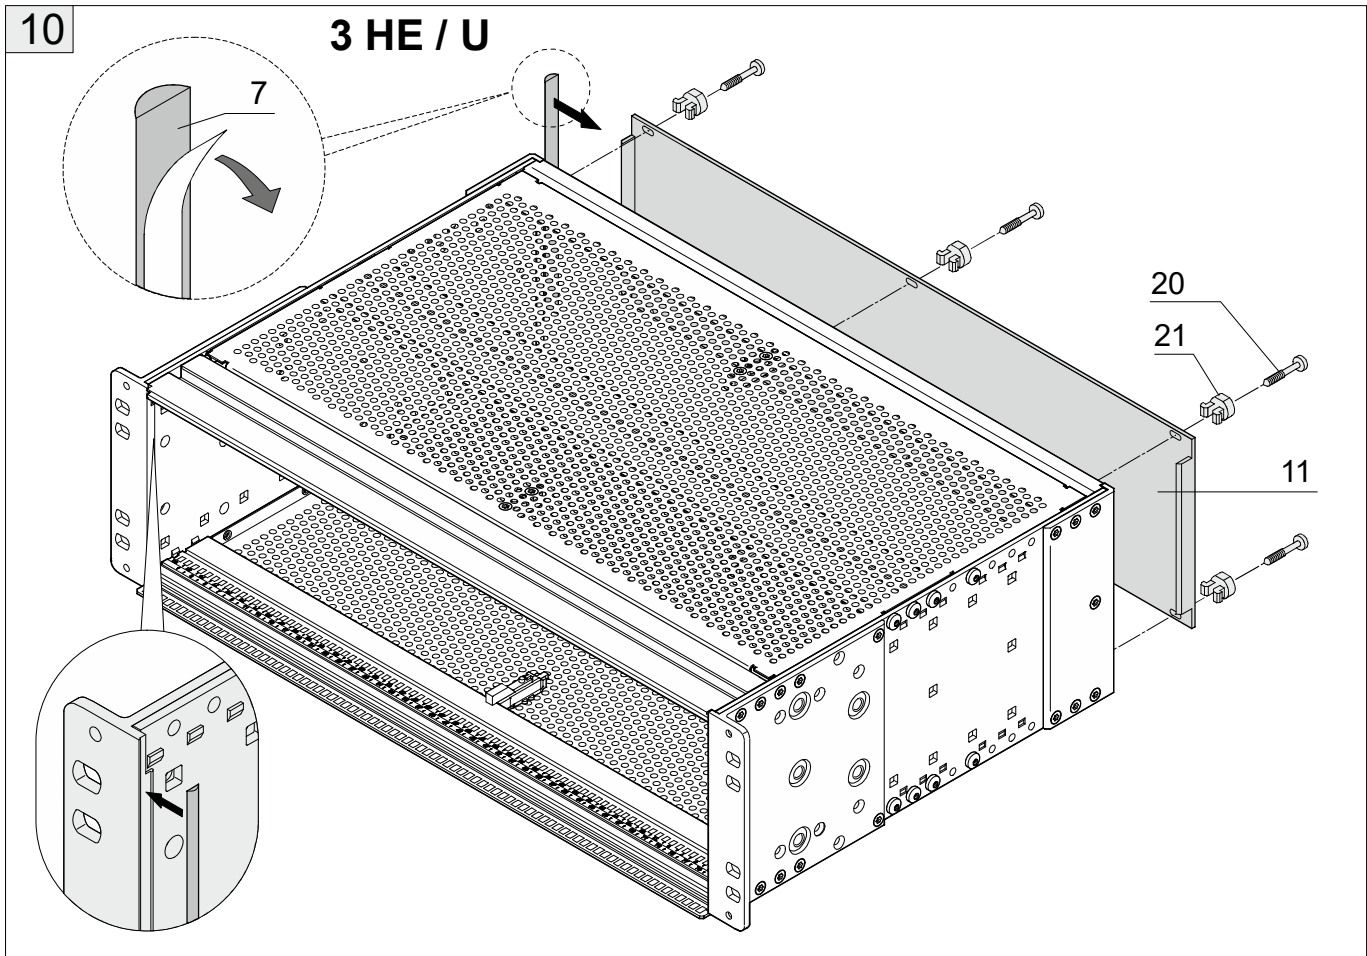

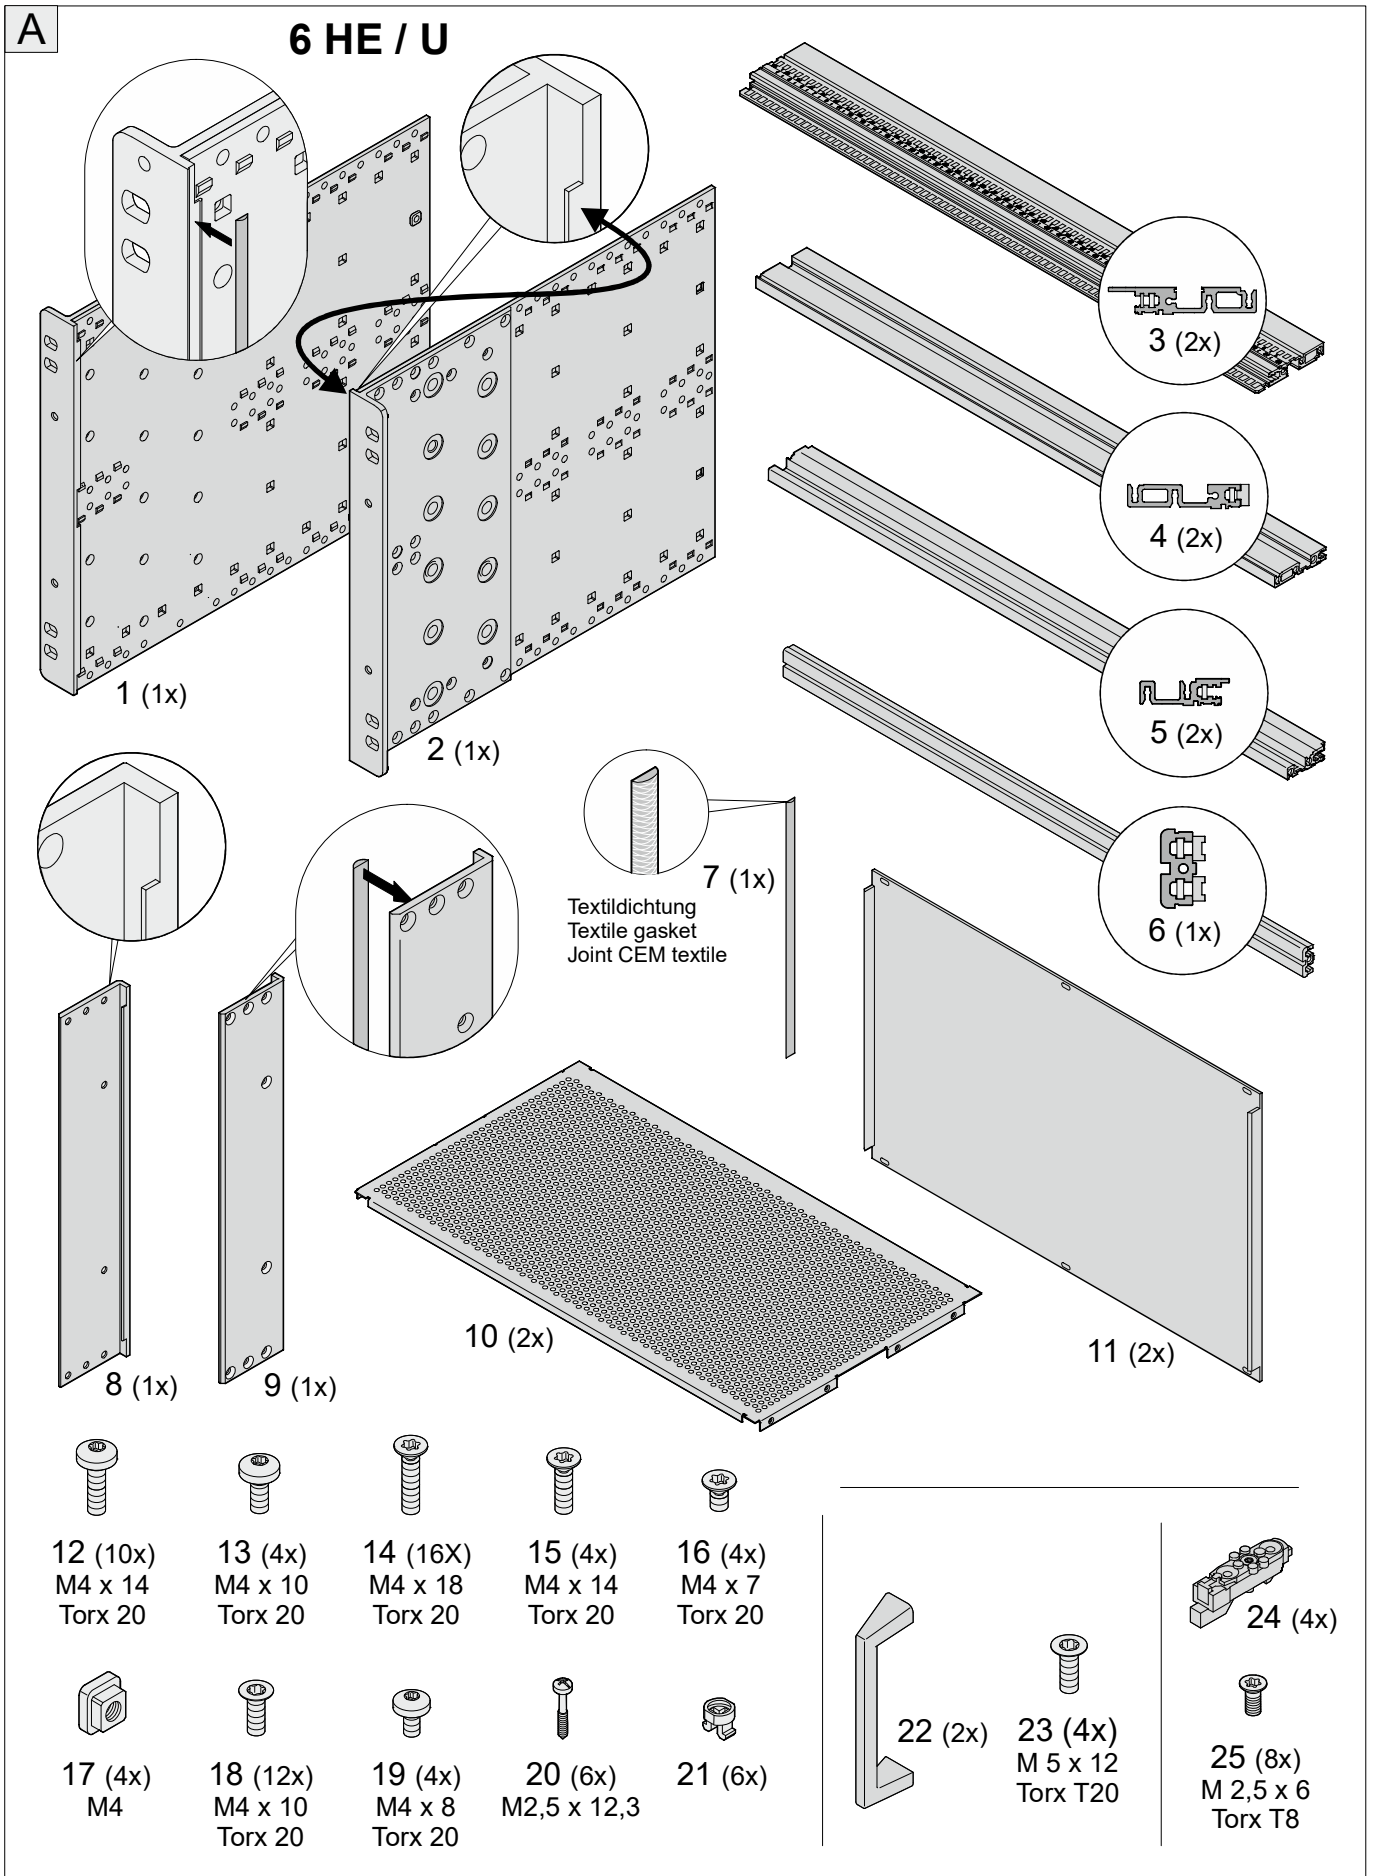




B 6 HE / U







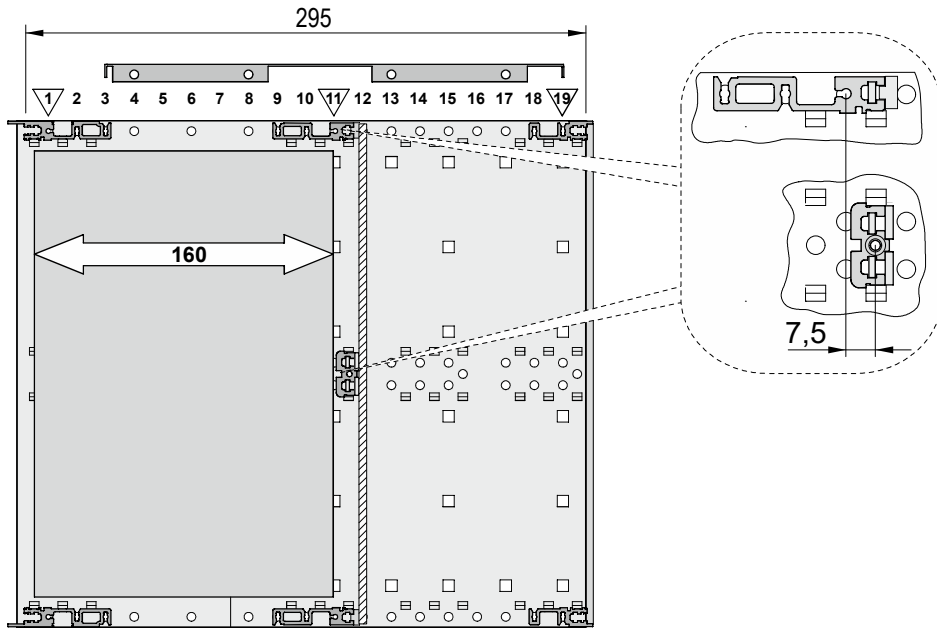


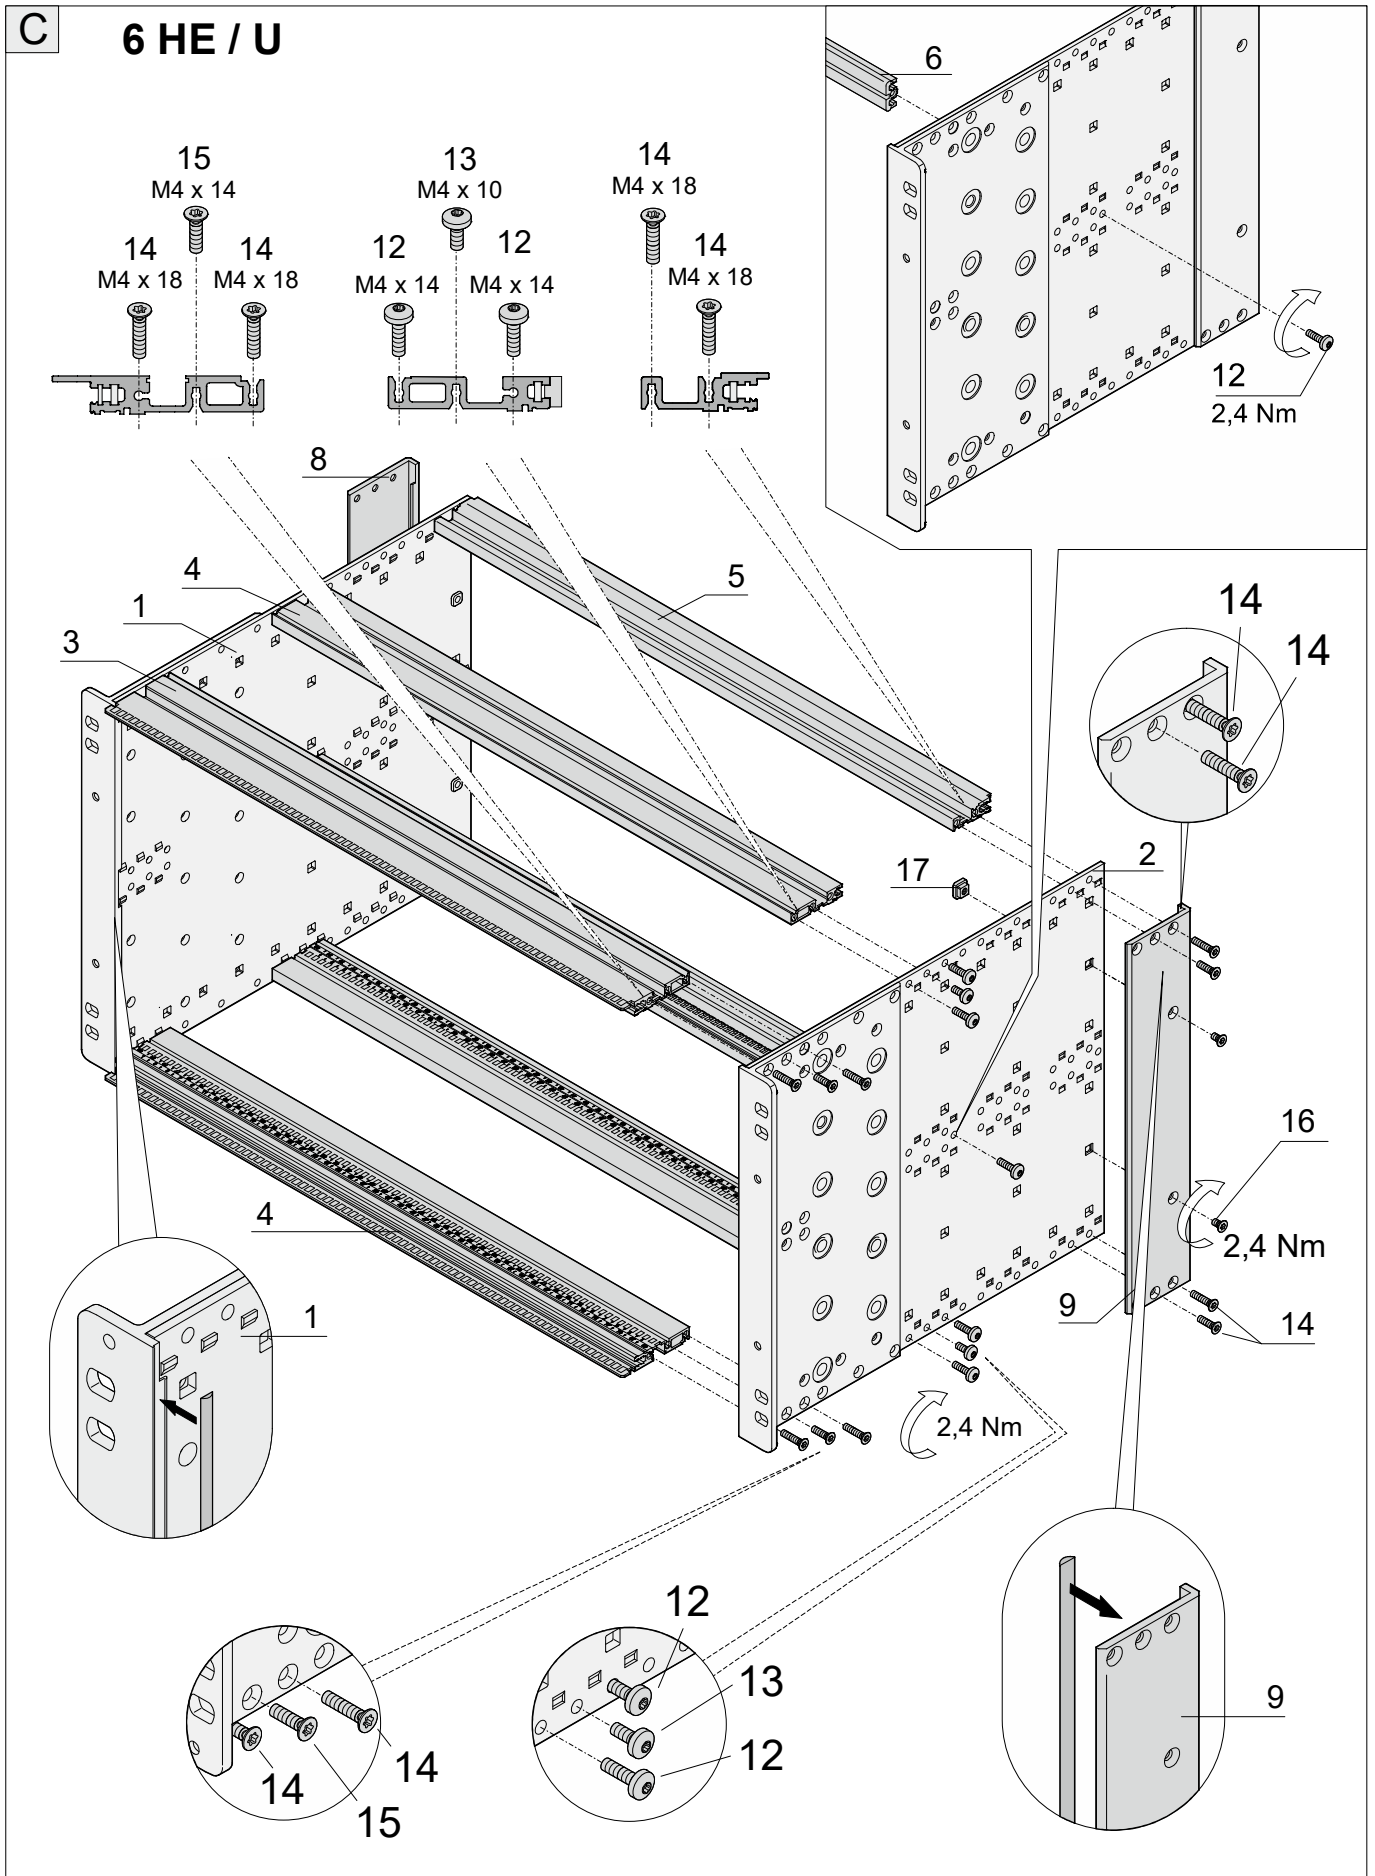


D 6 HE / U

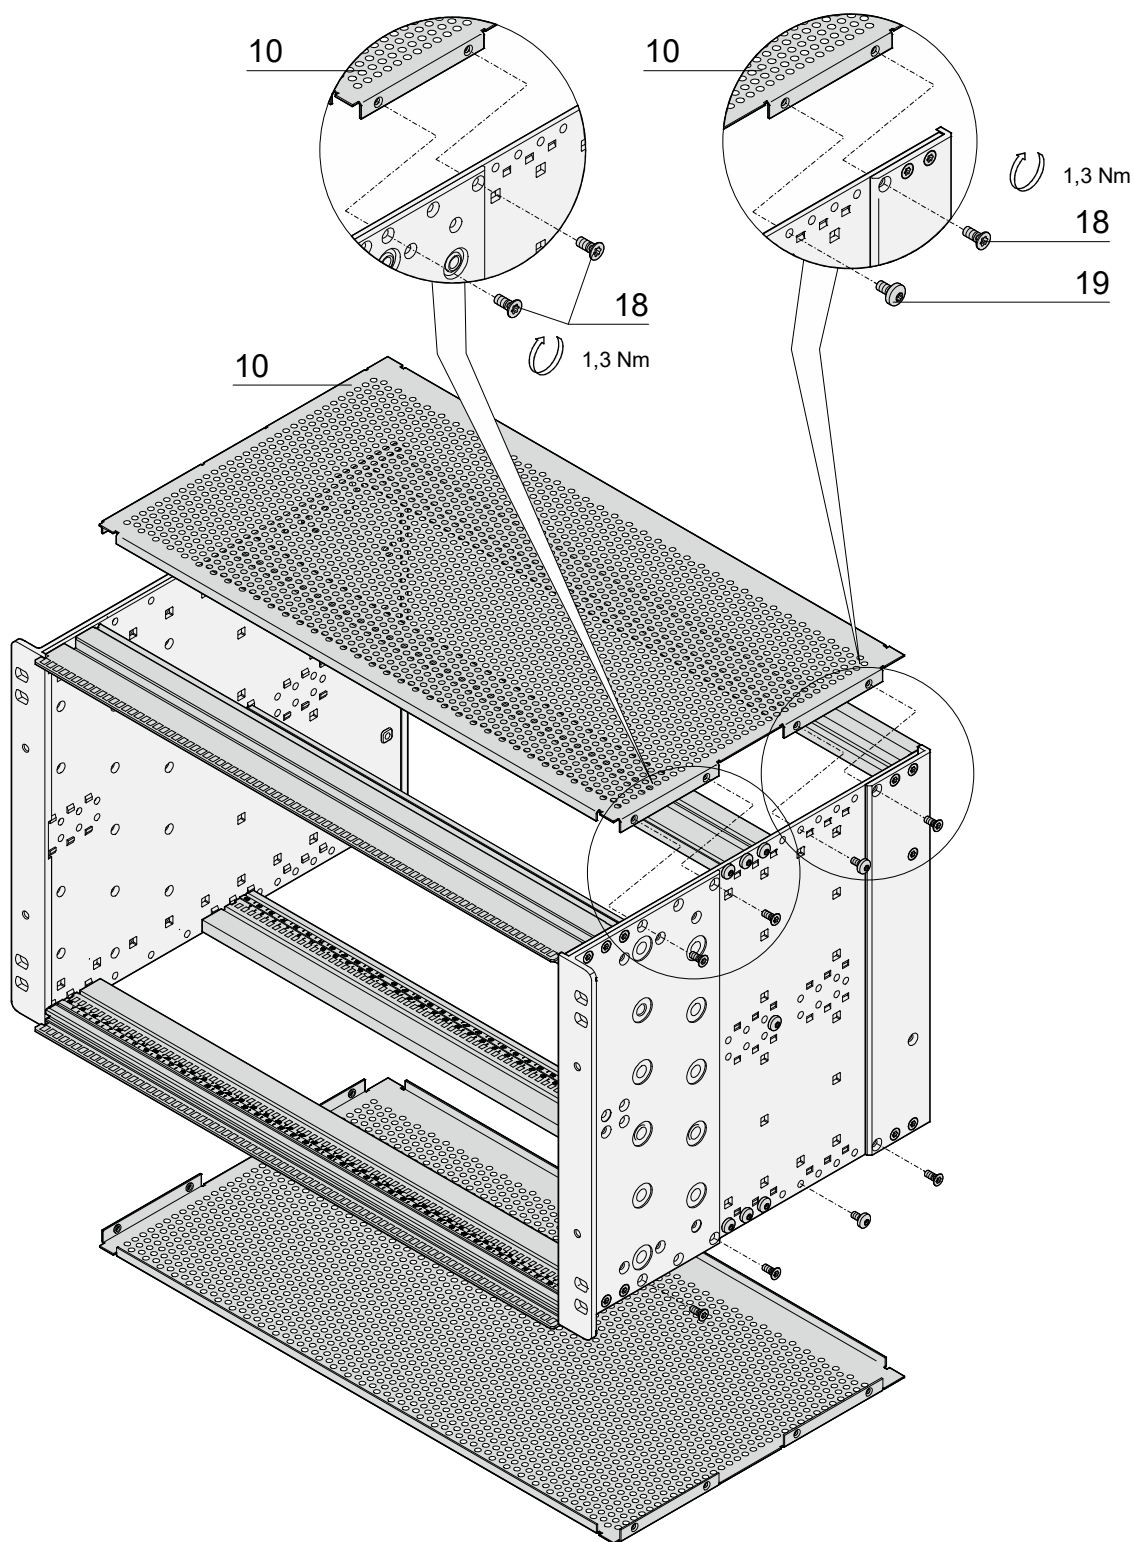

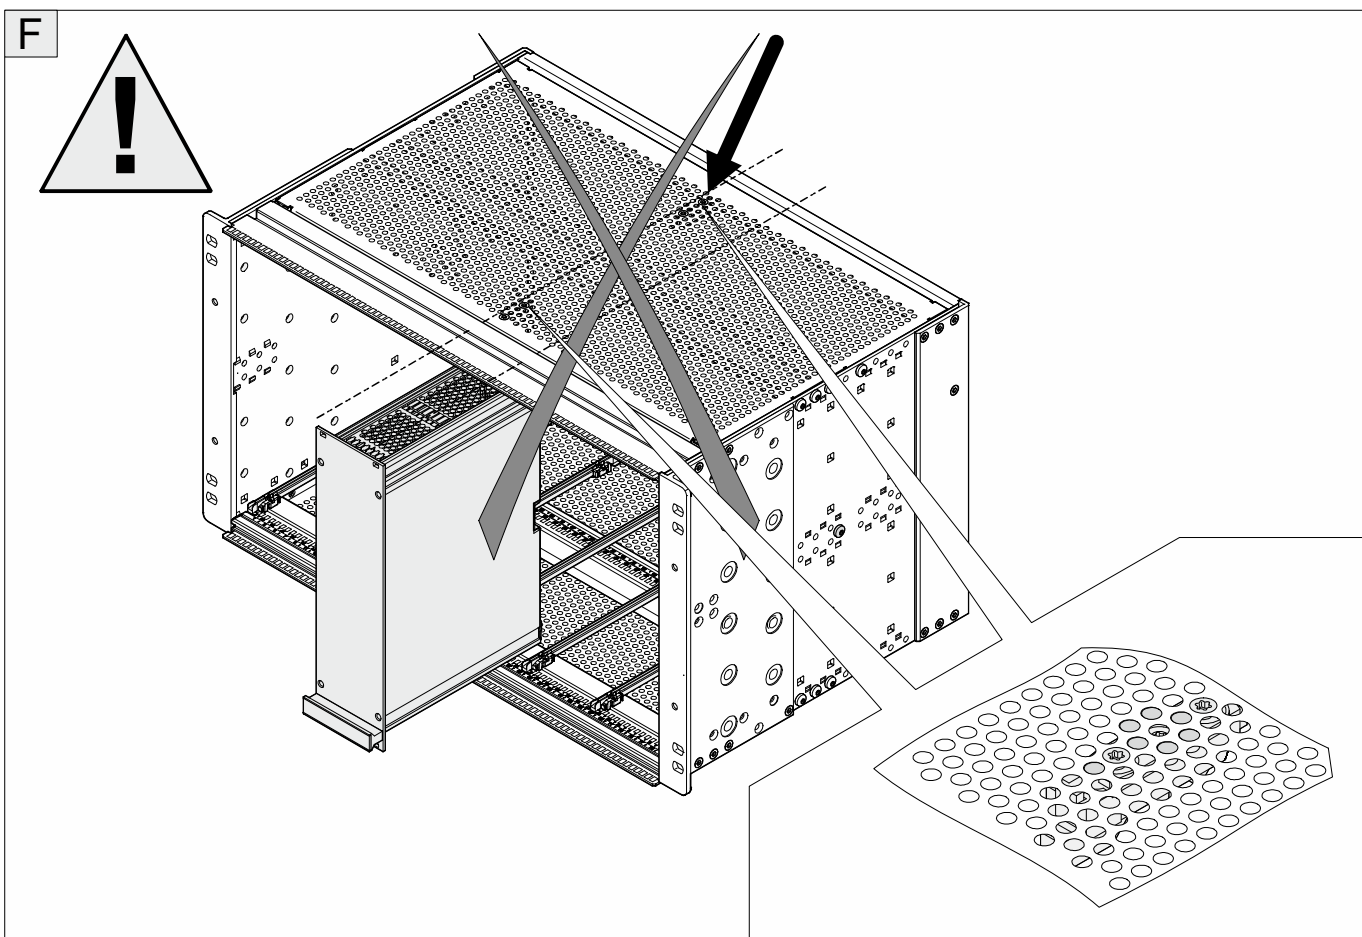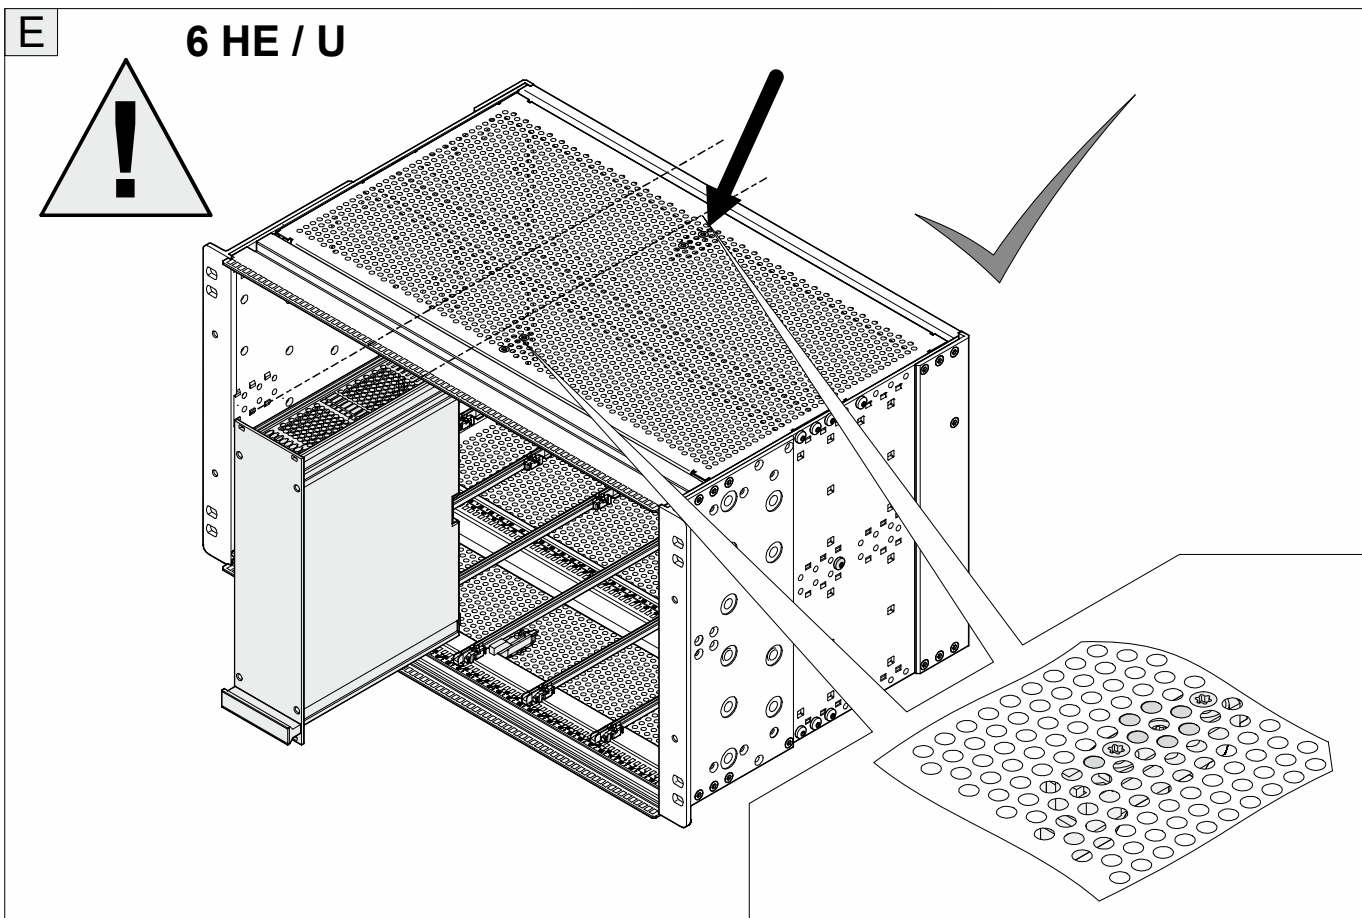

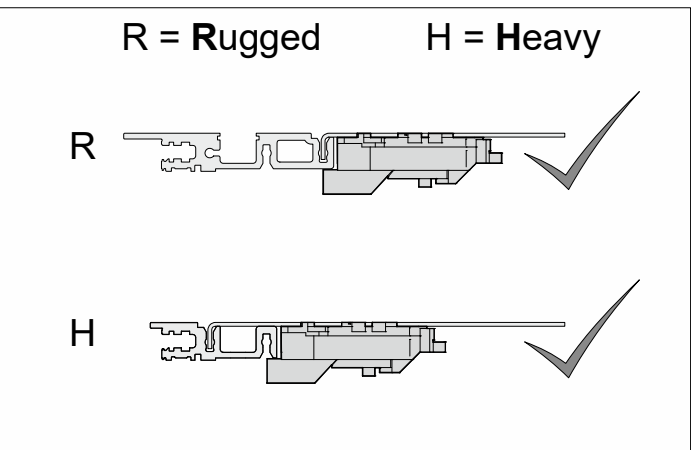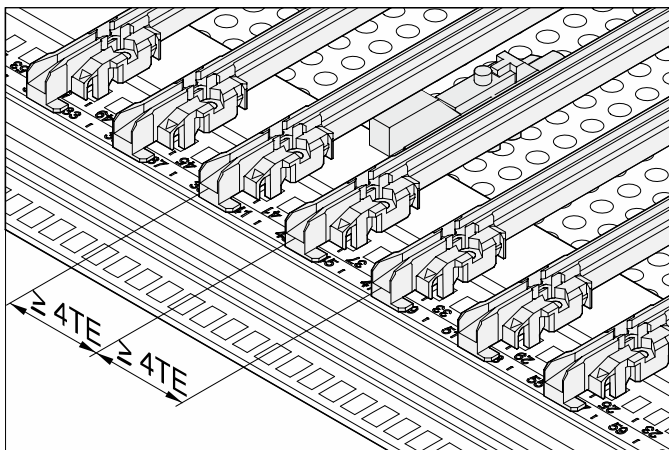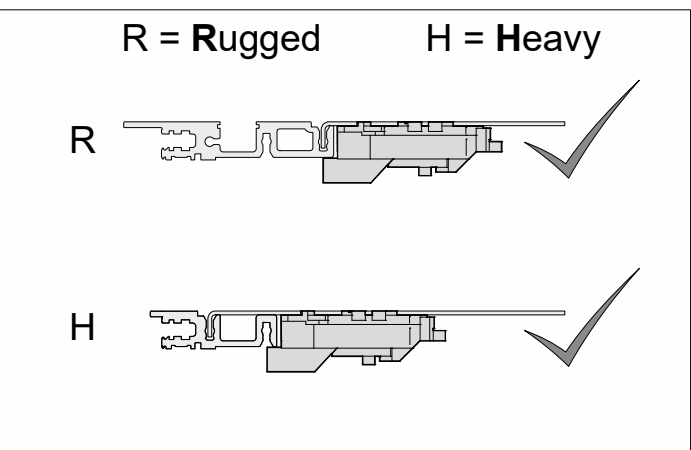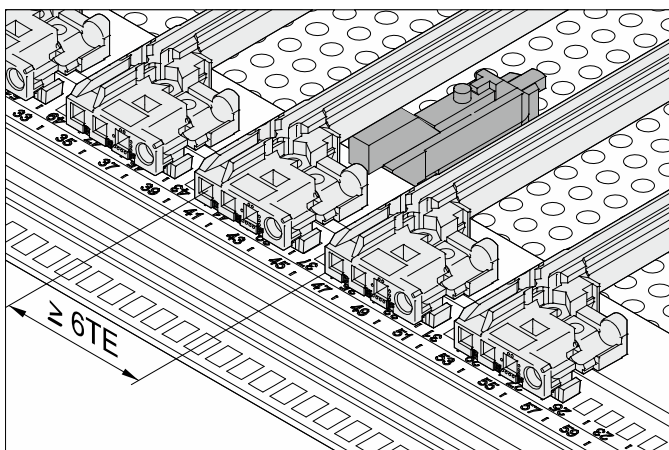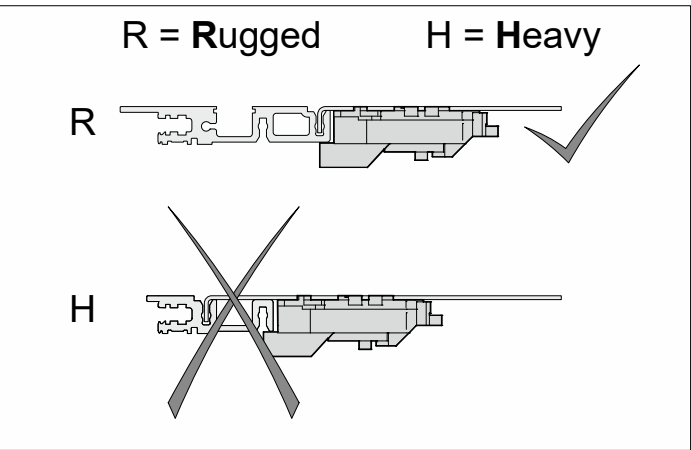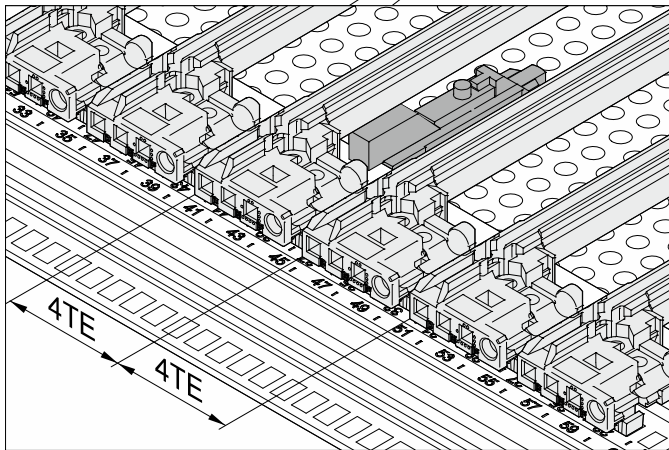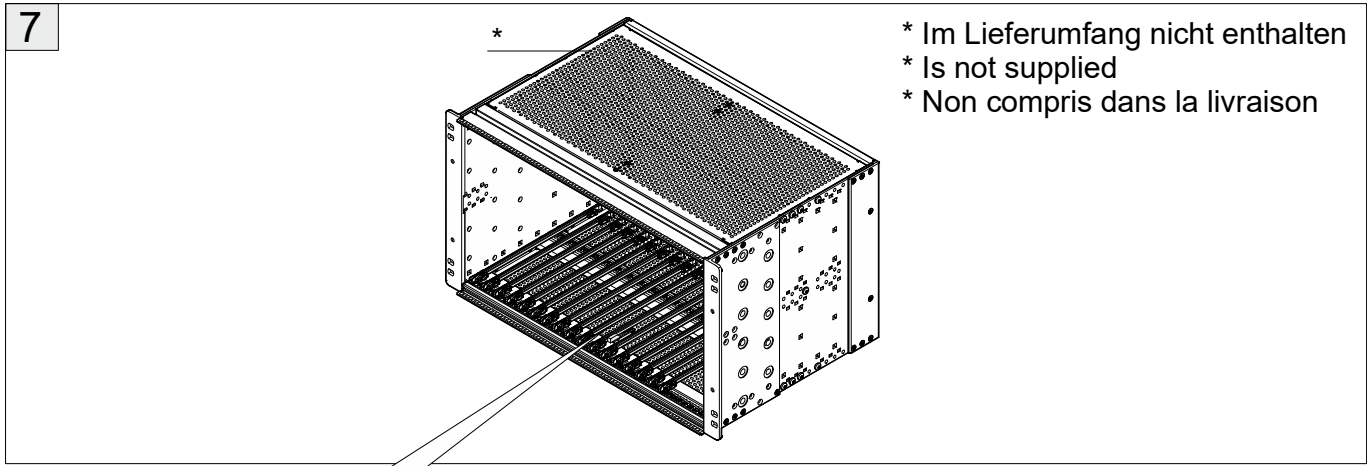

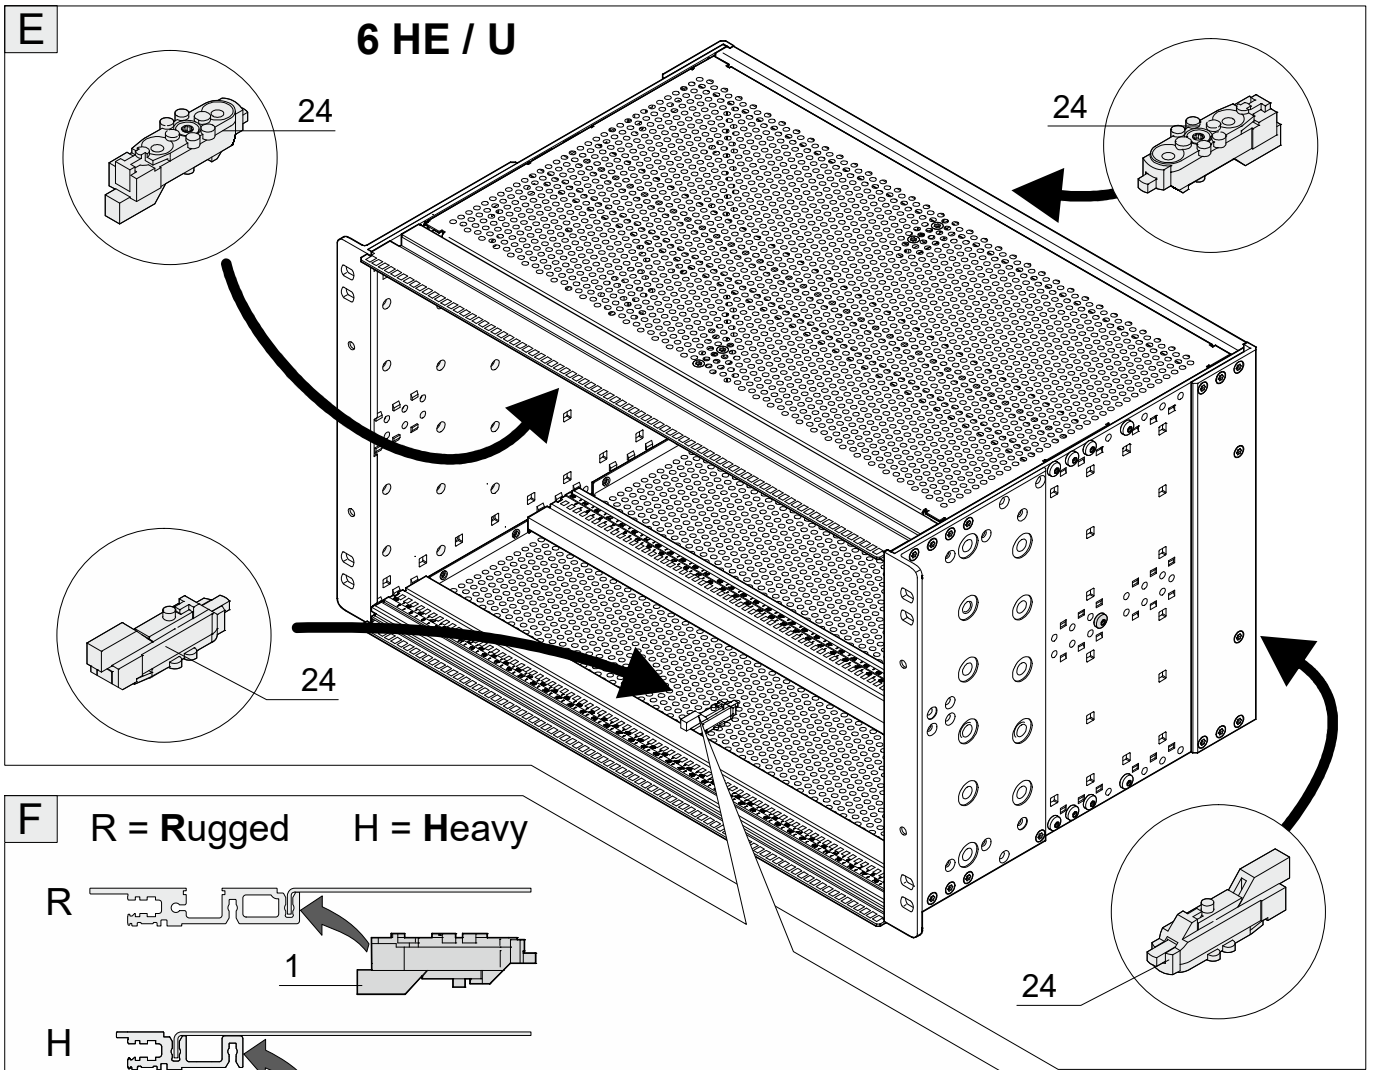

F R = Rugged H = Heavy

