

 
## Seismic Restraints Flange Clamps for Conduit and Threaded Rods




Flange Thicknes (in [mm])	Conduit Size (in [mm])
1/0"[2] 1/4"[0]	1/2" [13] - 3/4" [19]
1/0 [3] - 1/4 [0]	3/4" [19] - 1" [25]
E / 1 / " [ 0 ] 1 / 0 " [ 1 / 1 ]	1/2" [13] - 3/4" [19]
3/10 [0] - 1/2 [14]	3/4" [19] - 1" [25]
0/1/" [14] 2/4" [20]	1/2" [13] - 3/4" [19]
7/10 [14] - 3/4 [20]	3/4" [19] - 1" [25]
4	(in [mm])  1 1/8" [3] - 1/4" [8]  5/16" [8] - 1/2" [14]

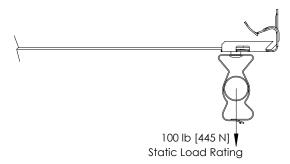

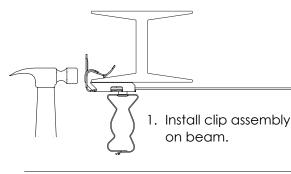



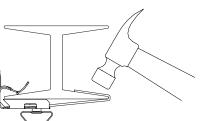


3. Hammer strap tight to top of flange.

## Conduit Clip Installation

- Select the appropriate Latching Hole from Sizing Chart.
- Fit Conduit into Conduit Clip. 2. For the 16M, compress the Bottom Gripping Tabs prior to installing the 3/4" RIGID and the 1" RIGID Conduit.
- By Hand or with Channel Lock Pliers, snap Locking Tab 3. into the desired Latching Hole.

Global Part	Local Part	Sizing Chart		
Number	Number	Latch "A"	Latch "B"	
6M	170790	3/8" EMT IMC & RIGID	N/A	
812M	177130	3/4" EMT IMC & RIGID	1/2" EMT IMC & RIGID	
16M	170100	1" EMT IMC & RIGID	3/4" EMT IMC & RIGID	
20M	170110	1-1/4" RIGID	1-1/4" EMT & IMC	
24M	170120	1-1/2" RIGID	1-1/2" EMT & IMC	
32M	170130	2" RIGID	2" EMT & IMC	

For Thread Impression Conduit Clip's, select the appropriate Latching Hole from the Sizing Chart based on the Conduit Size being used

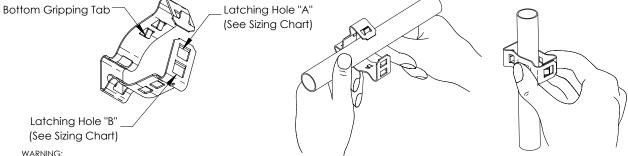

- RNING:

  Nent products shall be installed and used only as indicated in nVent product instruction sheets and training materials. Instruction sheets are available at <a href="https://www.nVent.com">www.nVent.com</a> and from your nVent customer service representative.

  NVent products must never be used for a purpose other than the purpose for which they were designed or in a manner that exceeds specified load ratings. All instructions must be completely followed to ensure proper and safe installation and performance.

  Improper installation, misuse, misapplication or other failure to completely follow nVent's instructions and warnings may cause product malfunction, properly damage, serious bodily injury and/or death, and void your warranty.

  Products that are manufactured using spring steel components shall be used only in a non-corrosive indoor environment.

  All pipe supports, hangers, intermediate components and structural attachments must ONLY be used as described herein and are NEVER to be used for any other purpose.

NOTE: All load ratings are for static conditions and do not account for dynamic loading such as wind, water or seismic loads, unless otherwise noted.

The customer is responsible for:

a. Conformance to all governing codes.
b. The integrity of structures to which the products are attached, including their capability of safely accepting the loads imposed, as evaluated by a qualified

engineer.

c. Using appropriate industry standard hardware as noted above.

CFS227\_C

All governing codes and regulations and those required by the job site must be observed.

Always use appropriate safety equipment such as eye protection, hard hat, and gloves as appropriate to the application.



nVent, nVent CADDY, nVent ERICO Cadweld, nVent ERICO Critec, nVent ERICO, nVent ERIFLEX, and nVent LENTON are owned by nVent or its global affiliates. All other trademarks are the property of their respective owners. nVent reserves the

