

## Instruction sheet for TD-160A & TD-160AL (563200 / 563990)



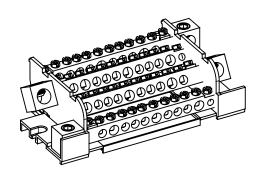

TD Four Pole Distribution Block, 160A TD-160A (563200)

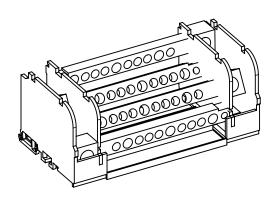

TD Four Pole Distribution Block, 160A TD-160AL (563990)



			563990	563200	Hole Ø		J
⇒	10 - 50mm²	10 - 50mm²	x1	x1	12mm		8 - 10 N.m
<b>⇔</b>	10 - 35mm²	10 - 25mm²	х3	х3	8,5mm		2 - 3 N.m
<b>⇔</b>	2,5 - 16mm²	1,5 - 16mm²	x8	x7	7mm	$\square$ $\triangle$	2 - 3 N.m
<b>⇔</b>	2,5 - 6mm²	1,5 - 6mm²	-	x1	5,5mm		2 - 3 N.m

1. Tighten screws of unused galleries to torque of 0,5 - 1 N.m.

- RNING:

  Nent products shall be installed and used only as indicated in nVent product instruction sheets and training materials. Instruction sheets are available at <a href="https://www.nVent.com">www.nVent.com</a> and from your nVent customer service representative.

  NVent products must never be used for a purpose ofter than the purpose for which they were designed or in a manner that exceeds specified load ratings. All instructions must be completely followed to ensure proper and safe installation and performance.

  Improper installation, misuse, misapplication or other failure to completely follow nVent's instructions and warnings may cause product malfunction, property demands a critical backly and load death and ward to sure warranty. damage, serious bodily injury and/or death, and void your warranty.

1 OF 1

www.nVent.com

All governing codes and regulations and those required by the job site must be observed.

Always use appropriate safety equipment such as eye protection, hard hat, and gloves as appropriate to the application.

nVent, nVent CADDY, nVent ERICO Cadweld, nVent ERICO Critec, nVent ERICO, nVent ERIFLEX, and nVent LENTON are owned by nVent or its global affiliates. All other trademarks are the property of their respective owners. nVent reserves the right to change specifications without prior notice. TECHNICAL SUPPORT



