



| Catalog Number | Mounting Dimensions |        |         |        |
|----------------|---------------------|--------|---------|--------|
|                | G (in.)             | G (mm) | H (in.) | H (mm) |
| EXE12126SS61   | 13.25               | 337    | 9.50    | 241    |
| EXE12128SS61   | 13.25               | 337    | 9.50    | 241    |
| EXE16126SS61   | 17.25               | 438    | 6.00    | 152    |
| EXE16128SS61   | 17.25               | 438    | 6.00    | 152    |
| EXE16166SS61   | 17.25               | 438    | 10.00   | 254    |
| EXE16168SS61   | 17.25               | 438    | 10.00   | 254    |
| EXE20166SS61   | 21.25               | 540    | 10.00   | 254    |
| EXE20168SS61   | 21.25               | 540    | 10.00   | 254    |
| EXE20208SS61   | 21.25               | 540    | 14.00   | 356    |
| EXE24208SS61   | 25.25               | 641    | 14.00   | 356    |
| EXE24248SS61   | 25.25               | 641    | 18.00   | 457    |
| EXE242412SS61  | 25.25               | 641    | 18.00   | 457    |
| EXE30208SS61   | 31.25               | 794    | 14.00   | 356    |
| EXE30248SS61   | 31.25               | 794    | 18.00   | 457    |
| EXE303012SS61  | 31.25               | 794    | 24.00   | 610    |
| EXE36248SS61   | 31.25               | 946    | 18.00   | 457    |

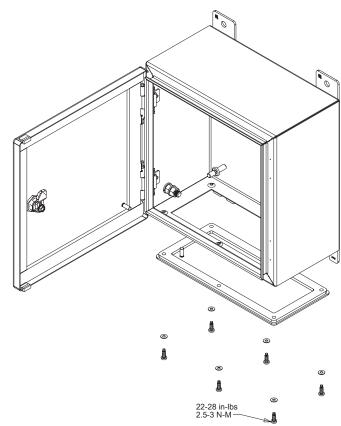

Note: use of anti-seize compound will assist installation and help prevent galling

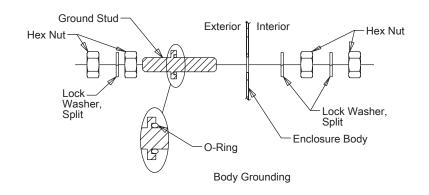

## **NOTES:**

**Industry Standards:** ATEX Directive 2014/34/EU **ATEX** Sira 09ATEX3224U 2813 (Ex) II 2 G D Ex eb IIC Gb Ex tb IIIC Db IP 66 EN 60079-0 EN 60079-7 EN 60079-31 **IECEx** IECEx SIR 09.0099U Ex eb IIC Gb Ex tb IIIC Db IP 66 IEC 60079-0 IEC 60079-7 IEC 60079-31

UL 508A Listed; Type 4, 4X, 12; File No. E61997 cUL C22.2 No. 94 Listed; Type 4, 4X, 12; File No. E61997 NEMA/EEMAC Type 4, 4X, 12 IEC 60529, IP66 Service temperature in ATEX and IECEx for standard polyurethane gasket is -40C to 70C.

- 1. Visually inspect gaskets, locks and screws after each opening of covers or removing of gland plates.
- 2. Internal body grounding terminal shall be used for the equipment grounding connection and the external is for supplementary bonding connection where local codes or authorities permit or require such connection.
- 3. Earth grounding must be connected by lug on end of the cable. (A UL listed ring connector is required for Class I, Zone 1 applications).
- 4. The number and arrangement of terminal blocks or other wiring terminals is to be determined in the end-use investigation.
- 5. Enclosure openings must be filled by equipment marked with the same certification as the enclosure.

General Guide to Cable Entry Positions into Cable Gland or Enclosure Side:

- a. Maximum hole diameter is major thread diameter of cable gland plus 0.7mm (.03")
- b. Minimum material to be maintained between holes:

Glands M16 through M32: 15mm (0.59")

Glands M35 through M75: 20mm (0.79")

Glands M75 through M100: 35mm (1.38")

Prior to making holes in the enclosure wall or gland plate, verify that the selected gland will not have interference with the sealing washer and lock nut.

- c. Hole location must be located so sealing washer and locknut do not interfere with gasket.
- d. Select a gland for the correct application with the proper certifications. Make certain all cable gland accessories are included for through hole installation. Additional accessories may include locknut and sealing washers.
- e. Install the gland in accordance to the manufacturers instructions.
- 6. Painted Enclosures require these additional instructions:

For fixed installations minimize the risk of electrostatic discharge of painted enclosures.

- a. Remove the explosive atmosphere prior to contact or cleaning
- b. Make certain enclosure is grounded and external enclosure ground connection is made; all conducting parts should be properly bonded.

## WARNING: Potential electrostatic charging hazard.

- c. For painted surfaces, avoid friction with surface, only clean with wet cloth moistened with de-ionized water.
- d. Avoid contact in low relative humidity environments. Increase environment humidity where possible.
- 7. Warning for end product assembly: Do not open when energized.

Rev. F © 2020 Hoffman Enclosures Inc. PH 763 422 2211 • nVent.com/H0FFMAN P/N 89084021