




## M52 SIDE MOUNTING ADAPTER PLATE - BOLT MOUNT INSTALLATION INSTRUCTIONS

- 1) Apply gasket kit (52-1000-50) to rear of unit. Be sure the holes in the gasket align with the holes (PEMS) in unit. This gasket will be "sandwiched" between the unit and adapter plate.
- 2) Apply adapter plate (52-2300-00) to unit with 16 bolts and 2 screws.

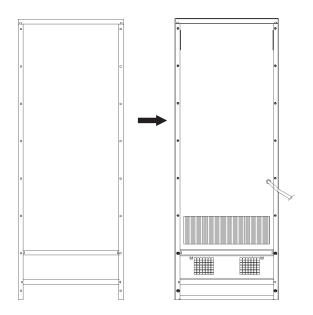

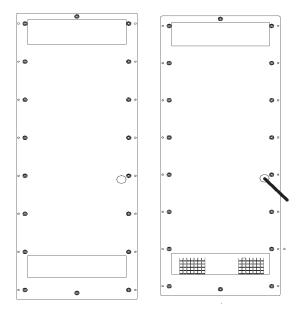

3) Apply gasket kit (52-6061-00) to adapter plate (52-2300-00).

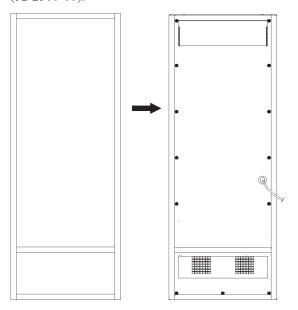

4) Mount unit with adapter plate to enclosure.

Rev. C © 2018 nVent P/N 10-1008-138 87976451