



OICE

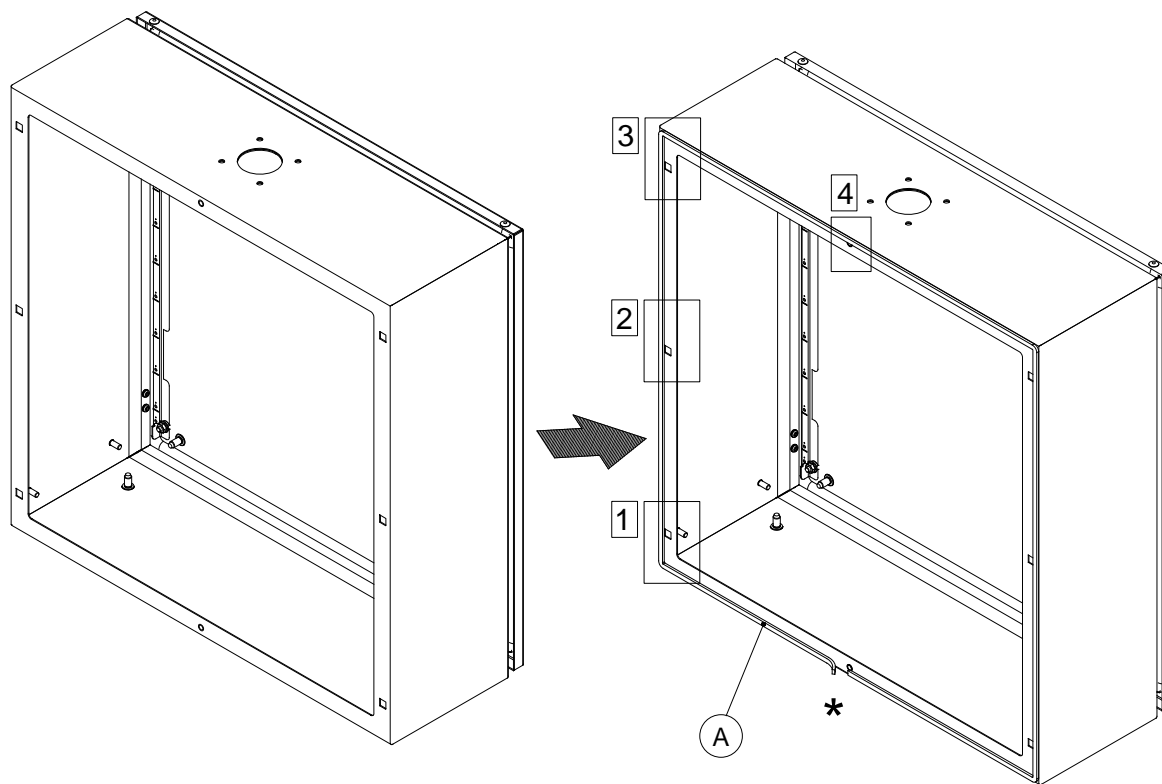





Ref.	Pic.	Qty.
A		1
B		4/6
C		4/6
D		4/6/8
E		2
F		2
G		4
H		2
I		2
J		2

**



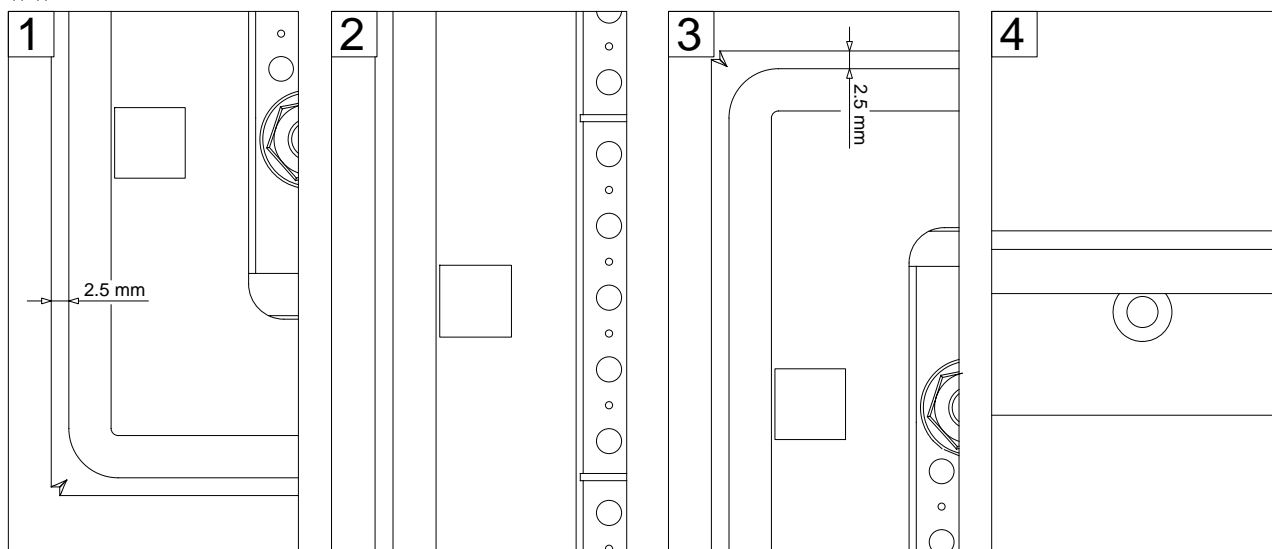


*Start applying the gasket from the indicated zone with the asterisk.


**Do not cover the square holes with the gasket.

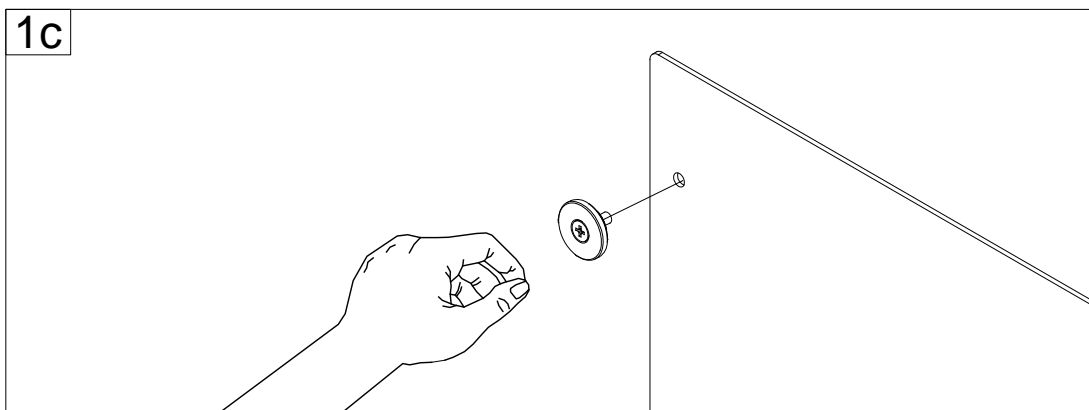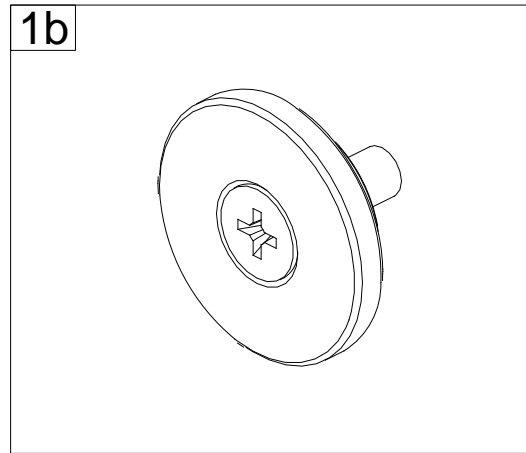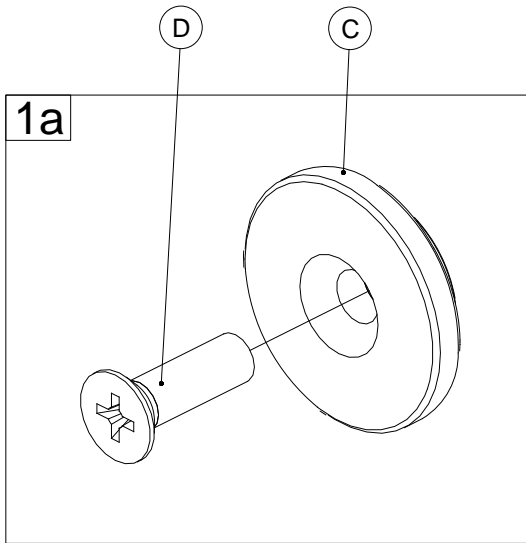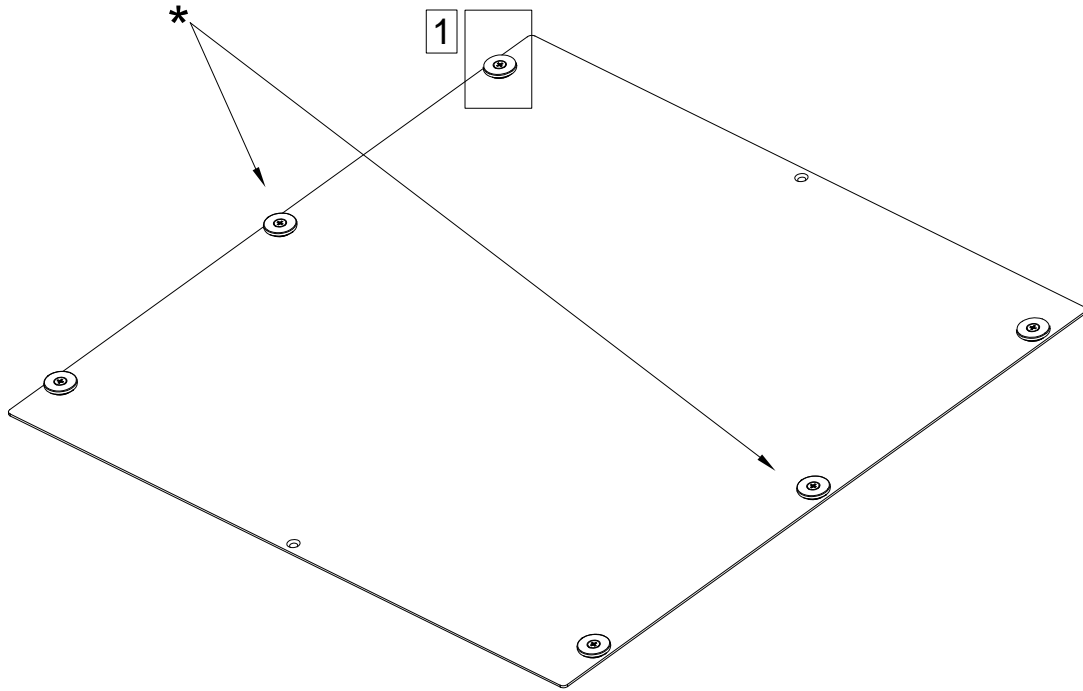


*Only for 500 (H) and above.

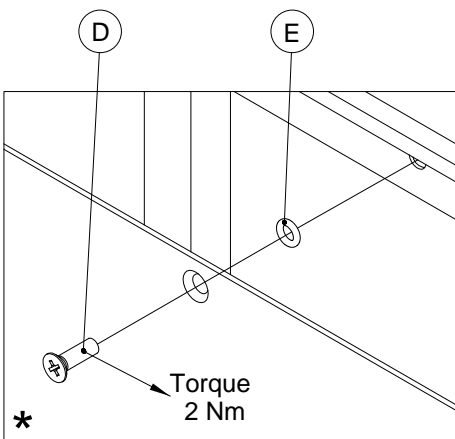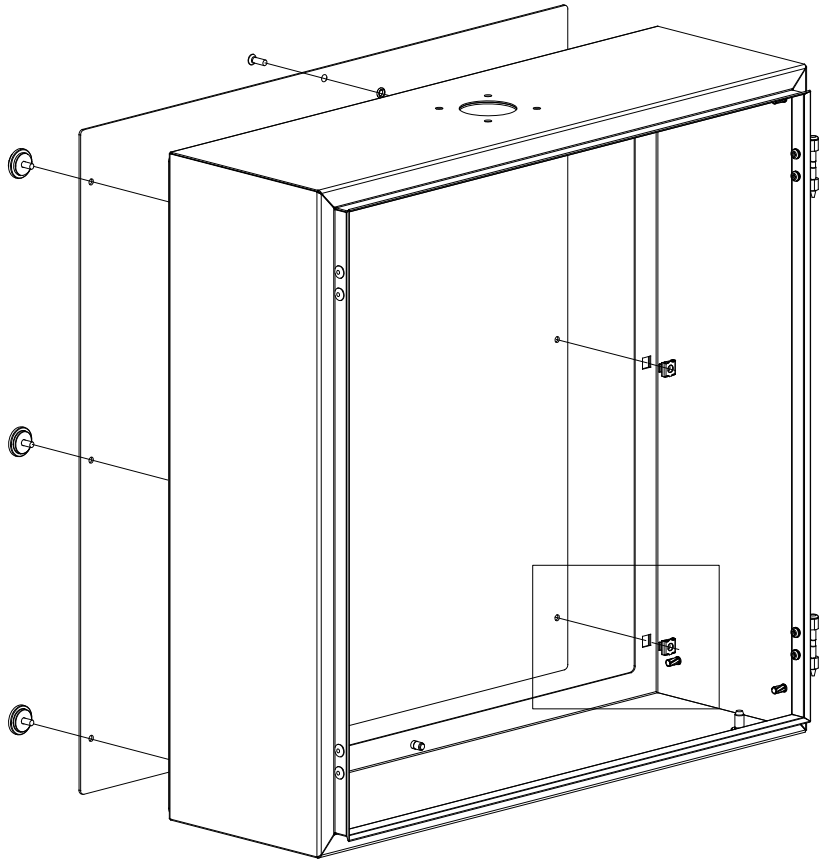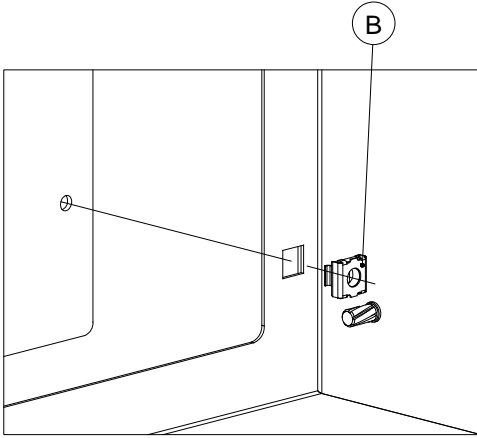

Torque
2 Nm

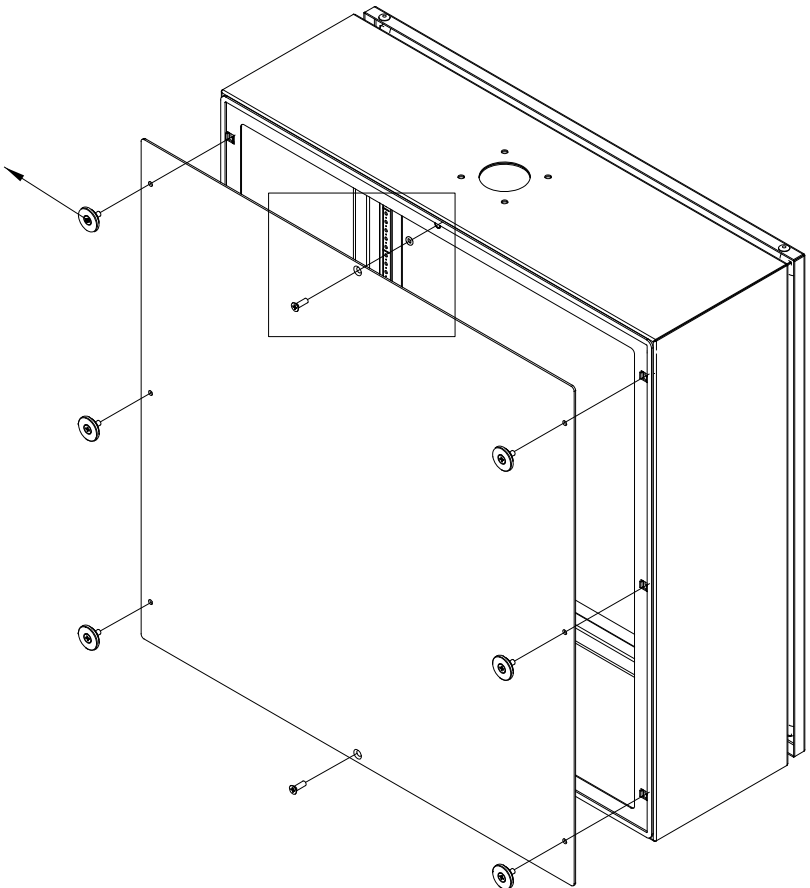

*Only for 400 (W) and above.

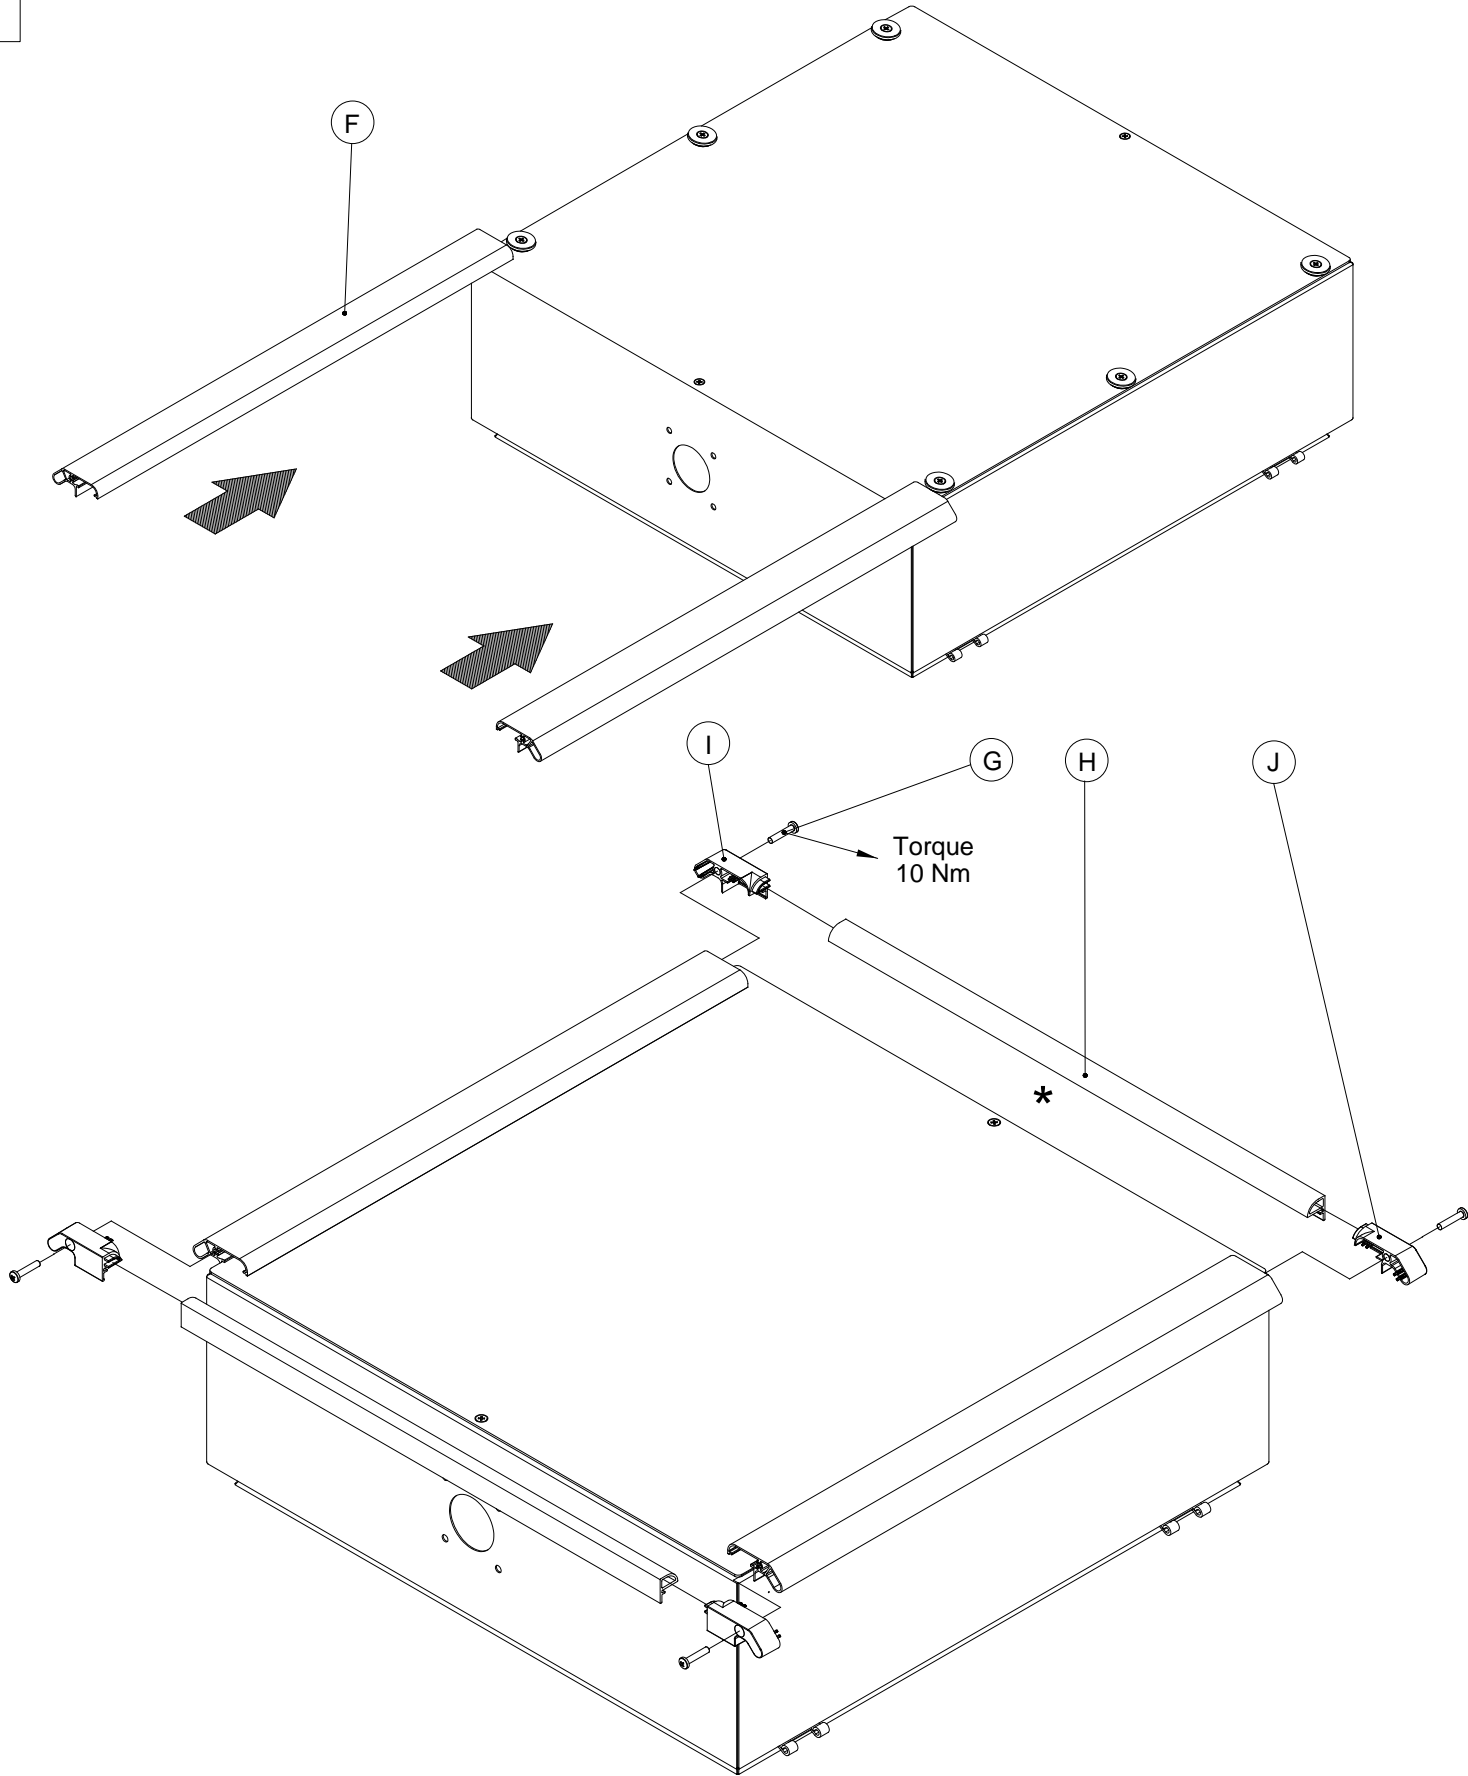



*Mount first the horizontal profile (H) with the caps (I), then fix to the aluminium profiles.

BMP / BPP-BDR





*Accessories available BMP

Ref.	Pic.	Qty.
A		4/6

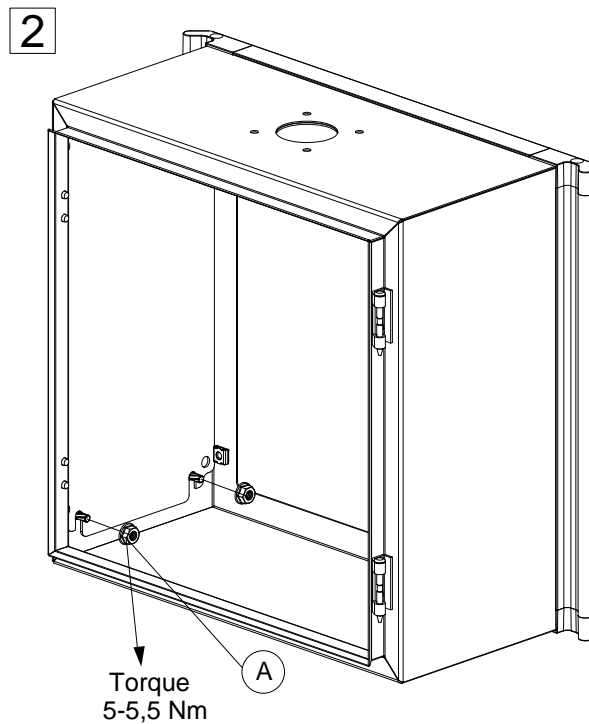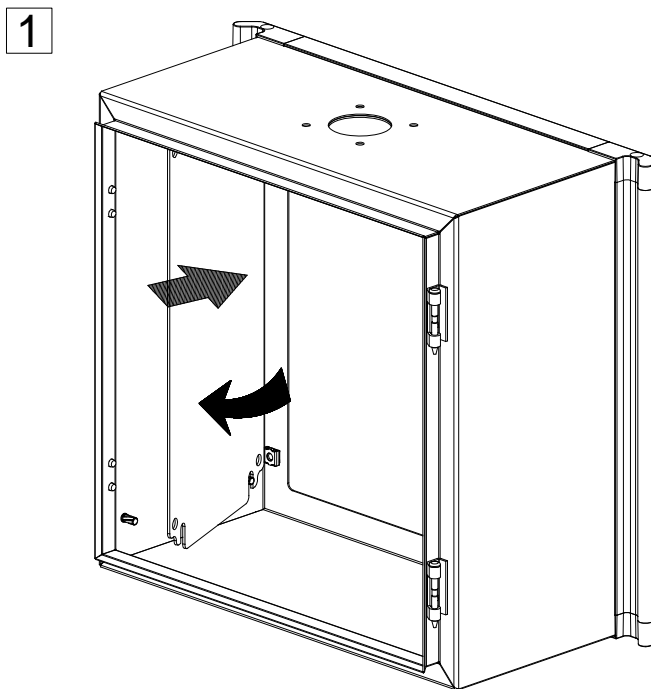

*Accessories available BPP - BDR

Ref.	Pic.	Qty.
A		4/6
B	ST4,8x9,5 	2

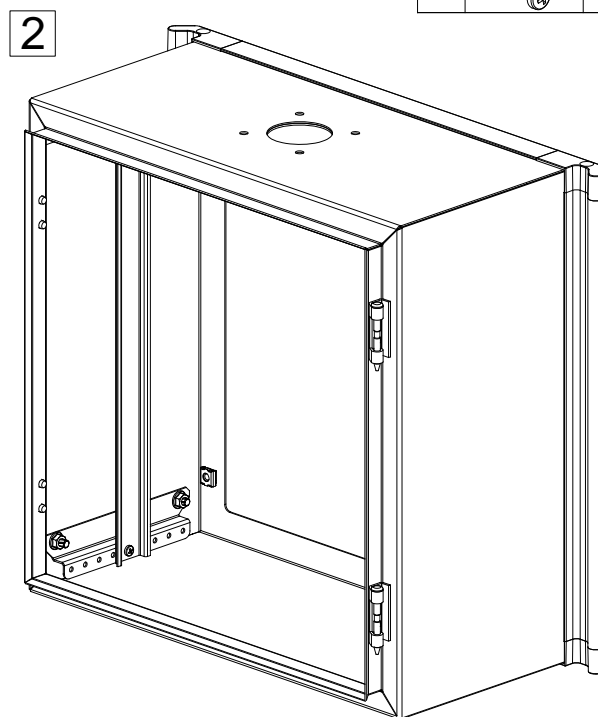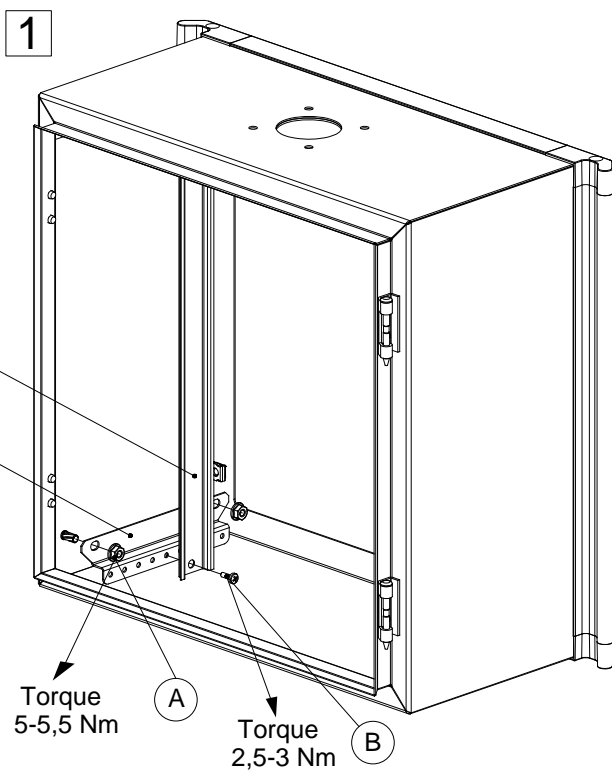

BMP



Ref.	Pic.	Qty.
A		4

*Accessories available

