



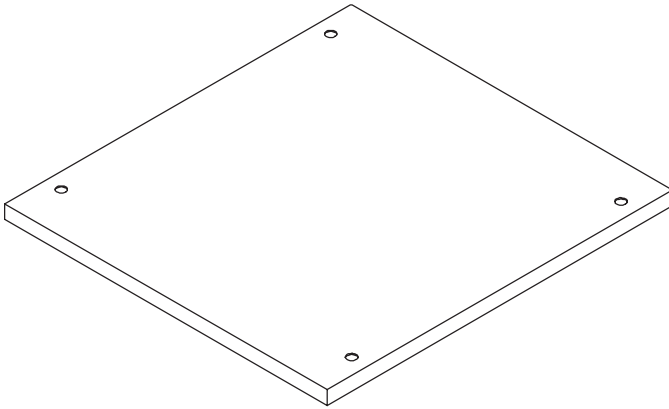









**HOFFMAN**


PROLINE®

Pagoda Top Kit  
Pagoda Oberer Installationssatz  
Kit Supérieur De Pagoda  
Kit Superior De Pagoda



<p>1</p>  <p>(1x)</p>	<p>2 M6-1x16mm</p>  <p>(4x)</p>	<p>3</p>  <p>(4x)</p>	<p>4</p>  <p>(1x)</p>
<p>5</p>  <p>(1x)</p>	<p>6 M6</p>  <p>(8x)</p>	<p>7 M6-1</p>  <p>(4x)</p>	<p>8 M6-1x8mm</p>  <p>(4x)</p>

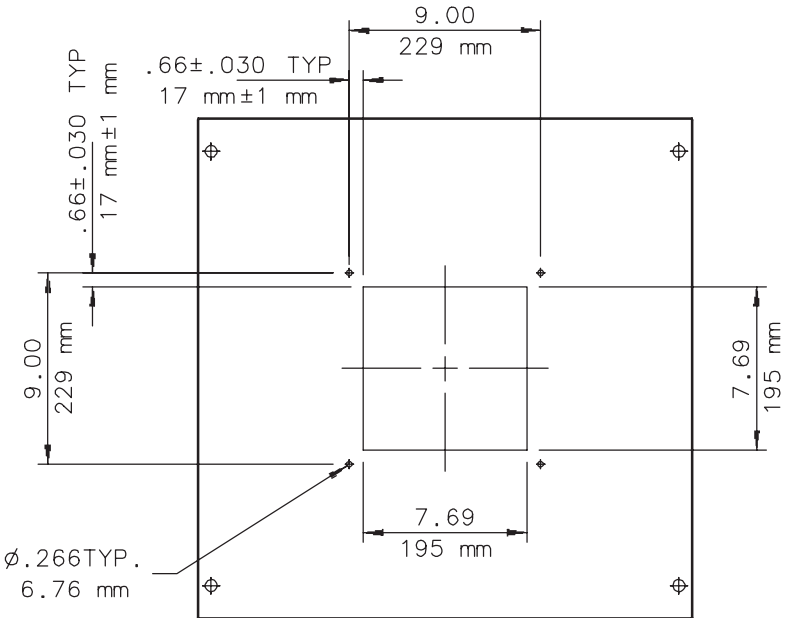

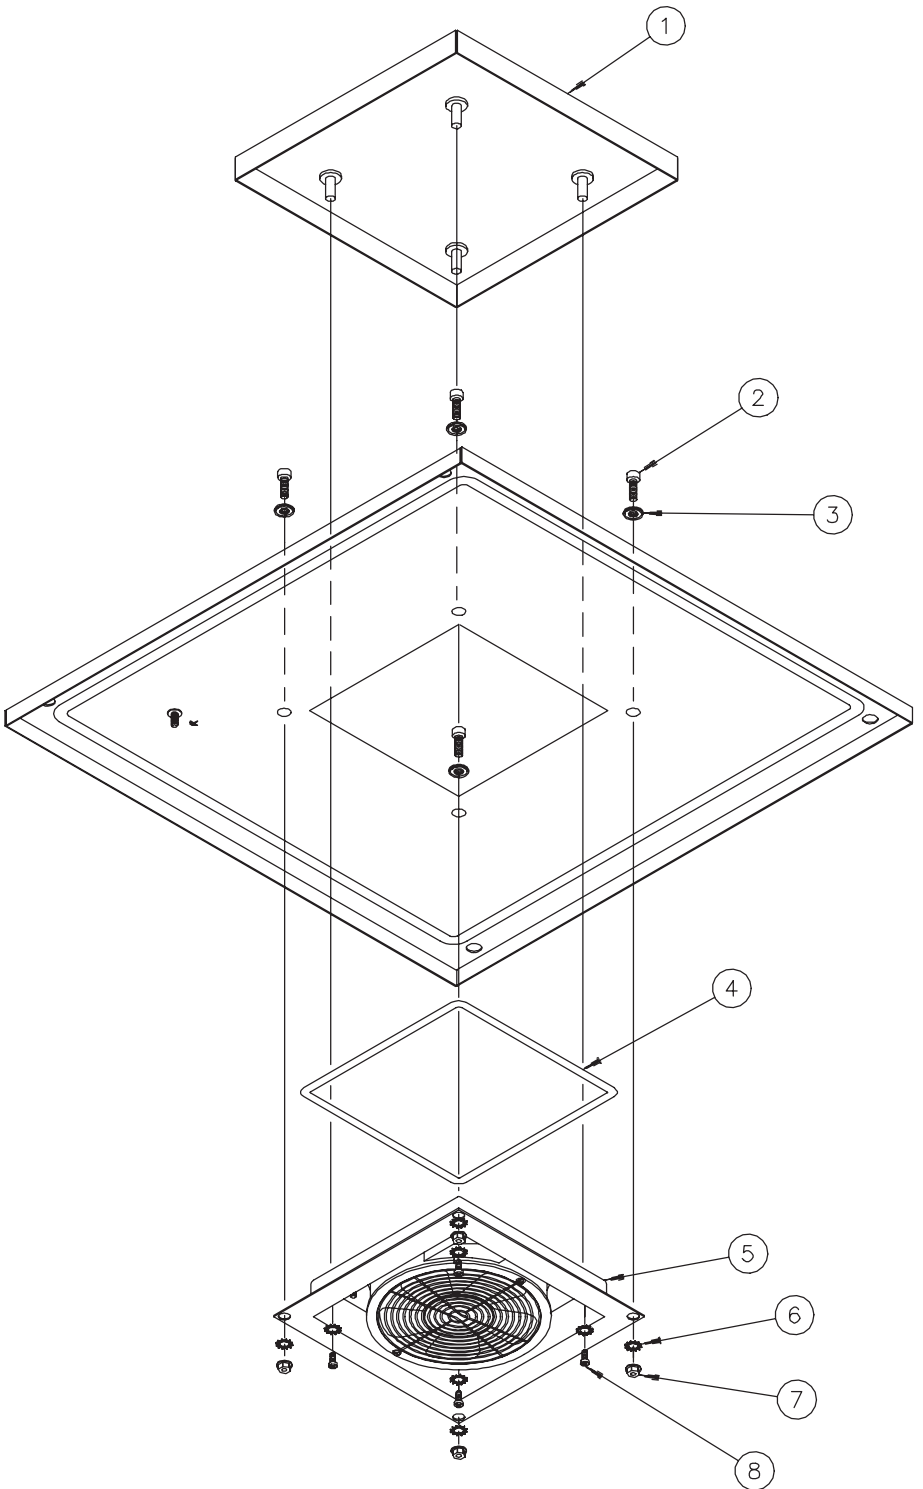



**HOFFMAN**