


Heavy Duty Panel Supports

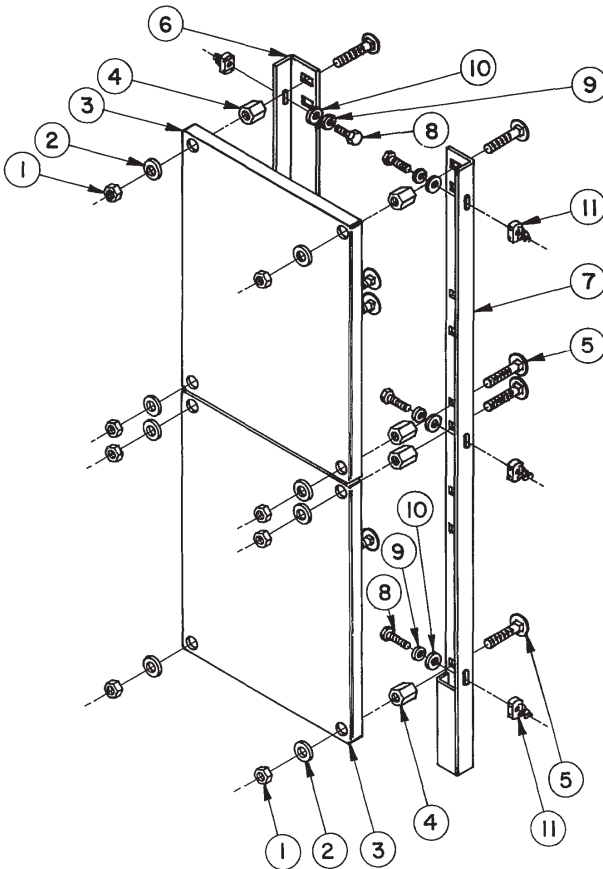

INSTALLATION INSTRUCTION:

1. Attach heavy duty panel supports (items 6 and 7) to mounting channels inside enclosure using clamping nuts, washers, lockwashers, and 5/16–18x1 hex head screws (items 8,9,10, and 11). Adjust to desired depth.
2. Attach standoff nuts and carriage bolts (items 4 and 5) tightly to panel support angles where needed. Use four per half panel and six per full panel.
3. Install panels using hex nuts and washers supplied.



PARTS LIST

ITEM	PART NAME	QTY.
1	HEX NUT, 3/8	—
2	WASHER, 3/8	—
3	PANEL	—
4	STANDOFF NUT	—
5	CARRIAGE BOLT	—
6	LEFT SUPPORT	1
7	RIGHT SUPPORT	1
8	SCREW, HX. HD.	—
9	LOCKWASHER	—
10	WASHER, 5/16	—
11	CLAMPING NUT	—

NOTE: ITEMS 1, 2, 4, 5, 8, 9, 10 AND 11 ARE INCLUDED WITH PANEL (ITEM 3).